XC Series Owner's Handbook

BARINA
& COMBO

HOLDEN

www.holden.com.au

Owner's Name ....
Address ....
Town ....
State..........................Postcode ....

Model Name ....
Reg. No..........................Eng. No. ....
Odometer Reading ....
Date of Purchase ....

(17 character I.S.O.V.I.N.) Vehicle Identification Number

Vehicle Identification Certificate

Selling Retailer's
Stamp and Signature ....

Holden Ltd. ABN 84 006 893 232 (hereinafter Holden).

Change of name, address or ownership

In the event of a Safety Recall, or for various reasons, Holden may need to contact you as the owner of this vehicle. Also, if less than three years old, this vehicle will qualify for Roadside Assistance, refer Chapter 9. If you have recently changed your address, or name, or purchased this vehicle second-hand, please help us to help you by taking a few minutes to fill in and mail the form on the third page of this handbook. For information about Holden's privacy policy, please visit Holden's website at *www.holden.com.au* .

© 2002 Holden Ltd. Reproduction in whole or part is prohibited without written approval from Holden Ltd. ABN 84 006 893 232.

Part No. 92116139
June 2002
(Barina and Combo, print 1)

CONTENTS

Dashboard layout, switches, horn, instruments, wipers and washers, exterior lights, ashtray and lighter, heater and air conditioning, clock, bonnet, tilt steering.	*Dashboard* **1**
Keys, door locks, child safety door locks, dead locks.	*Locks* **2**
Seats, seat belts, child restraints, mirrors, windows, park brake, interior lights.	*Know your car* **3**
Engine starting, running in, use of the transmission, driving precautions, anti-lock braking, traction control.	*Driving* **4**
Exhaust caution, petrol filling, emission control, reducing fuel consumption.	*Fuel* **5**
Accidents, first aid, flat tyre, engine overheating, flat battery, air bag, towing the car, changing fuses and bulbs.	*Emergencies* **6**
Checking fluids and tyre pressures.	*Weekly checks* **7**
Engine specs, transmission specs, dimensions, identification plates.	*Specifications* **8**
Warranty, Roadside Assistance, Holden Retailers, Customer Assistance.	*After sales* **9**
Loading information, towing, towing precautions.	*Towing* **10**
Interior cleaning, exterior cleaning, list of cleaning materials.	*Cleaning* **11**
Maintenance schedule, labour times, service coupons.	*Servicing* **12**
	Index

We thank you for choosing Holden and want to assure you of our continuing interest in your motoring pleasure and satisfaction and compliment you on your choice.

This handbook applies to all the current Barina and Combo models. Therefore, due to different models and options, you may find reference in this Handbook to some equipment not installed in your car.

Please note that all information, illustrations and specifications in this Handbook are based on the latest production information available at the time of printing. Holden reserves the right to make changes at any time without notice and without incurring any obligation.

CHANGE OF ADDRESS OR OWNERSHIP

Please fill in the form below if you have changed your name, address, bought the vehicle second-hand, or have become the new driver.

Holden requires these details in order to contact the operator in the event of a safety recall and to keep the initial 3 year Roadside Assistance details up to date (refer Chapter 9). For information about Holden's privacy policy, please visit Holden's website at *www.holden.com.au* .

Please mail to the address on the back of this page.

Please tick the appropriate box:

☐ Original Owner ☐ Subsequent Owner

Title: (Mr, Mrs, Miss, Ms, etc.)

First name in full or initials

Surname or Name of Company / Institution / Government Department

Address

Street / box

City / Town

State

Postcode

1st contact phone no

2nd contact phone no

Email address

Vehicle registration number

Holden number (see Chapter 8)

ISOVIN Number (see Chapter 8)

Place in an envelope and mail to:

The Manager - Warranty Administration
Service Department
Holden Limited
Box 548D, G.P.O.
Melbourne
Victoria, 3001

CHANGE OF ADDRESS OR OWNERSHIP

Please fill in the form below if you have changed your name, address, bought the vehicle second-hand, or have become the new driver.

Holden requires these details in order to contact the operator in the event of a safety recall and to keep the initial 3 year Roadside Assistance details up to date (refer Chapter 9). For information about Holden's privacy policy, please visit Holden's website at *www.holden.com.au* .

Please mail to the address on the back of this page.

Please tick the appropriate box:

☐ Original Owner ☐ Subsequent Owner

Title: (Mr, Mrs, Miss, Ms, etc.)

First name in full or initials

Surname or Name of Company / Institution / Government Department

Address

Street / box

City / Town

State

Postcode

1st contact phone no

2nd contact phone no

Email address

Vehicle registration number

Holden number (see Chapter 8)

ISOVIN Number (see Chapter 8)

Place in an envelope and mail to:

The Manager - Warranty Administration
Service Department
Holden Limited
Box 548D, G.P.O.
Melbourne
Victoria, 3001

CHANGE OF ADDRESS OR OWNERSHIP

Please fill in the form below if you have changed your name, address, bought the vehicle second-hand, or have become the new driver.

Holden requires these details in order to contact the operator in the event of a safety recall and to keep the initial 3 year Roadside Assistance details up to date (refer Chapter 9). For information about Holden's privacy policy, please visit Holden's website at *www.holden.com.au* .

Please mail to the address on the back of this page.

Please tick the appropriate box:

☐ Original Owner ☐ Subsequent Owner

Title: (Mr, Mrs, Miss, Ms, etc.)

First name in full or initials

Surname or Name of Company / Institution / Government Department

Address

Street / box

City / Town

State

Postcode

1st contact phone no

2nd contact phone no

Email address

Vehicle registration number

Holden number (see Chapter 8)

ISOVIN Number (see Chapter 8)

Place in an envelope and mail to:

The Manager - Warranty Administration
Service Department
Holden Limited
Box 548D, G.P.O.
Melbourne
Victoria, 3001

CHAPTER 1

Dashboard

The following page illustrates the dashboard, identifying and locating each function; page numbers refer you to each item.

Page

1-2 Dashboard layout
1-3 Tilt steering
1-3 Horn
1-4 Gauges
1-6 Warning / reminder lights
1-8 Wipers and washers
1-9 Exterior lights
1-12 Radio / CD player
1-13 Ventilation and heating
1-16 Air conditioning
1-17 Demisting
1-18 Ashtrays
1-18 Cigarette lighter
1-19 Triple information display
1-20 Bonnet release
1-21 Ignition switch
1-22 Cruise control

LAYOUT

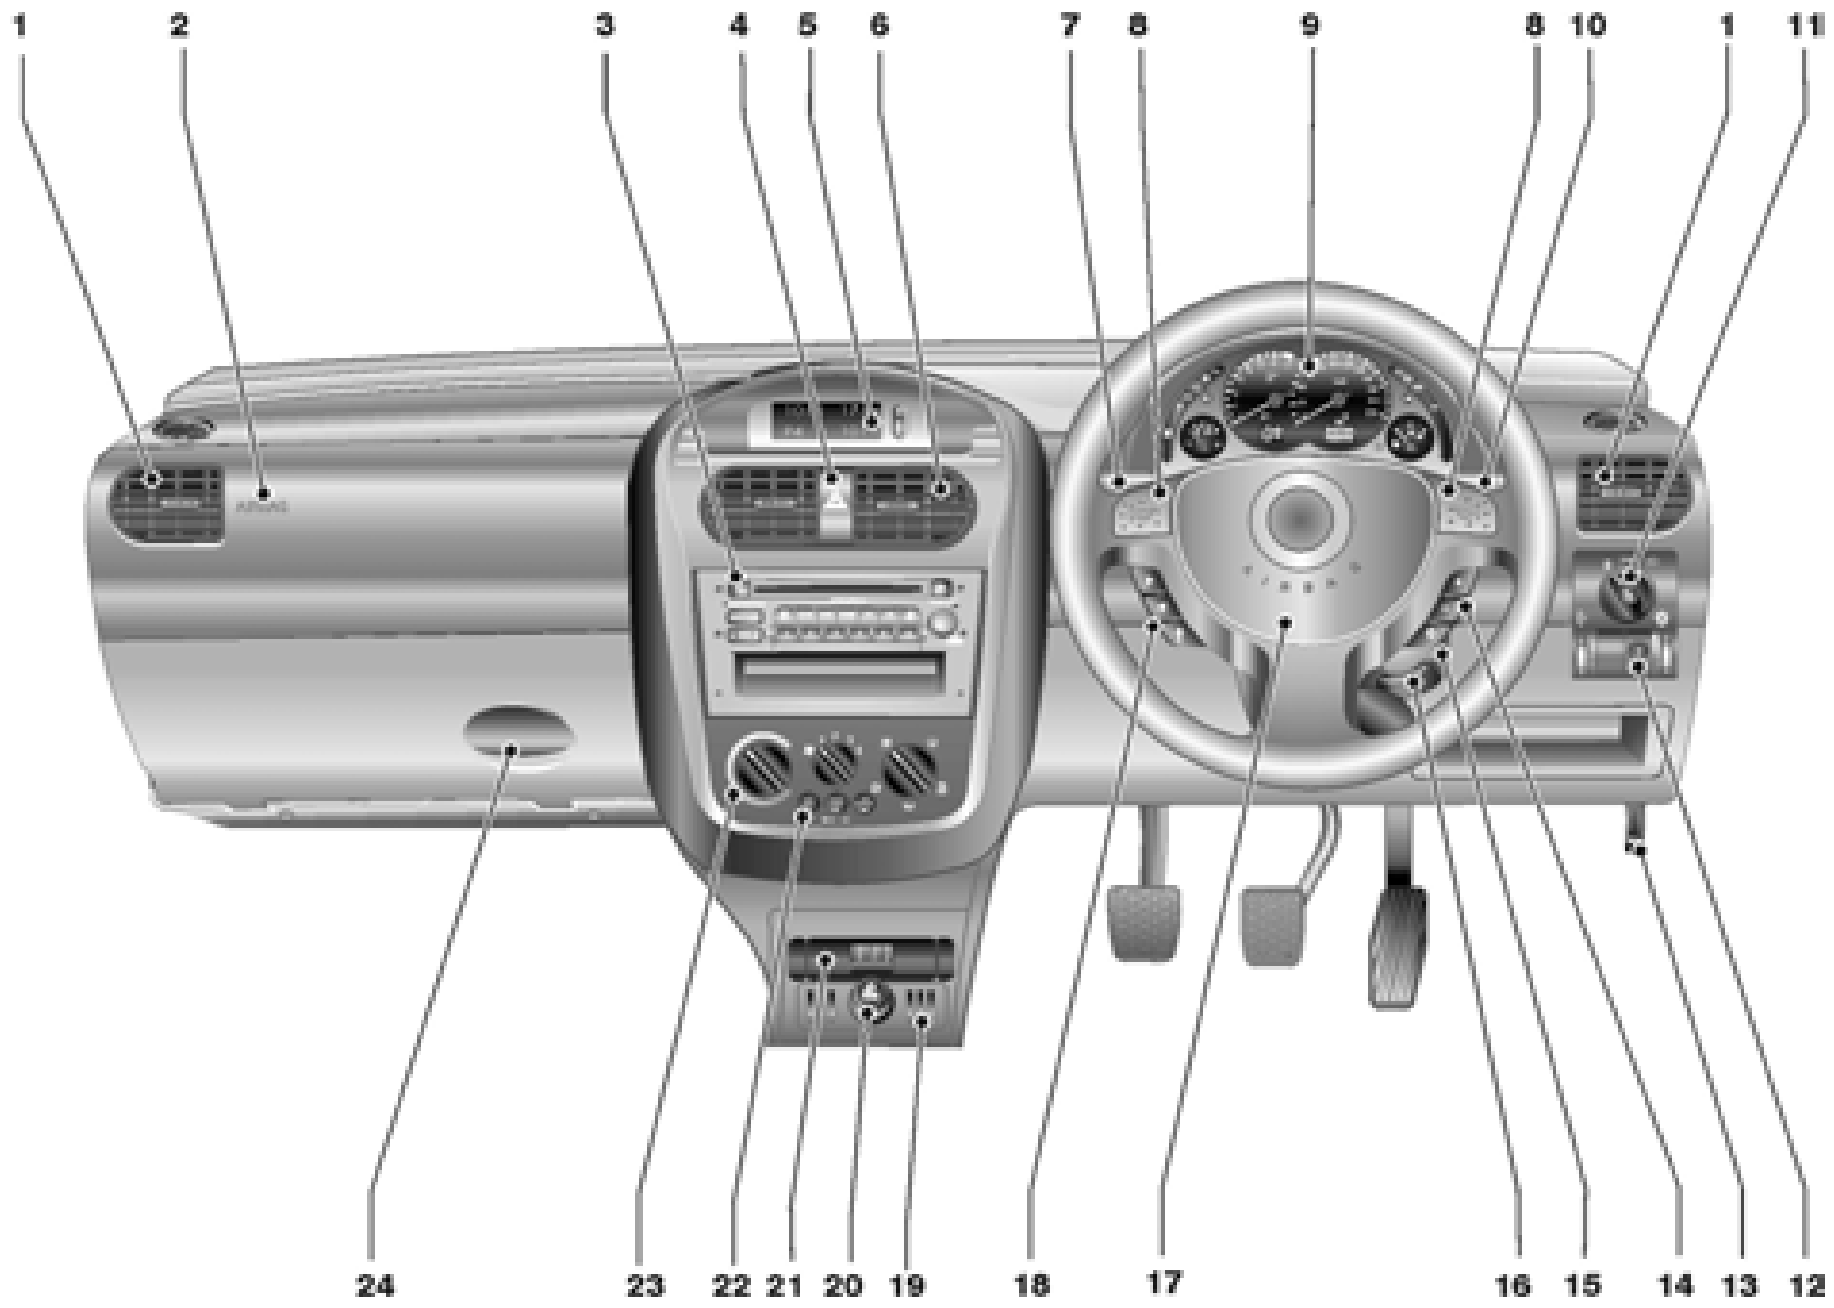

		Page
1	Side vents	1-13
2	Front passenger's air bag	6-16
3	Audio system	1-12
4	Hazard warning flasher	1-11
5	Triple info display	1-19
6	Centre vents	1-13
7	Lever for:	
	High / low beam	1-9
	Turn signals	1-11
	Cruise control (if fitted)	1-22
8	Horn	1-3
9	Gauges	1-4
10	Wipers and washers	1-8
11	Light switch	1-9
12	Panel for:	
	Dimming instruments	1-5
	Headlight range adjust	1-9
	Fog lights	1-10

		Page
13	Bonnet release	1-20
14	Audio switches RHS (if fitted)	1-12
15	Ignition switch	1-21
16	Steering tilt adjustment	1-3
17	Driver's air bag	6-16
18	Audio switches LHS (if fitted)	1-12
19	Coin holder	3-17
20	Cigarette lighter	1-18
21	Ashtray	1-18
22	Switches for:	
	Air intake	1-15
	Air conditioning (if fitted)	1-16
	Rear demister	1-17
23	Heater / ventilation controls	1-13
24	Glovebox	3-17

TILT STEERING AND HORN

Tilt steering (if fitted)

The lock lever is located directly beneath the ignition lock.

Move the lock lever downwards.

Grasp the steering wheel and move as required. It can be moved up or down.

When in position, move the lock lever back up as far as it will go. 'Jiggle' the steering wheel to ensure it has locked securely before driving.

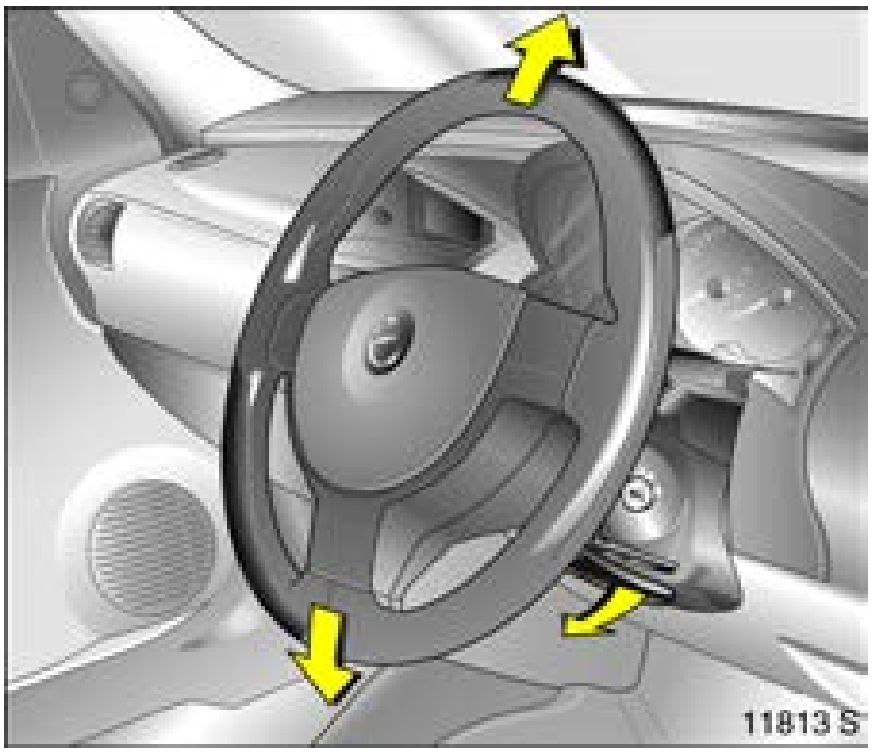

WARNING:

As with all the other driver position controls, do not attempt to adjust the steering wheel while driving.

Horn

The horn is activated by pressing the 📯 symbol, on either side of the steering wheel.

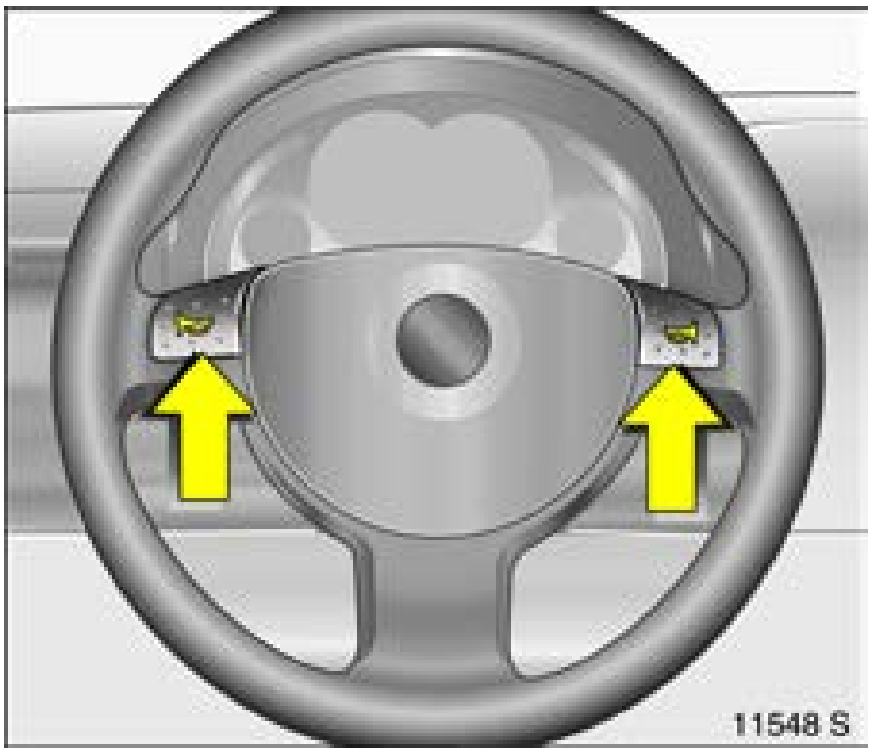

GAUGES

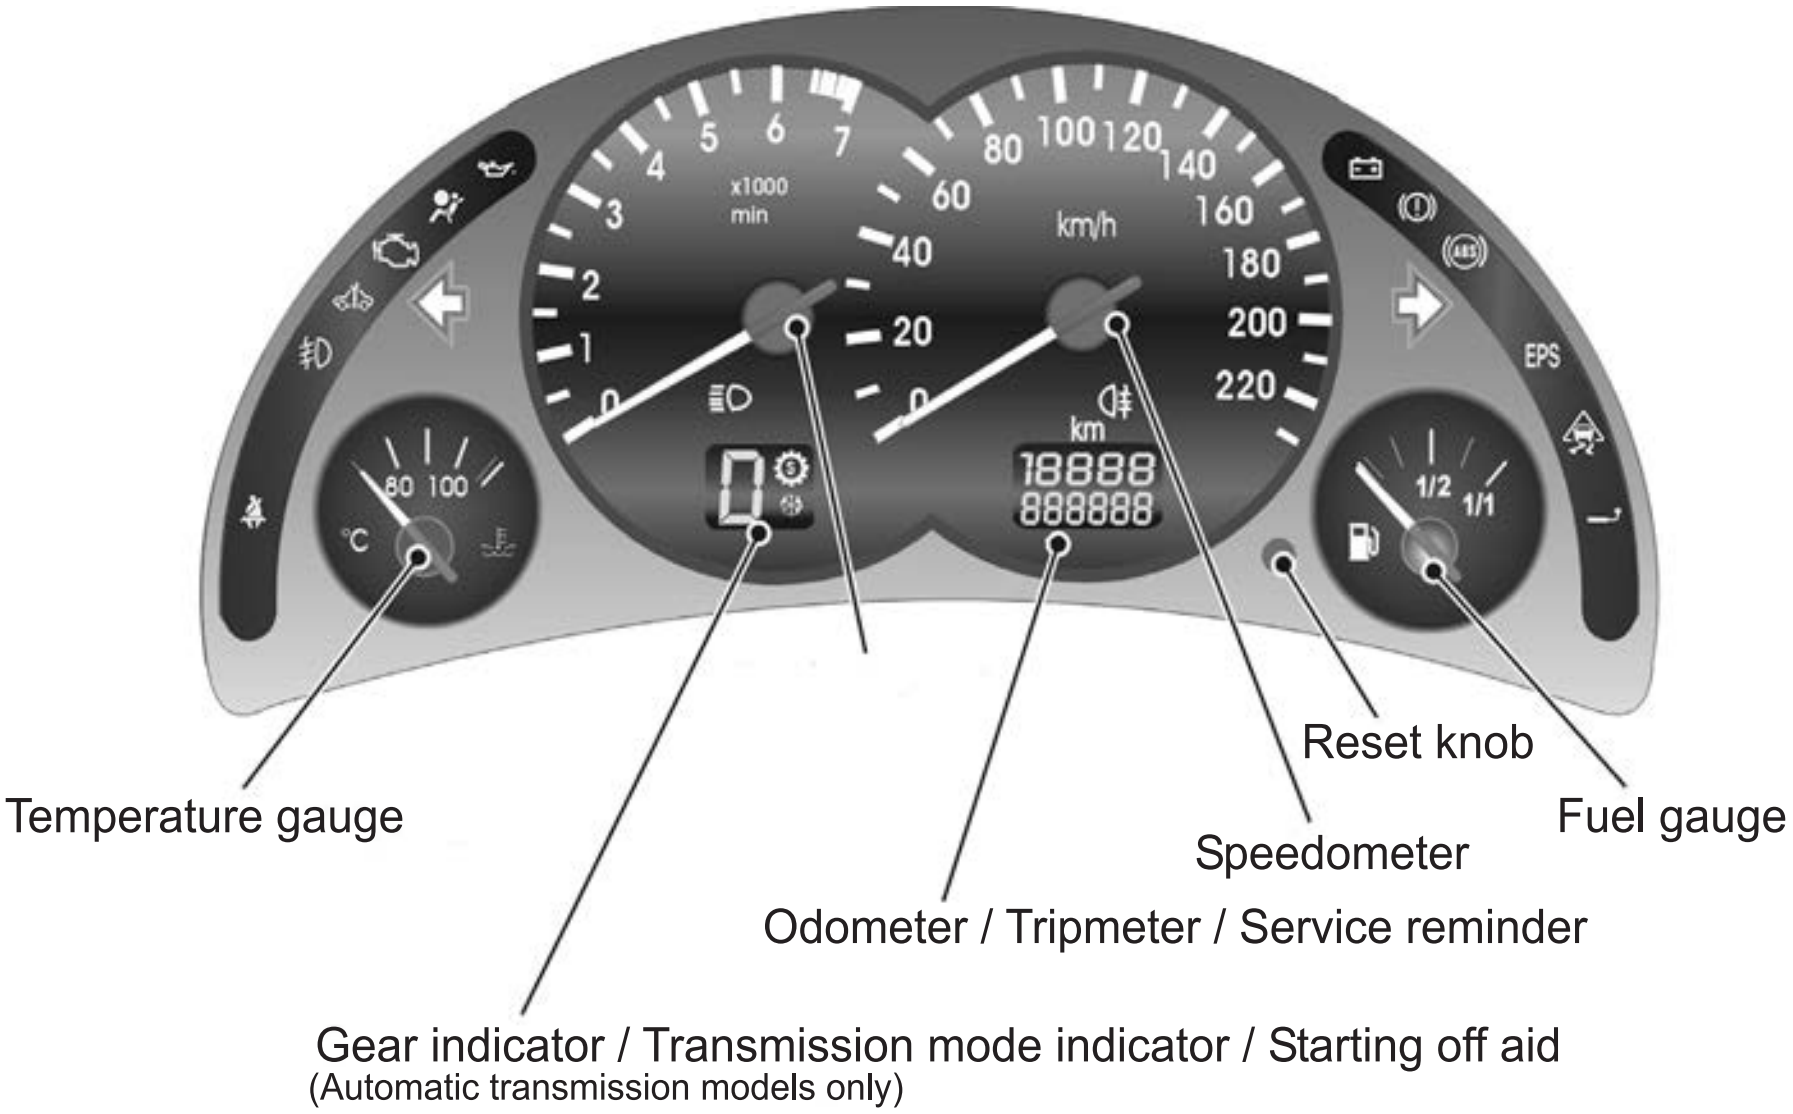
x1000
min
km/h
km
18888
888888
Temperature gauge
Reset knob
Fuel gauge
Speedometer
Odometer / Tripmeter / Service reminder
Gear indicator / Transmission mode indicator / Starting off aid
(Automatic transmission models only)

Note: Due to differences between models, your vehicle may not feature all of the warning / reminder lights illustrated.

Speedometer

The speedometer indicates vehicle speed in kilometres per hour.

Tachometer

The tachometer shows engine speed in revolutions per minute (r.p.m). Operation in the red zone (above 6,500 r.p.m.) may cause serious engine damage.

Odometer / service reminder / tripmeter

A small window in the speedometer is used for the odometer, the service reminder and the tripmeter. When the ignition is off, you can view the odometer and the tripmeter for a few seconds by pressing the reset knob. The **odometer** records kilometres travelled since the vehicle was built.

The **service reminder** displays 'InSP' for a few seconds when the engine is started if the vehicle is within 500 km or one week of the next service. Refer to Chapter 12, Servicing.

The **tripmeter** (above the odometer) records kilometres travelled on a particular trip. To zero the reading, press the reset knob while the ignition is on.

20
200
220
0
km
InSP
14625

Gear indicator / Transmission mode indicator / Starting-off aid (if fitted)

These features relate to the operation of the automatic transmission. Refer to Chapter 4, Driving.

GAUGES cont.

Engine temperature gauge

The engine temperature gauge shows the coolant temperature only if the coolant level is adequate. Refer to Chapter 7 for information about checking the coolant level.

NEEDLE IN ZONE AT LEFT = Engine has not reached operating temperature.

NEEDLE BETWEEN ZONES = Engine is at normal operating temperature.

NEEDLE IN ZONE AT RIGHT = Engine temperature is too high. Stop the vehicle as soon as it is safe to do so. Refer to Chapter 6 for further information.

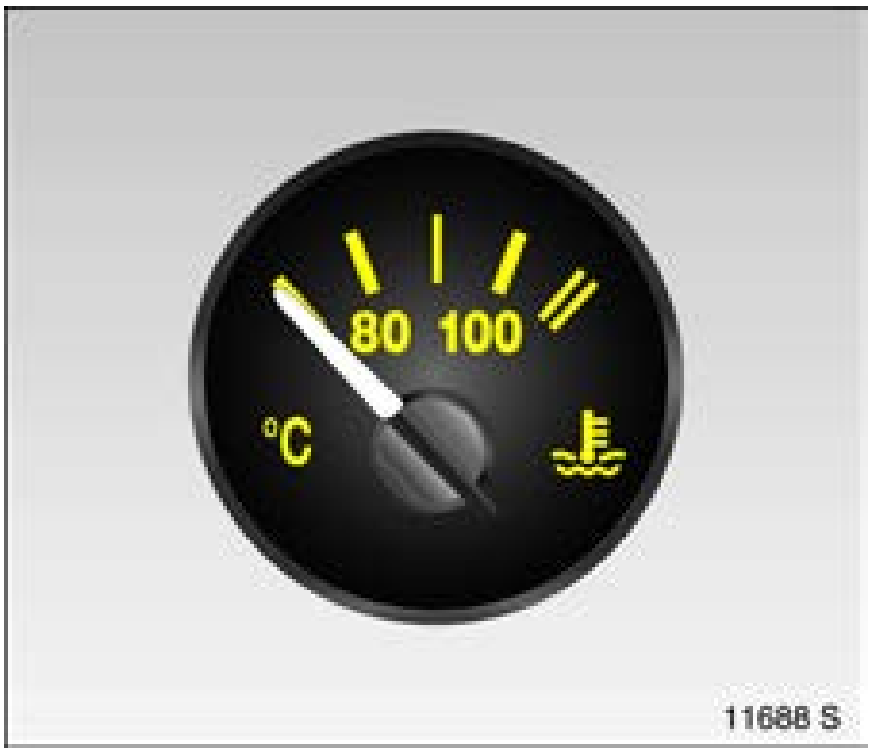

Fuel gauge

When the ⛽ symbol on the fuel gauge lights up, the fuel level is down to the reserve area. If the fuel tank is almost empty the symbol will begin to flash.

Refuel before the ⛽ symbol lights up. Never allow the fuel tank to become empty.

Refer to Chapter 5 for information about refuelling.

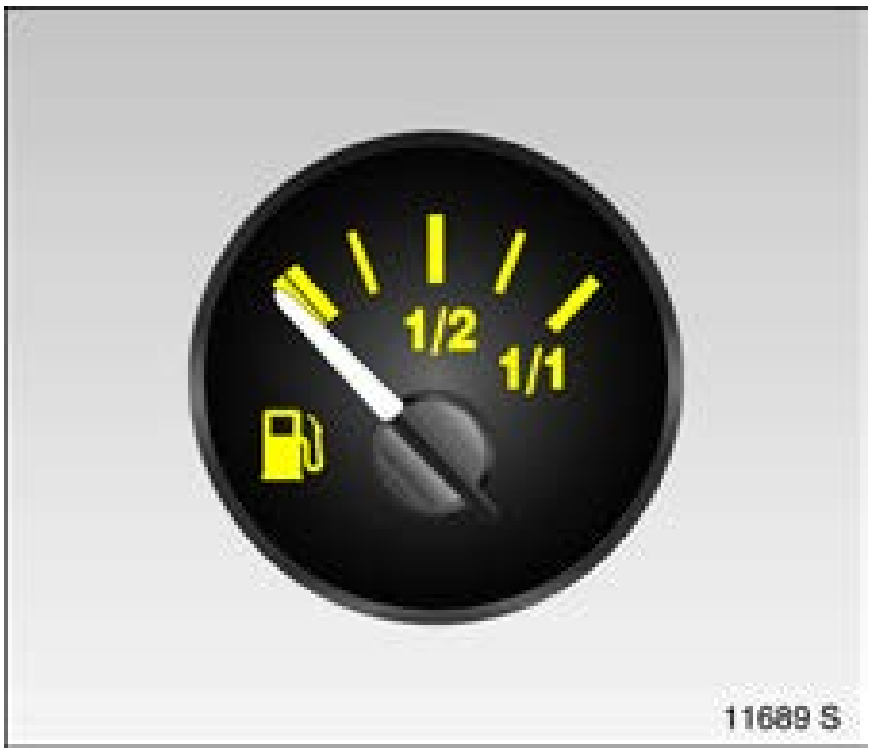

Instrument lighting

When the parking lights or headlights are switched on, adjust the instrument brightness by turning the thumb wheel located on the lower right-hand side of the headlight switch.

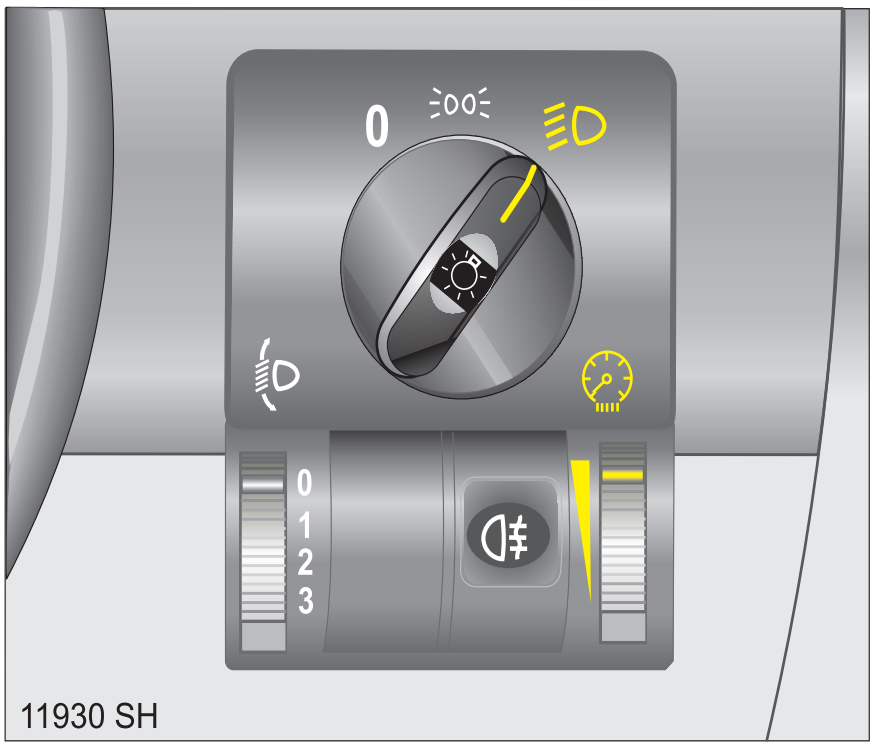

WARNING / REMINDER LIGHTS

Sports / economy drive (automatic transmission only)

Lights up for a few seconds when the ignition is switched on and when 'Sports Drive' is selected. Transmission then shifts at higher engine speeds, refer to Chapter 4.

Check engine and automatic transmission fault

Your vehicle is fitted with an Electronic Engine Management System. This indicator lights up when the ignition is switched on and goes out shortly after the engine starts to run.

If it lights up when driving, a fault has occurred in the transmission or service to the Engine Management System may be required. Stop the vehicle, switch the engine off and restart. If the light continues to flash, manually change gears using the T-bar and consult a Holden Retailer.

Although the vehicle may still be drivable and not require towing, see a Holden Retailer as soon as possible. Continued driving could affect fuel consumption, engine performance or may damage the catalytic converter.

However, if the symbol *flashes* and the engine cannot be started, turn the ignition off for at least 2 seconds before attempting to start the engine again.

Battery

Lights up when the ignition is switched to on. Goes out when the engine is started and the engine speed is increased above idle speed.

If it lights up during driving, the battery is not being charged properly (engine cooling may also be affected). You should see a Holden Retailer as soon as possible.

Brakes, hydraulic clutch

Lights up for a few seconds when ignition is switched on. It will go out after a few seconds unless the park brake is applied and / or the brake / clutch fluid levels are low.

If it lights during driving and the park brake is *not* applied you should stop the vehicle as soon as possible and consult a Holden Retailer.

Emissions

Your vehicle is fitted with an emission monitoring system. The emission warning symbol indicates when system service is required. The symbol lights when the ignition is switched on and goes out shortly after the engine starts to run.

If the symbol lights up when driving, service to the emission system may be required. Although the vehicle may still be drivable and not require towing, see a Holden Retailer as soon as possible.

However, if the symbol *flashes* while driving, reduce speed until the light stops flashing and take the vehicle to a Holden Retailer as soon as possible.

Low fuel

Lights up when the fuel gauge enters the red zone and comes on earlier when driving around bends. If the light flashes the fuel is just about to run out.

Starting-off aid (automatic transmission only)

Lights up when the starting-off aid is switched on, refer to Chapter 4.

WARNING / REMINDER LIGHTS cont.

Oil pressure

Lights up when ignition is switched on and goes out after the engine is started. It can light up intermittently when idling if engine is hot, but must go out when engine speed is increased.

If illuminated during driving, immediately stop the vehicle and switch off the engine. Check the engine oil level. Do not drive with this light showing. If the oil level is normal, have the system checked at your nearest Holden Retailer.

Rear fog lights

Lights up when the rear fog lights are switched on.

High beam

Lights up when headlight high beams are in use or flashed.

Turn signal indicators

Flash when turn signal lights are on. If the symbol flashes rapidly a turn signal light bulb has failed.

Seat belt

This warning light is displayed for a short time when the ignition is first switched on. The warning is designed to remind occupants to fasten their seat belts.

Air bag and seat belt pretensioners

Lights up for a few seconds when the ignition is switched on. If it does not go out or if it comes on during driving, there is a defect in the air bag / seat belt pre-tensioner system and they may not function correctly, especially in an accident. You should consult a Holden Retailer as soon as possible.

EPS Electronic power steering

The EPS (Electronic Power Steering) light remains on when the ignition is switched on and goes out after the engine is started. If it lights up during driving, a fault has occurred in the Electronic Power Steering system. You may continue to drive but greater effort will be required to turn the steering wheel. Have the system checked at the nearest Holden Retailer.

Anti-lock braking system (if fitted)

The ABS light illuminates for a few seconds when the ignition is switched on. If it does not go out or if it comes on during driving, there is a defect in the ABS. The brake system is operational but without ABS assistance. You should consult a Holden Retailer as soon as possible.

Traction control (if fitted)

The ABS light illuminates for a few seconds when the ignition is switched on. If it does not go out or if it comes on during driving, there is a defect in the ABS. The brake system is operational but without ABS assistance. You should consult a Holden Retailer as soon as possible.

Note: Due to differences between vehicles, your vehicle may not feature all of these warning / reminder lights.

WIPERS AND WASHERS

Wipers and washers are operational when the ignition is on.

Windscreen wipers

Move the lever upwards.

═	fast
—	slow
- -	intermittent
O	off

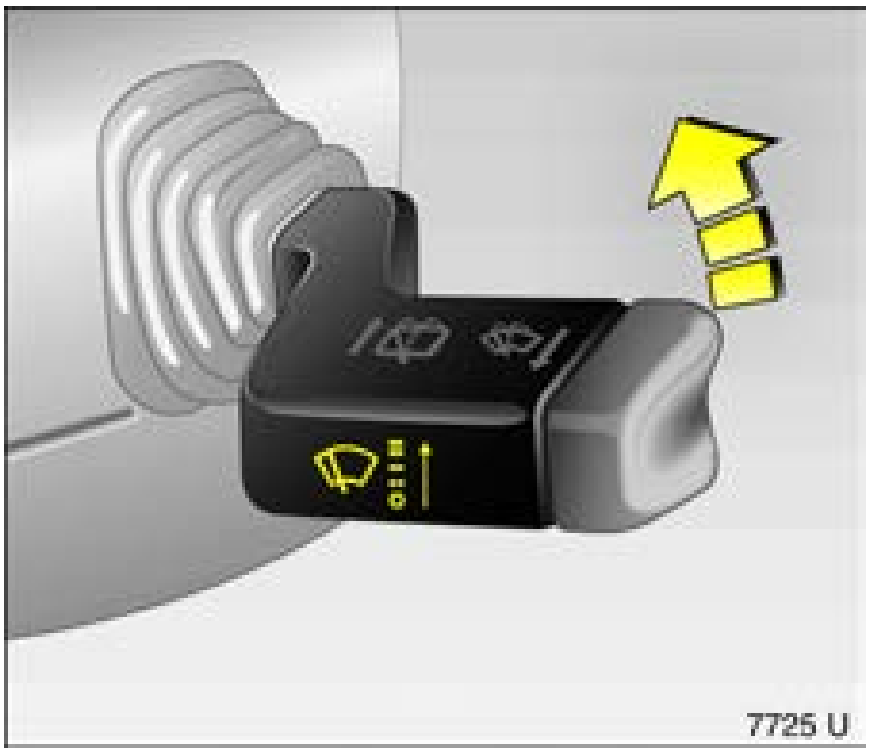

Setting intermittent wipe interval between 2 and 15 seconds:

- Set lever to intermittent.
- Set lever to off.
- Wait for the number of seconds interval you wish to set.
- Set the lever back to intermittent.

The selected intermittent interval is stored until changed again or until the ignition is switched off. When the ignition is switched on, the interval is preset to 7 seconds.

Windscreen washer

Never operate the wipers on dry glass as this damages the rubber wiper blade. To spray washer fluid onto the windscreen pull the lever toward you. At the same time the wipers are operated for several sweeps.

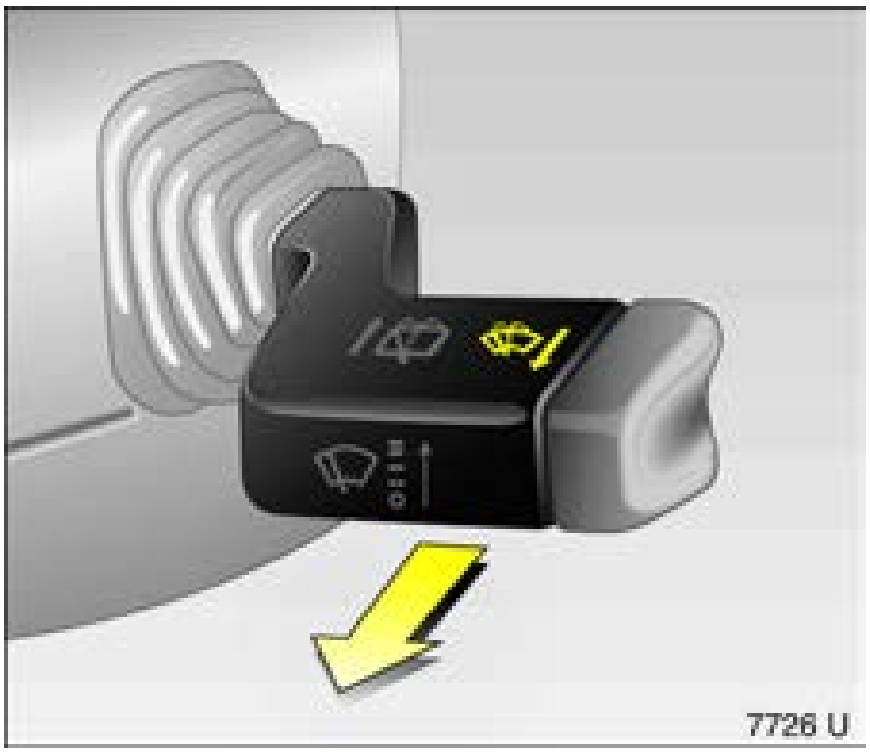

Rear wiper and washer (if fitted)

Push the lever away from you to the first 'stop' position to turn on the rear wiper. To turn on the rear washer, push the lever further and hold as long as required.

When the lever is in the first 'stop' position, the rear wiper will operate at an intermittent speed.

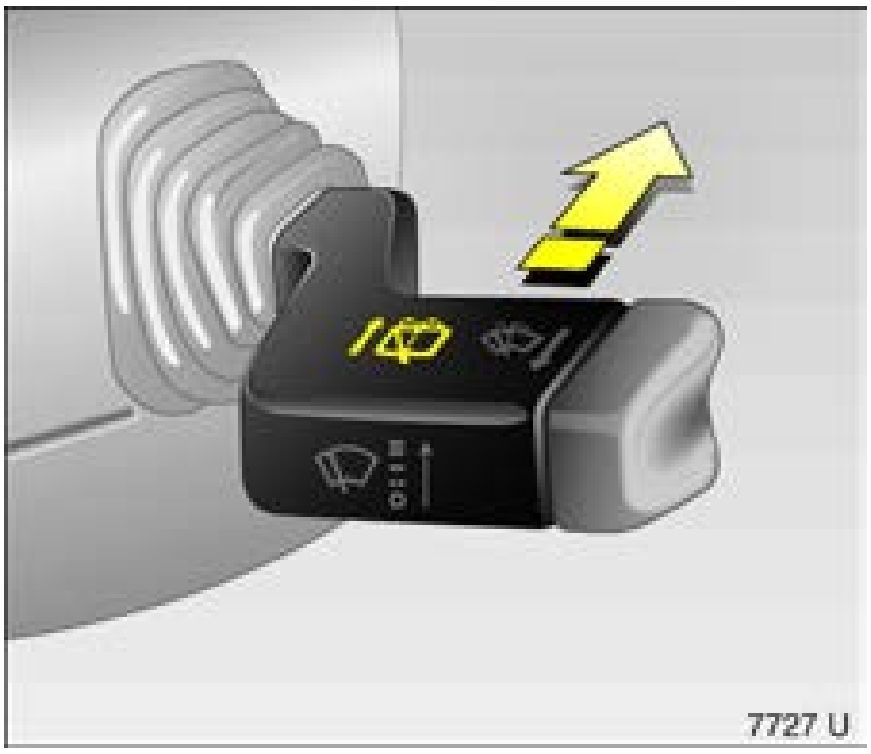

EXTERIOR LIGHTS

Light switch

0	Off
⊃○⊂	Parking lights.
≣D	Headlights and parking lights.
☼	Press the switch to turn on the interior light. Press the switch again to turn off the light.
◔	Turn the thumb-wheel to adjust the brightness of the instrument lights.

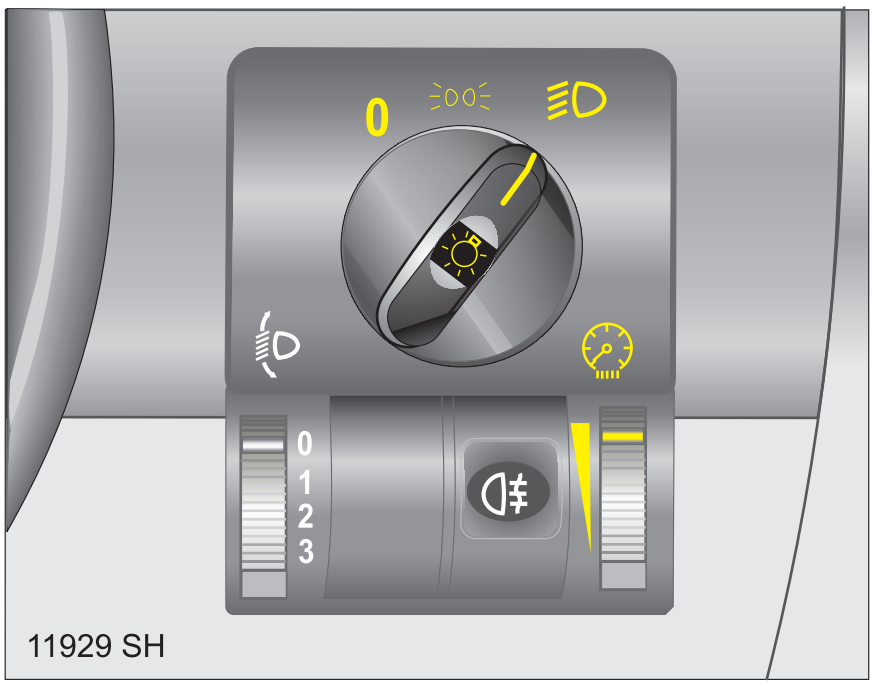

High / low beam

With headlights switched on, push the lever away from you and release it. The headlights change from low to high beam.

Pull the lever back towards the steering wheel to return to low beam.

When high beam is in use, a symbol on the instrument panel glows.

It is also possible to flash the high beams for signalling purposes by pulling the lever towards you (even with the headlights turned off). The lights remain in high beam as long as the lever is held in this position.

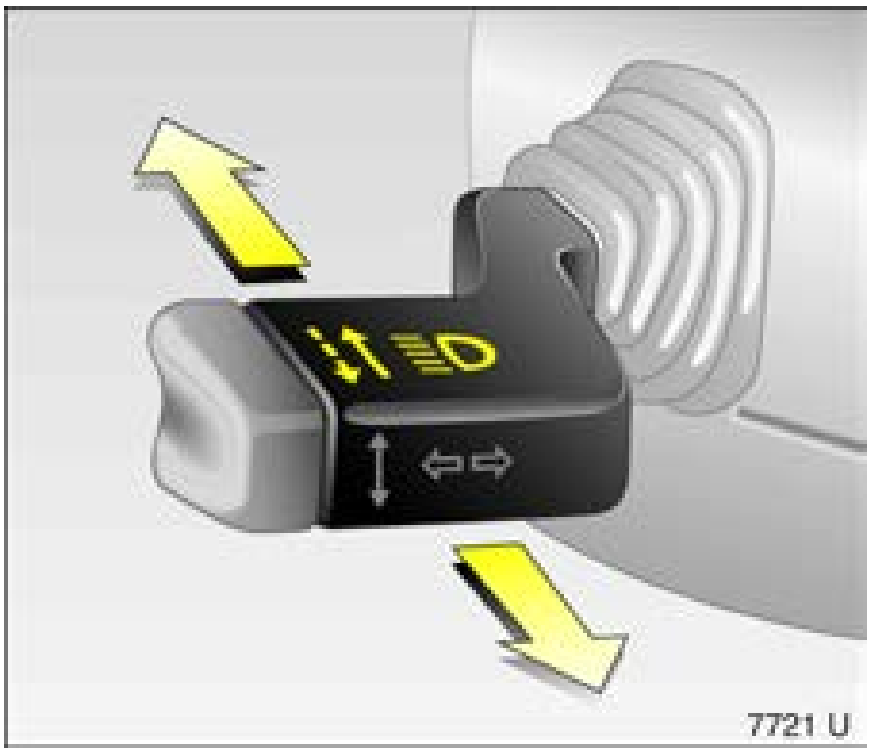

Leaving the headlights on without the engine running will eventually flatten the battery.

A warning chime will remind you to switch off the headlights when leaving the vehicle.

Headlight range adjustment

The headlight range may be adjusted to suit the current load in the vehicle by selecting 0, 1, 2 or 3 when the headlights are on.

Correct adjustment of the headlight range reduces dazzle for other road users.

0 = Front seats occupied

1= All seats occupied

2 = All seats occupied and load in the luggage compartment

3 = Driver's seat occupied and load in the luggage compartment

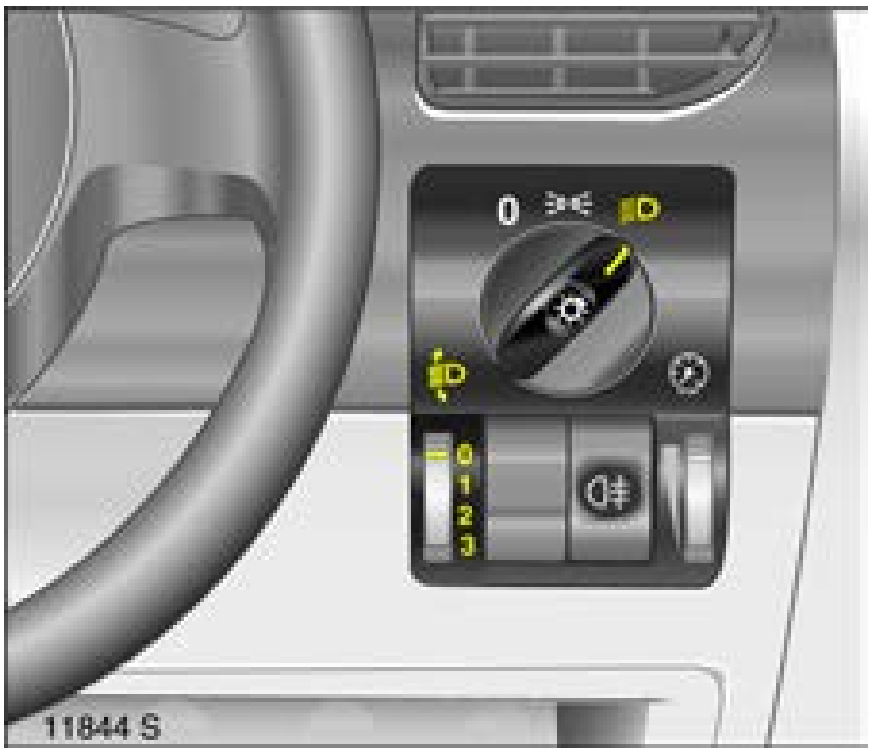

EXTERIOR LIGHTS cont.

Rear fog lights

The push button for the rear fog light/s is located below the headlight switch beside the instrument dimming switch.

Push the button while the headlights are on to switch the fog lights on or off. The symbol in the instrument panel glows when the fog lights are switched on.

Check your State's laws regarding use of fog lights.

For Combo rear fog light detail, refer to Chapter 6, page 23.

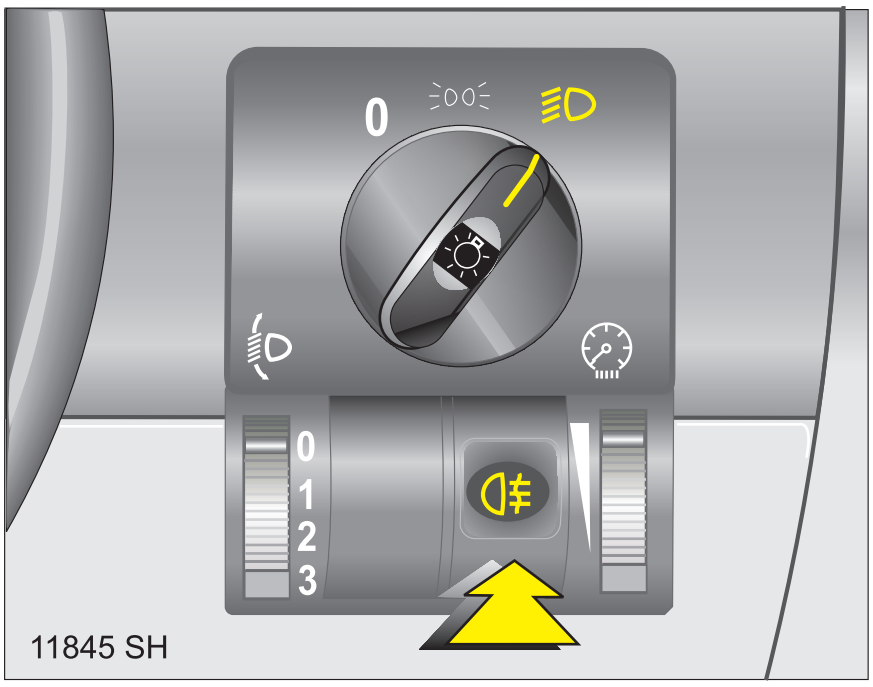

11845 SH

Front fog lights (if fitted)

To turn the front fog lights on or off, push the button beside the headlight range adjuster. When the front fog lights are on, the ≢D symbol appears on the left-hand side of the instrument panel.

Check your State's laws regarding the use of fog lights when driving.

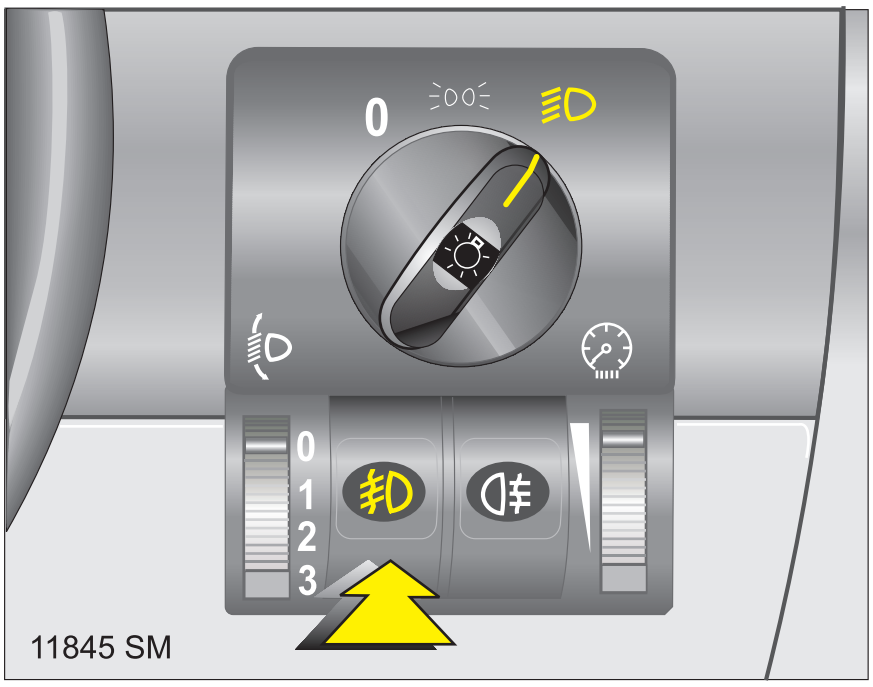

11845 SM

EXTERIOR LIGHTS cont.

Turn signals

Push the lever up or down (as required) to signal a turn.

In some turns (such as changing lanes) the steering wheel is not turned far enough to cancel the turn signal. So, to indicate a lane change, move the lever part way and hold. The lever will return to the neutral position when released.

To signal a turn, push the lever in the same direction that you intend to turn the steering wheel.

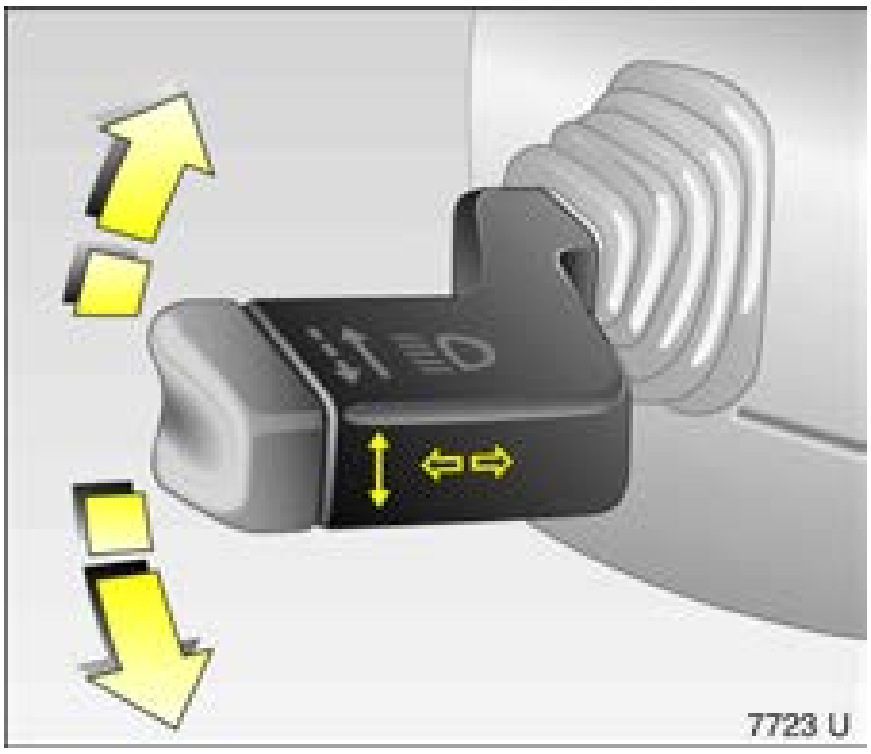

Hazard warning flasher

Push the button to switch on or off.

Use the hazard warning flasher to warn other drivers if your vehicle becomes a traffic hazard, day or night.

When the hazard warning system is on, the button's symbol will flash in unison with the external turn signals.

Use of the hazard warning flashers while the vehicle is moving is illegal in some States.

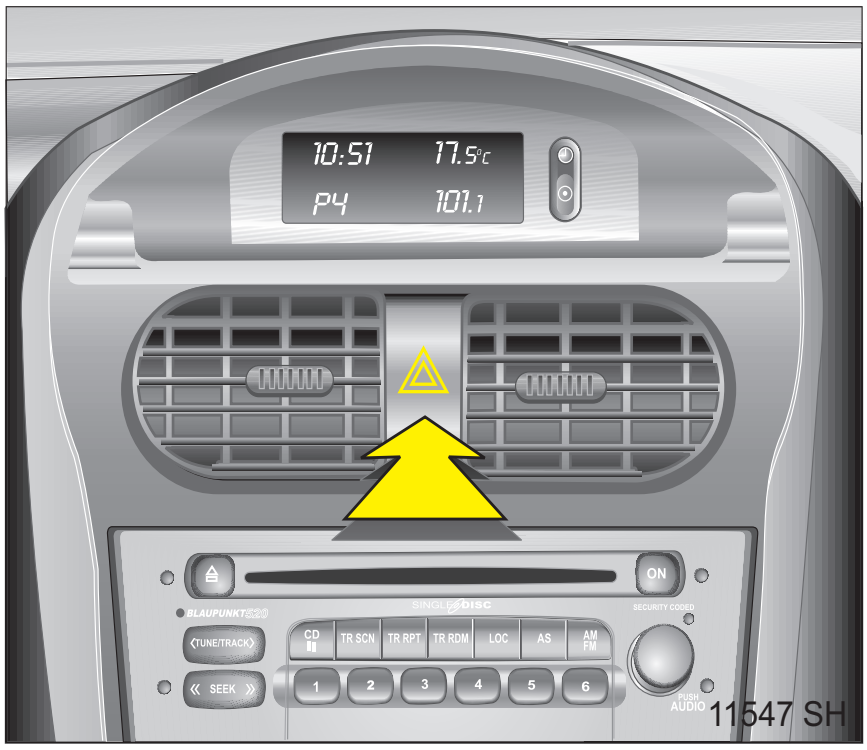
10:51
17.5°C
P4
101.1
BLAUPUNKT
ON
TUNE/TRACK
SEEK
CD
TR SCN
TR RPT
TR RDM
LOC
AS
AM FM
1
2
3
4
5
6
AUDIO
11547 SH

RADIO / CD PLAYER

Radio / CD player operation

The radio will stay on until the key is removed from the ignition. Therefore, remember to remove the key when leaving the vehicle for any length of time or you may flatten the battery.

The radio can also be heard when the key is removed from the ignition by pressing the ON button. In this case, the radio will automatically switch off after one hour.

Refer to the audio instructions for operating your radio / compact disc player.

Mobile phones and CB radios

Mobile phones and CB radio equipment which use an integrated antenna may temporarily affect the vehicle's electronics when used inside the vehicle, due to interference created when transmitting.

Therefore, only mobile phones and CB equipment that use an antenna fitted to the outside of the vehicle should be used.

Steering wheel mounted audio controls (if fitted)

The audio system functions can be operated by buttons mounted on the left and right side of the steering wheel. The audio system is operated as described in the operating instructions supplied.

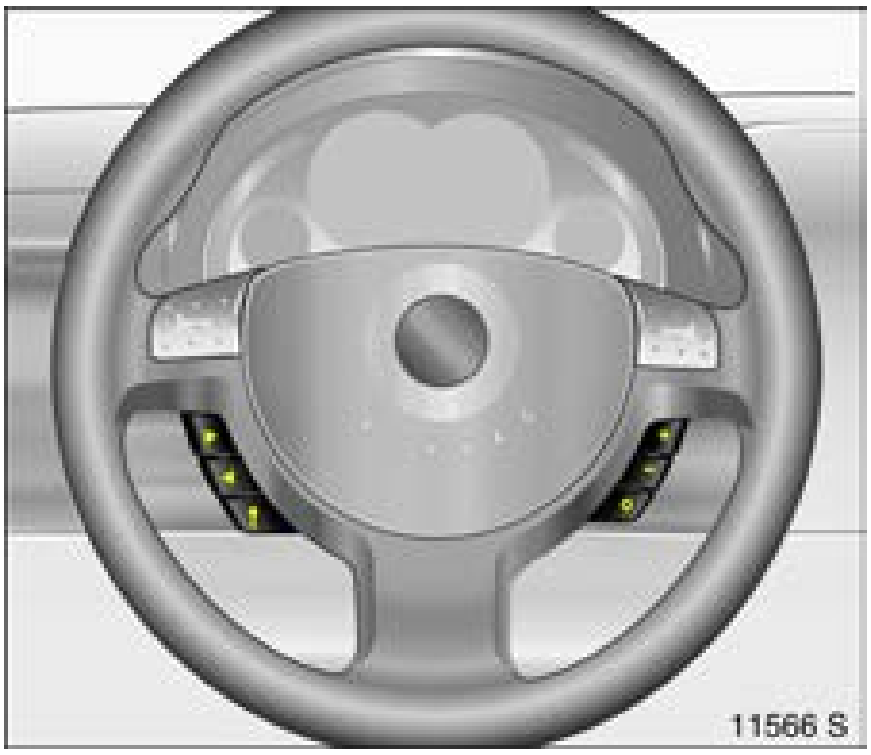

VENTILATION AND HEATING

Ventilation air inlet

The vehicle features a flow through ventilation system for your comfort. Under reasonable conditions, it shouldn't be necessary to open the windows at any time.

Outside air is drawn into the vehicle through the opening at the base of the windscreen. Do not allow this opening to become clogged with debris, such as leaves or snow.

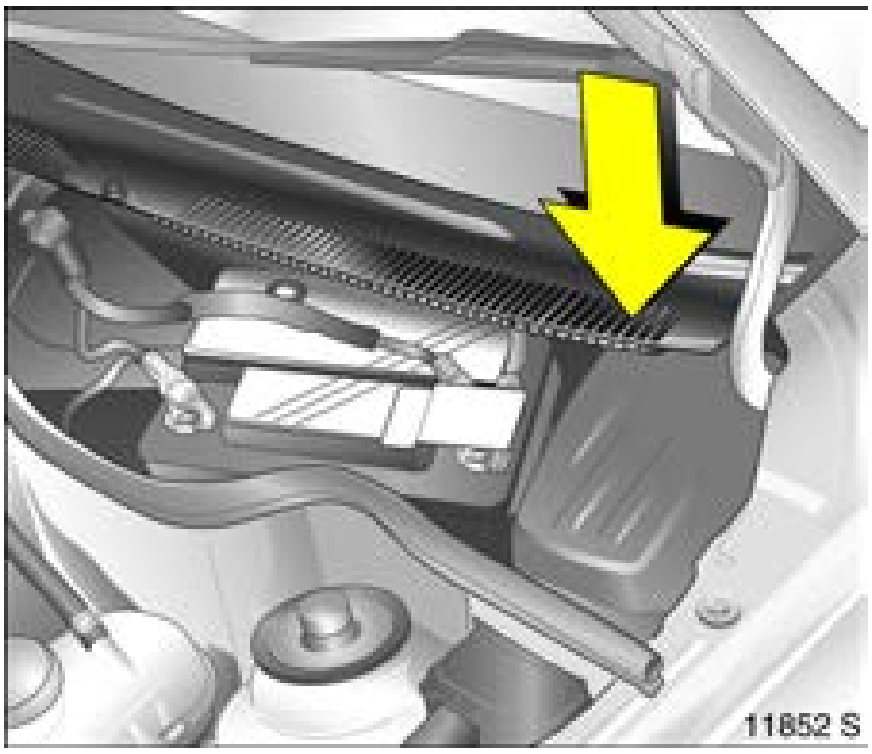

Demist and foot level vents

The demist and foot vent outlets are not adjustable as they direct air to the windscreen, windows or feet in the best way.

Face level centre vents

The face level centre vents are adjustable. They can be swivelled and tilted as required. They can also be completely shut off by sliding the adjuster towards the centre of the dashboard.

When the temperature dial is set to the centre position, air from the centre vents is cooler than the air emitted from the side vents.

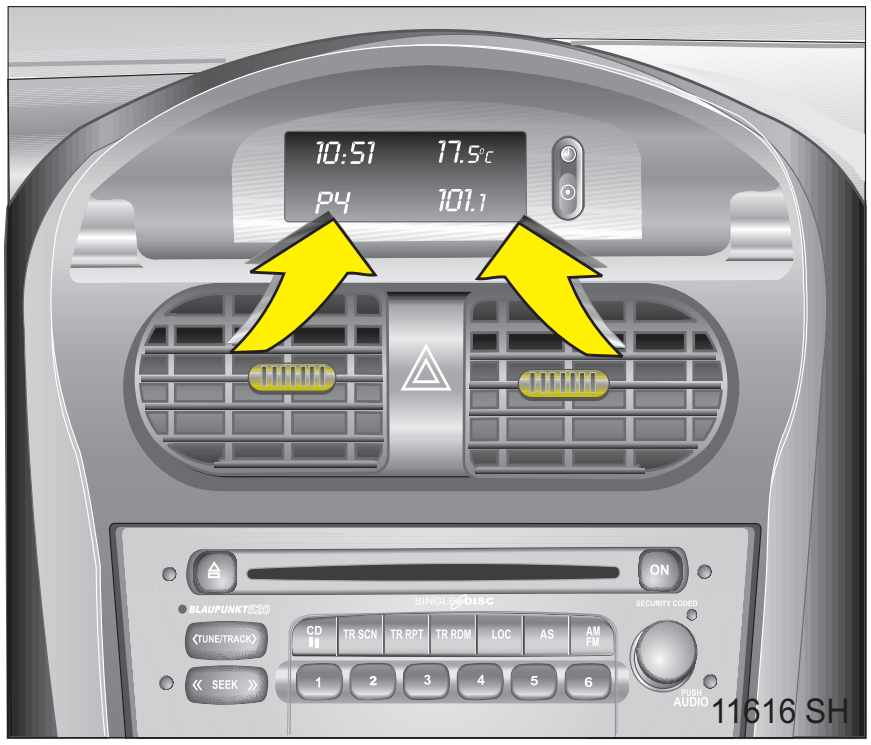

Face level side vents

The face level side vents (1) can be swivelled and tilted as required. They can also be completely shut off by sliding the adjuster towards the centre of the dashboard. When the vent dial is set to demist, air will be directed through the demist vents (2) onto the windscreen and door windows.

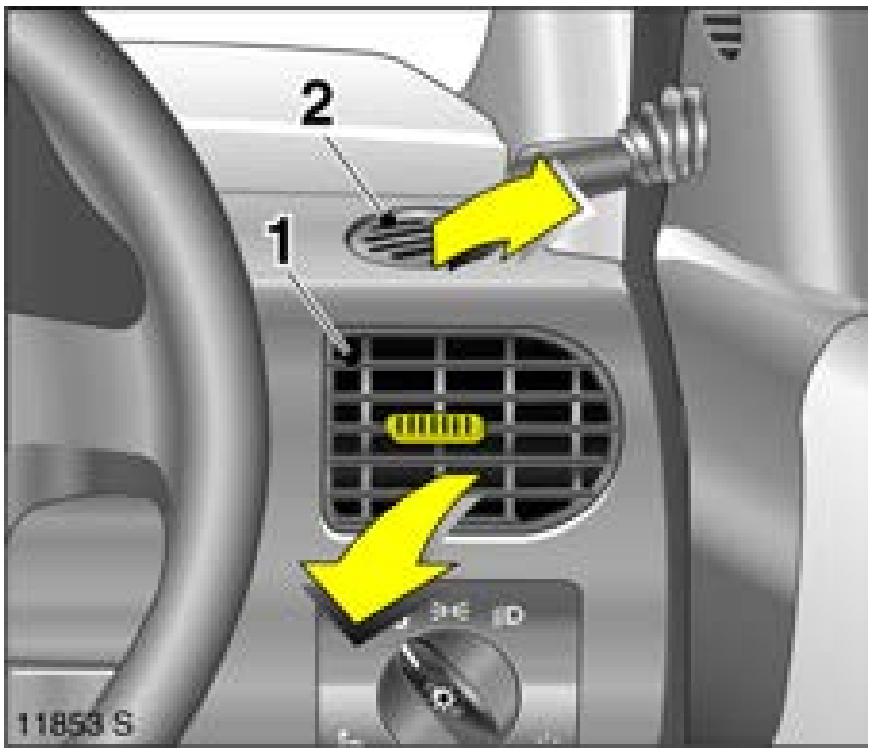

VENTILATION AND HEATING cont.

Temperature dial

Anticlockwise = cool

Clockwise = warm

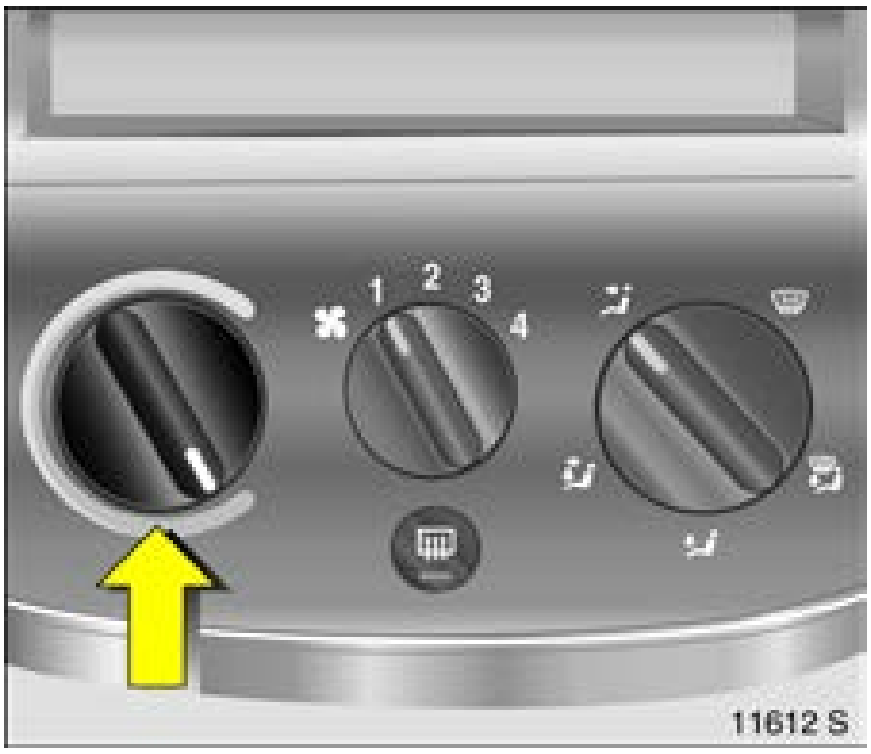

Fan dial

OFF plus four fan speeds are provided.

Note: The rate of air flow is determined by vehicle speed, as well as by the fan.

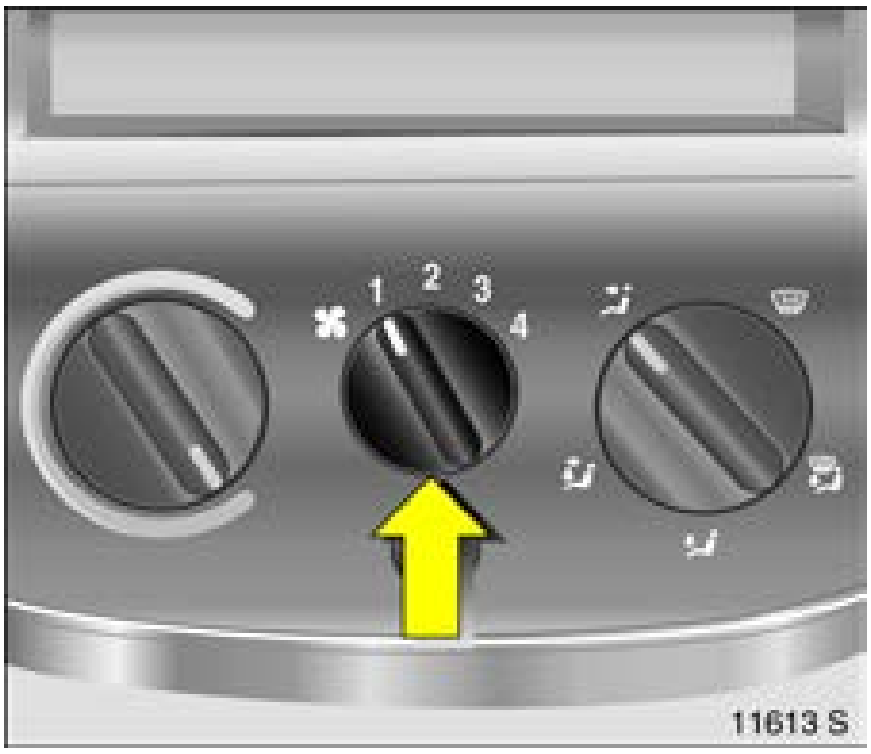

Vent dial

Air from demist vents.
Air from demist and foot vents.
Air from foot vents.
Air from face and foot vents.
Air from face level vents.

To provide for individual requirements, the switch can be set to any intermediate position.

Note: The air will come from the face vents with all vent dial positions, provided the vents are open.

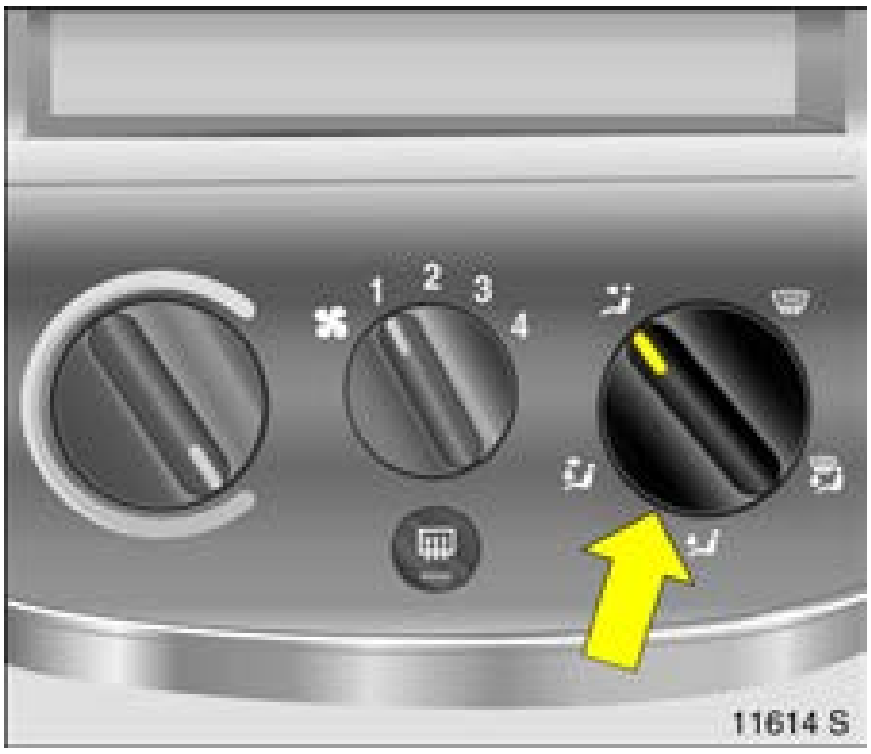

VENTILATION AND HEATING cont.

Air intake button

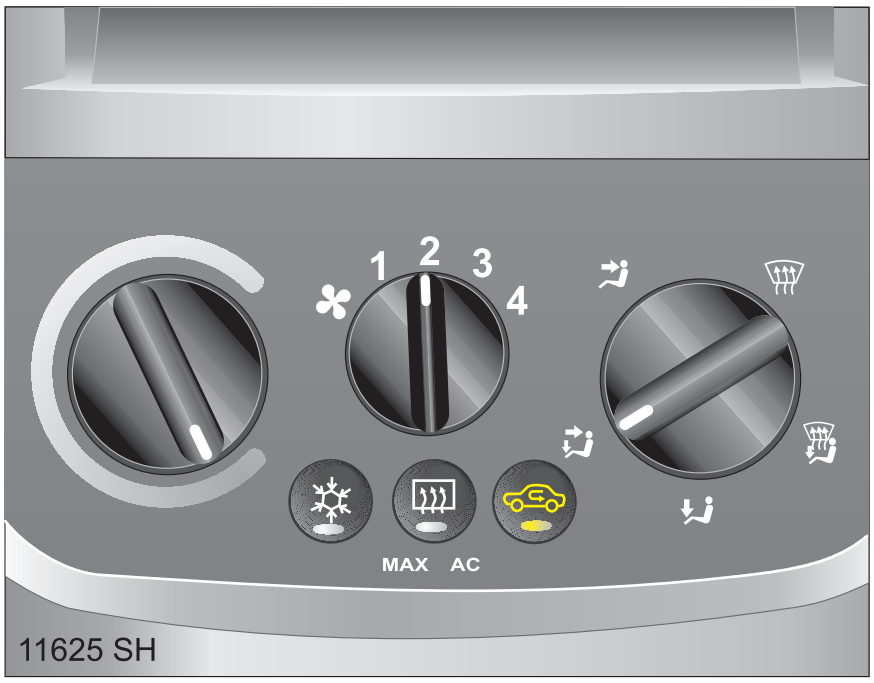

Push the button to switch between recirculated and outside air. The light in the switch glows when recirculate is selected.

When following another vehicle on dusty roads, or to prevent exhaust fumes or odours entering your vehicle, press the button to the recirculation position (light in switch showing). However, when driving on unsealed roads but where the dust is not airborne, press the button to the fresh air position. All windows must be closed and the fan preferably on a high speed so that positive air pressure in the vehicle will prevent dust from being sucked in.

Recirculate reuses interior air and is therefore NOT recommended for long periods of time. If occupants are smoking, it is recommended that the recirculate position NOT be used, as the tobacco smoke adheres to the air ducts and produces stale smelling air.

Heating

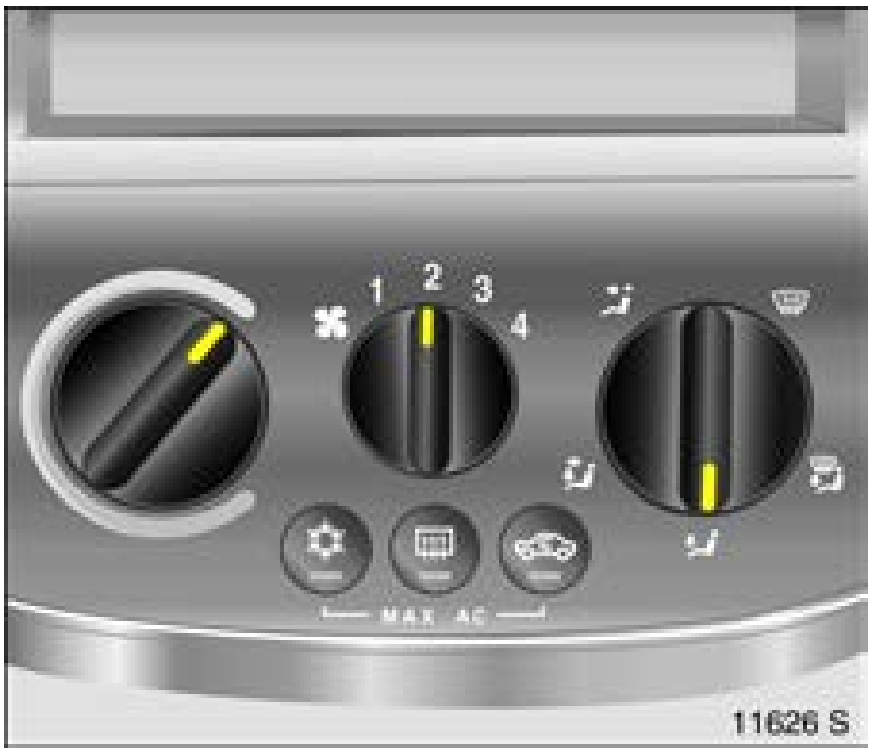

- Air conditioning switch OFF (if fitted).
- Air intake button to fresh air position.
- Temperature dial as required.
- Fan as required, but not full speed.
- Vents dial to foot vents.

Note: Heat will not be available until the engine warms up. Therefore, keep vents closed until the engine has warmed up, then direct vents towards side windows (if required) to aid demisting.

Ventilation without using air conditioning

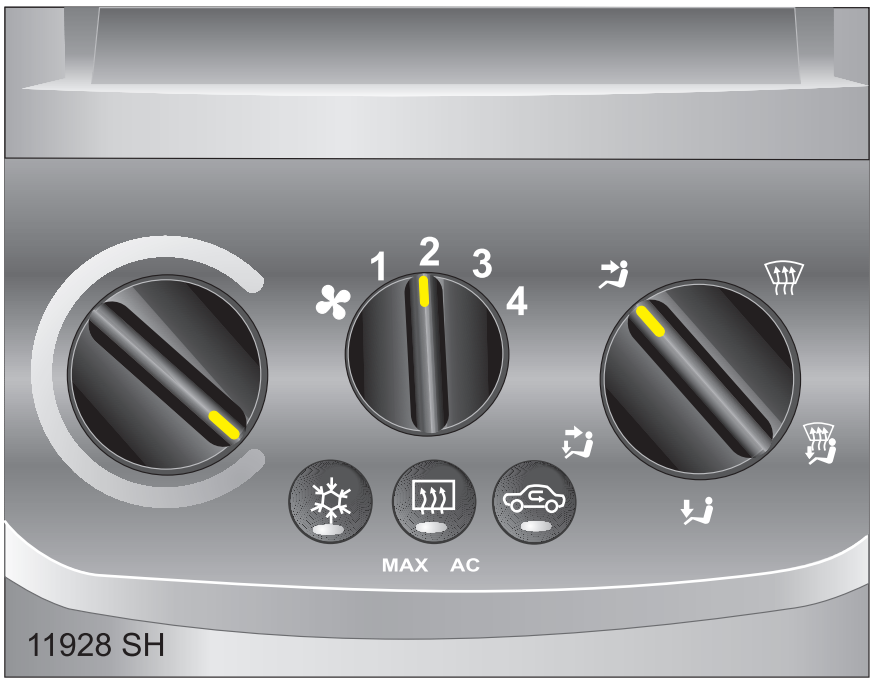

Use these settings to conserve fuel when air does not require cooling.

- Air conditioning switch OFF (if fitted).
- Air intake button to fresh air position.
- Turn temperature dial to cold.
- Fan speed as required.
- Set vents dial to 'face' level vents.
- Open all vents.

AIR CONDITIONING (if fitted)

Air conditioning not only cools the air but also removes moisture. If the temperature dial is moved away from extreme cold, the air will then be reheated before entering the cabin.

The air conditioner is switched on by pushing the button with the snowflake symbol. A light in the switch will glow when the air conditioner is operating. The fan automatically runs at low speed, which can be increased if required.

The air conditioning system operates only in the temperature ranges in which it is required; it switches off automatically when the outside temperature is below + 4°C.

To conserve fuel, switch off the air conditioning in cold weather. However, once a month (with the engine running) switch the air conditioner on for 5 to 10 minutes, even in Winter. This will lubricate the air conditioning system.

At least one vent must be open when the air conditioning is on, so that the evaporator does not ice up due to a lack of air movement.

Normal cooling

- Air conditioning switch on.
- Air intake button to fresh air position.
- Turn temperature dial to cold.
- Fan speed as required.
- Set vents dial to face level vents.
- Open all vents.

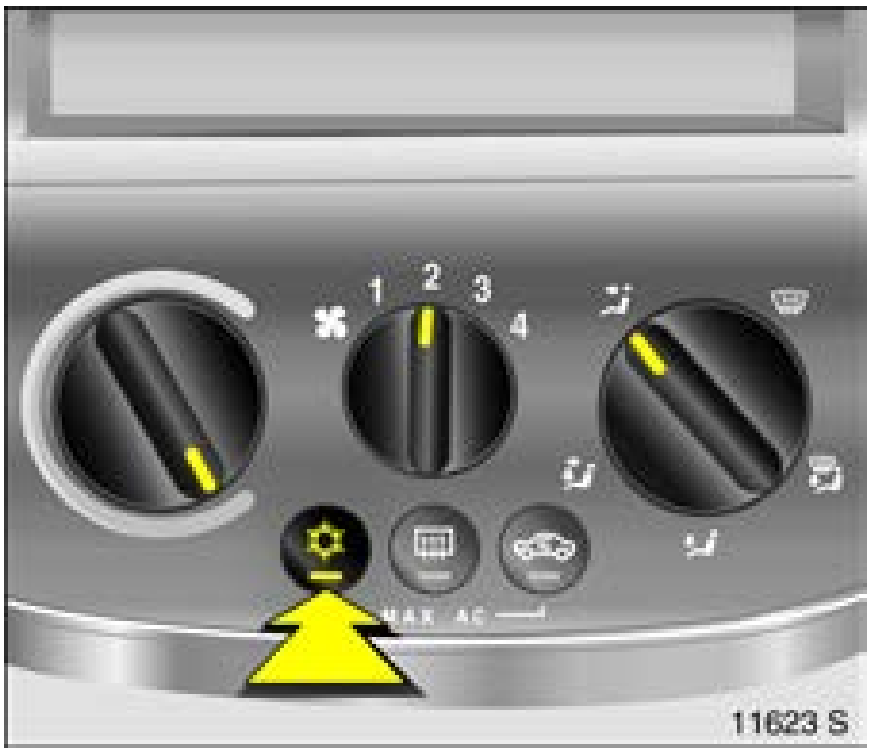

Maximum cooling

For maximum cooling in hot weather or when the vehicle has been left in the sun, open the windows briefly so that warm air can escape quickly.

- Air conditioning switch on.
- Air intake button in recirculate position.
- Turn temperature dial to cold.
- Fan to highest speed.
- Set vents dial to 'face' level vents.
- Open all vents.

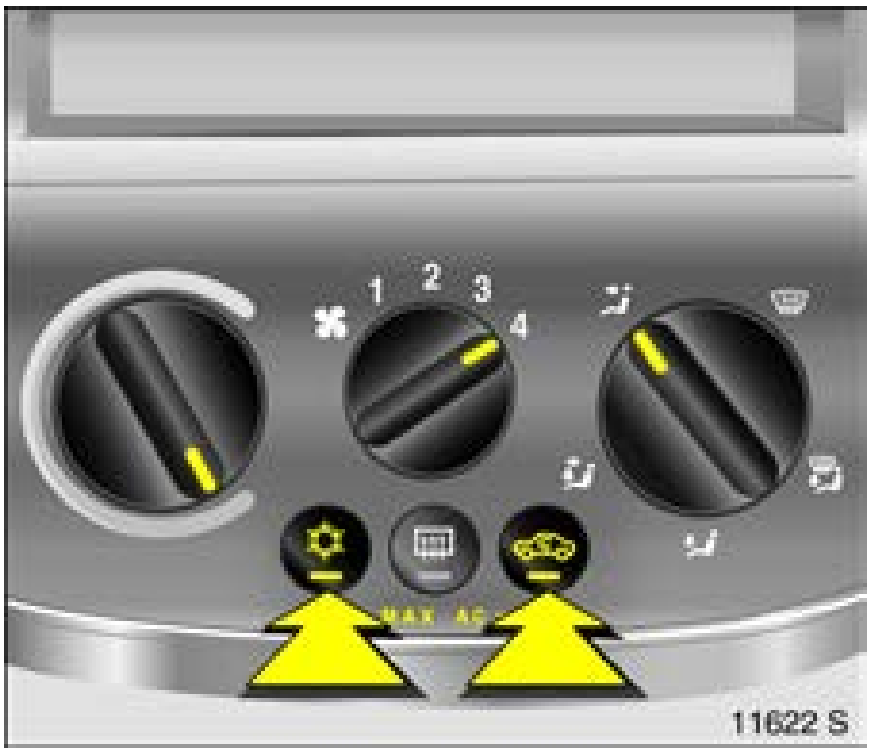

DO NOT leave recirculation on for long periods as no outside air is drawn into the vehicle. Cabin air is recirculated and can become stale.

DEMISTING

Windscreen demisting

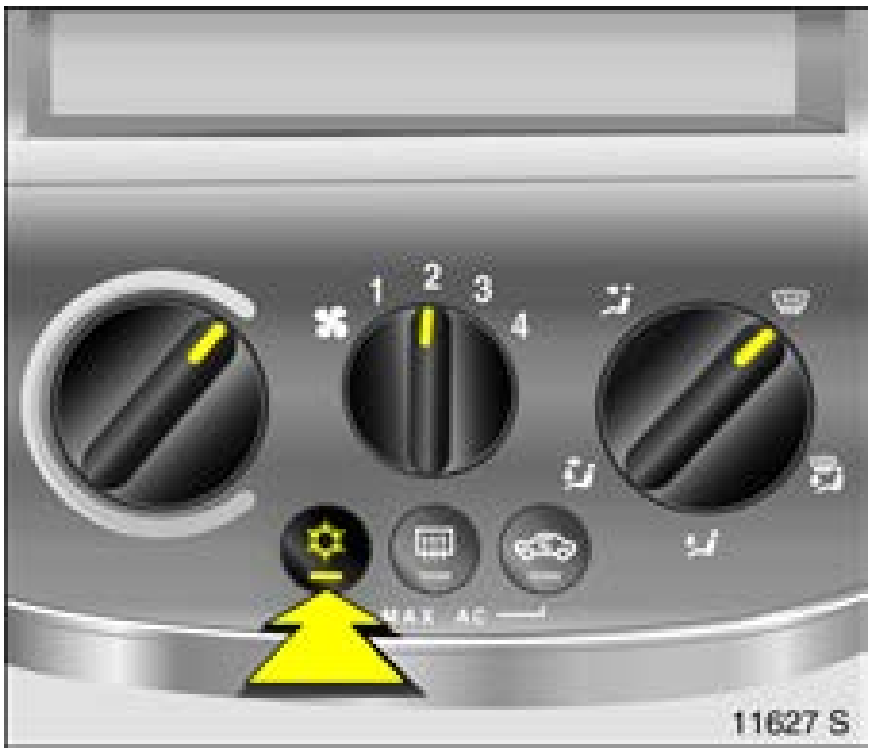

- Air conditioning switch on (if fitted).
- Air intake button to fresh.

Note: Air intake will automatically switch from recirculation to fresh air when the vents dial is rotated to demist mode.

- Temperature dial to hot.
- Fan to speed 2 or more.
- Vents dial to demist or to demist and foot level vents.
- Close all dash vents.

Rear window demisting

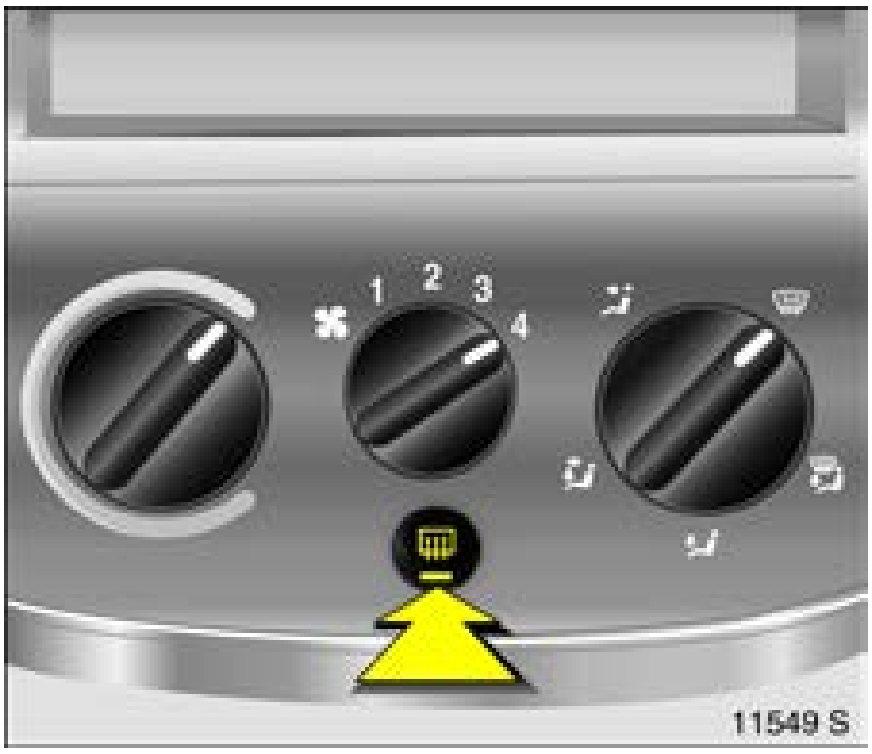

Demisting is provided for the rear window. Press the switch to turn demisting on or off.

A light in the switch glows when demisting is operating.

Demisting operates when the ignition is on.

Demisting will automatically switch off after approximately 15 minutes.

ASHTRAYS AND CIGARETTE LIGHTER

Cigarette lighter

The cigarette lighter works when the ignition is switched on. Push the cigarette lighter inwards to heat. The lighter will automatically pop out when heated and ready to use.

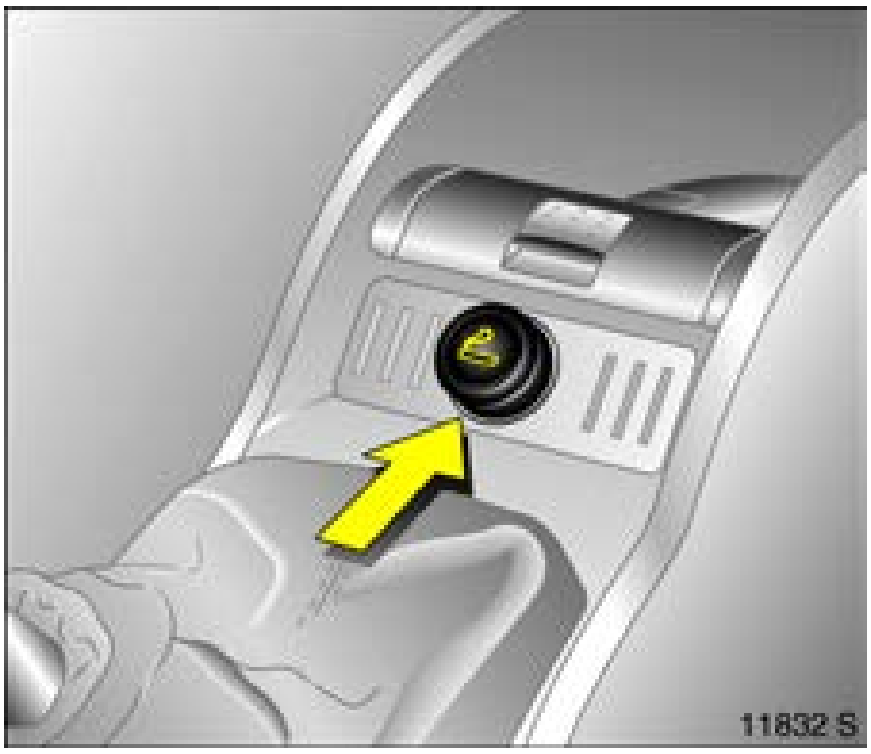

Front ashtray

To open, lift the front of the cover upwards.

To empty, open the ashtray cover beyond its resistance point which will cause the ashtray insert to lift from its installed position. To remove the ashtray completely, pull up evenly on both sides of the ashtray insert.

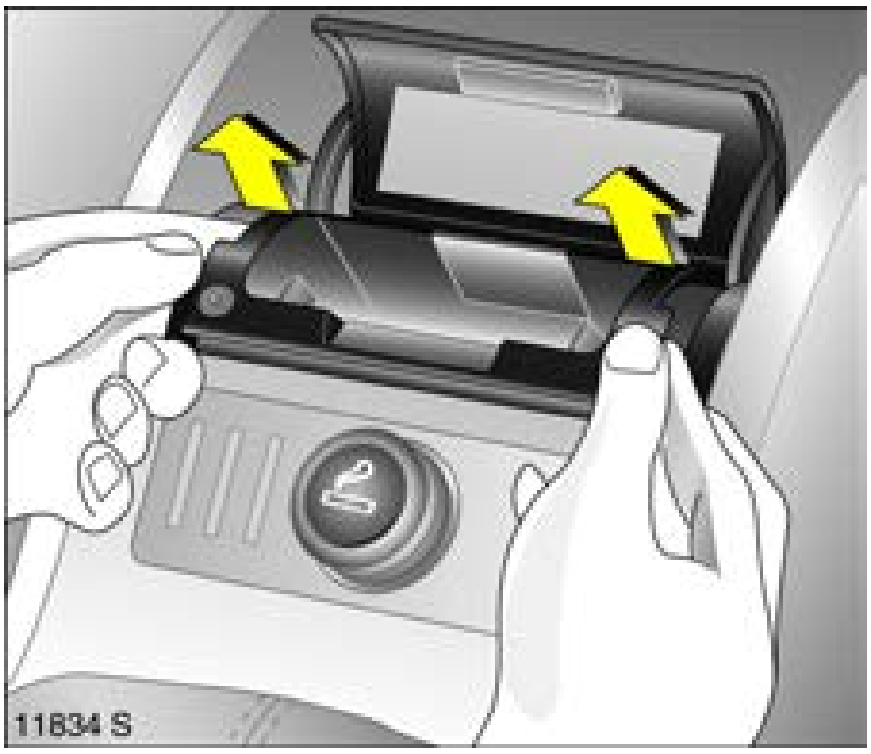

Rear ashtray (if fitted)

To open, lift the front of the cover upwards.

To empty, open the cover and pull the ashtray upwards by its cover.

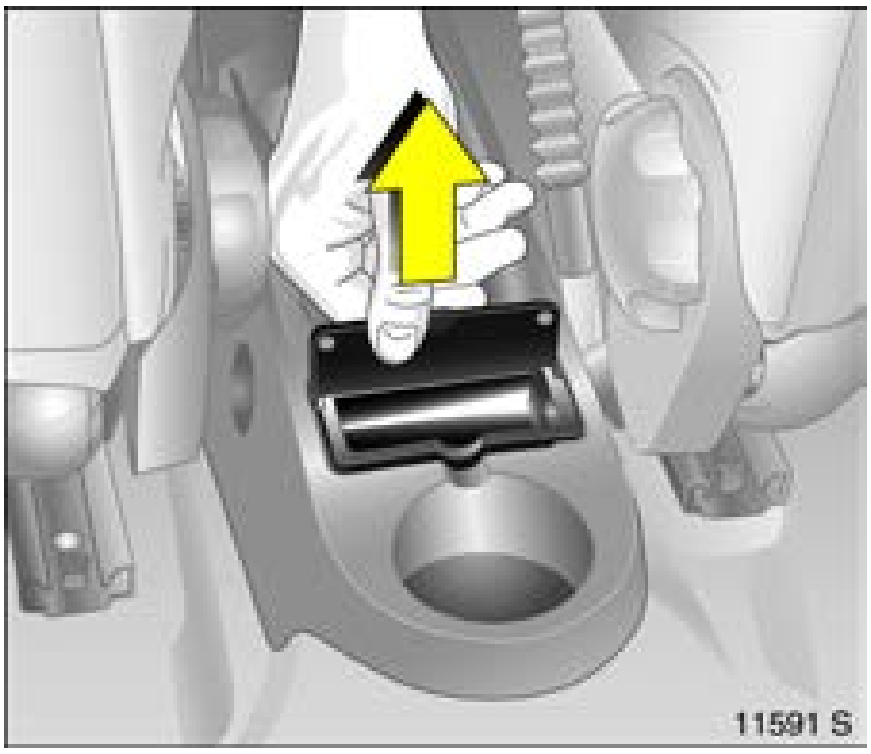

TRIPLE INFORMATION DISPLAY

Display shows the time, date and outside temperature, when the ignition is on. When the radio is playing, the date display is replaced by radio display.

As with the instrument lighting, the brightness of the display can be adjusted when the park lights and / or headlights are on, by turning the thumb knob located below the light switch.

When the ignition is off, the display can be illuminated for approximately 15 seconds by briefly pressing one of the buttons next to the display.

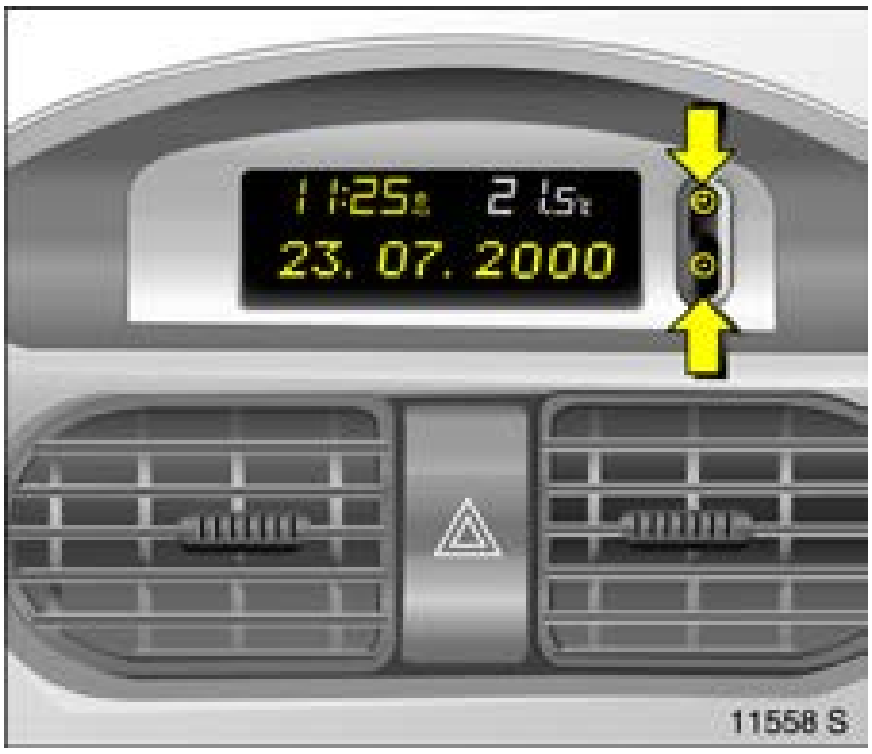

Adjusting the date / time

- Turn on the ignition and switch off the radio.
- Press the top button for approximately 2 seconds (day starts flashing).

  Press the bottom button until day is correct.
- Press the top button (month starts flashing).

  Press the bottom button until month is correct.
- Press the top button (year starts flashing).

  Press the bottom button until year is correct.
- Press the top button (hour starts flashing).

  Press the bottom button until hour is correct.
- Press the top button (minutes start flashing).

  Press the bottom button until minutes are correct.
- Press the top button – clock starts at 0 seconds.

If only the time is to be set, repeatedly press the top button until the hour / minutes are flashing.

Outside temperature

WARNING:

The road surface may be icy, even though the display indicates a few degrees above zero.

To warn the driver that the road surface may be icy, a snowflake symbol displays when the temperature drops below 3°C.

'--.-°C' or an 'F' on the display indicates a fault in the system. You should see a Holden Retailer.

Note: A fall in temperature is indicated immediately, and a rise in temperature after a short delay.

BONNET RELEASE

Open the bonnet

The bonnet release lever is located beneath and to the right end of the dashboard.

To release the bonnet, pull the lever towards you. This allows the bonnet to release but is prevented from opening by the safety catch.

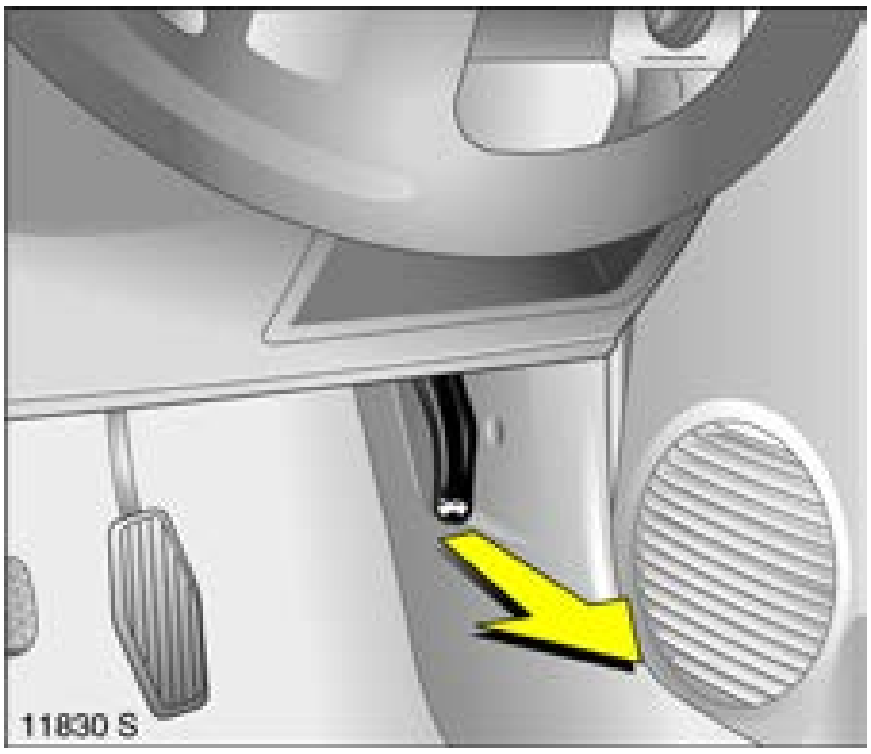

To open the bonnet completely, locate the safety catch towards the right-hand side of the bonnet and lift it upwards while lifting the bonnet.

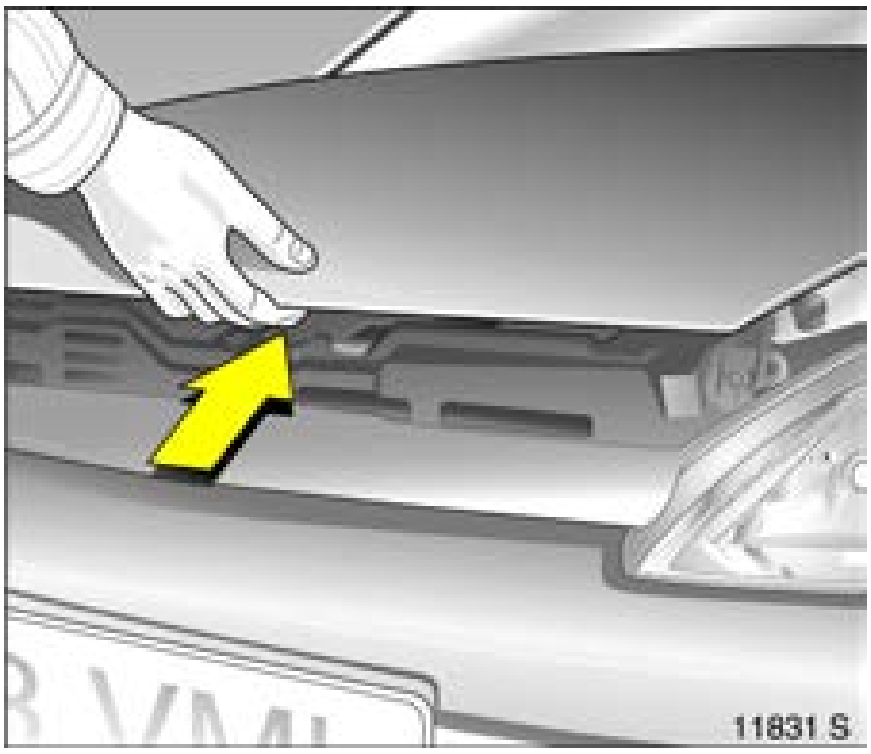

Fully open the bonnet and insert the support rod into the slot provided.

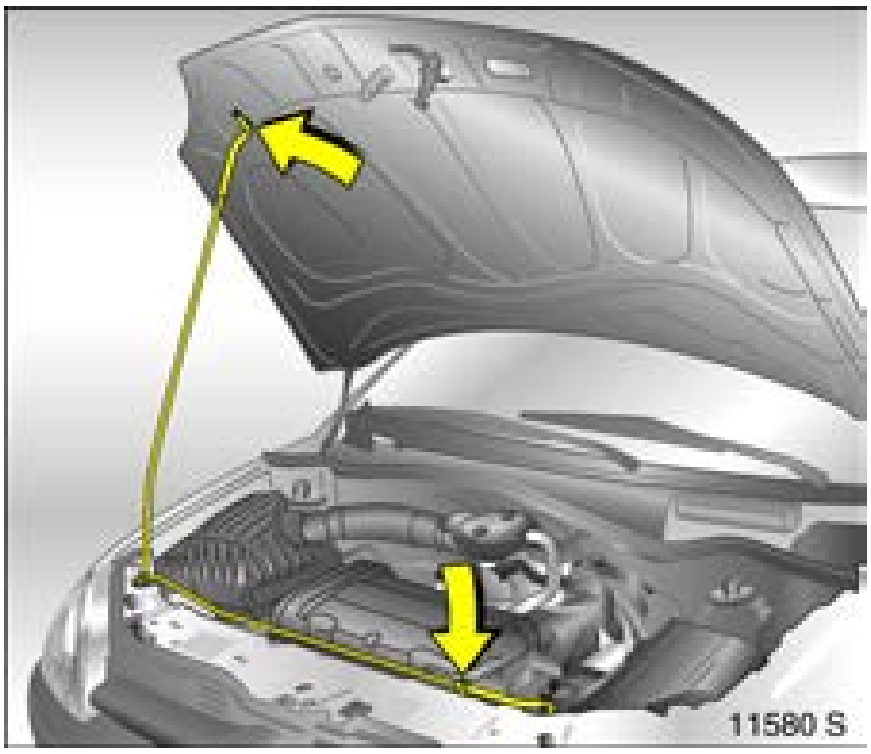

Close the bonnet

Before closing the bonnet, release the support rod and fit it firmly into its holder. Lower the bonnet gradually until nearly closed, and then drop it to close fully under its own weight.

Always check that the bonnet is properly closed and that the release lever inside the vehicle has returned to its original position.

IGNITION SWITCH

Ignition

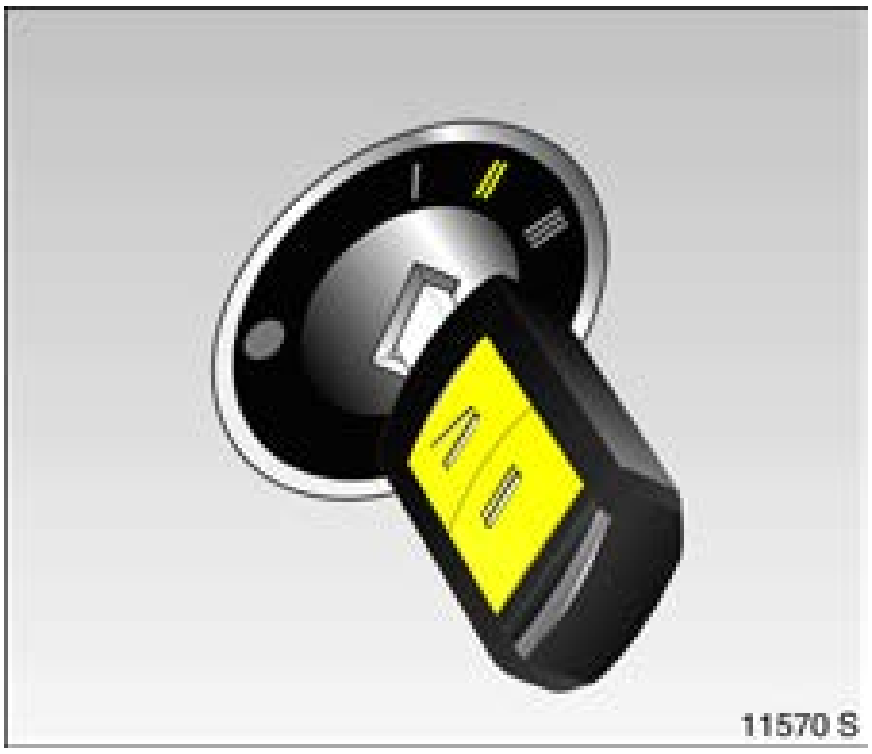

●	LOCK: Ignition off, steering locked when key is removed.
I	OFF: Steering unlocked, ignition off.
II	ON: Ignition on.
III	START: Start the engine.

Release steering column lock

To release the lock, move the steering wheel slightly and turn the key to position **I**.

Lock steering column

To lock the steering column, withdraw the key in the lock (●) position.

WARNING:

Do not turn the engine off while the vehicle is moving. Power assisted equipment such as the brakes which are operated by the engine, will be ineffective. Never remove the key while the vehicle is moving, as this will lock the steering wheel.

Audible warnings

An audible warning will remind you when you are leaving the vehicle and:

- you have not removed the ignition key (single tone)
- you have left the headlights on (dual tone).

CRUISE CONTROL (if fitted)

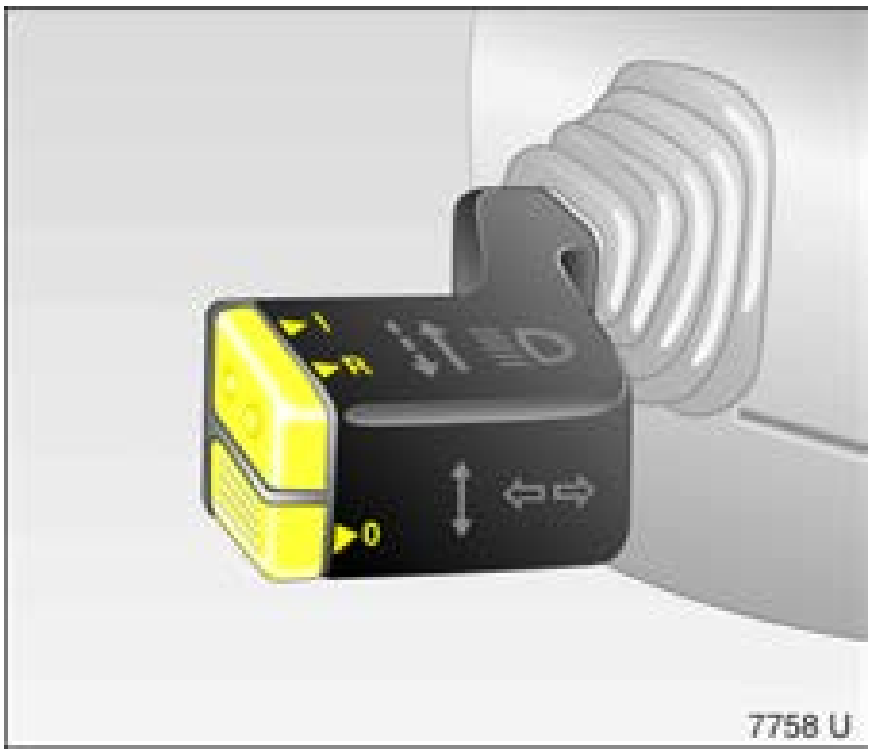

Cruise control maintains the speed of your vehicle without you having your foot on the accelerator pedal and works at speeds over 30 km/h.

The cruise control lever is on the left side of the steering column. The lever has two switches.

The '**O**' (off) switch is the lower of the two switches and is activated by pushing in the direction of the steering column.

The upper switch is used to adjust speed. It is a two part switch, marked '**I**' and '**R**'.

The '**I**' (increase) part of the switch has a raised dimple = increase in speed.

The '**R**' (reduce) part of the switch has a recessed dimple = decrease in speed.

Switching on:

- Press the accelerator pedal until the vehicle is travelling at the desired speed, (above 30 km/h).
- Tap the '**I**' button.
- Release the accelerator pedal, as the cruise control is now maintaining speed.

TO INCREASE SPEED WITH CRUISE CONTROL ON:

Hold down button '**I**' or tap it repeatedly: the speed is increased continuously or in steps of 2 km/h without using the accelerator pedal.

When button '**I**' is released the selected speed is stored and maintained.

TO DECREASE SPEED WITH CRUISE CONTROL ON:

Hold down button '**R**' or tap it repeatedly: the speed is reduced continuously or in steps of 2 km/h.

When button '**R**' is released the selected speed is stored and maintained.

CRUISE CONTROL cont.

Switching off:

Tap button '**O**': the cruise control is switched off and the vehicle slowly decelerates. To continue driving, depress the accelerator pedal in the usual way.

The cruise control is also switched off when:

- vehicle speed drops below 30 km/h
- the brake pedal is depressed, or
- the clutch pedal is depressed.

RESUMING THE STORED SPEED:

Tap button '**R**' at a speed above 30 km/h: the speed selected before the cruise control was switched off is resumed.

The stored speed is erased when the ignition is switched off.

WARNING:

Do not use the cruise control when road or driving conditions could require varying speeds. A constant speed may not be practical in heavy or varying traffic, or on winding, slippery or rough roads.

Remember that when the cruise control is maintaining your speed taking your foot off the accelerator pedal will not reduce speed. To quickly deactivate the cruise control you should press the brake or clutch pedal, or push the 'O' button.

The cruise control will not apply the vehicle’s brakes. Therefore the vehicle may gain speed when going down steep hills.

When climbing steep hills it is possible for the vehicle to lose speed. You may need to switch off the cruise control and instead use the accelerator pedal.

CHAPTER 2

Locks

Page

2-2 Keys and locks
2-2 Child safety rear-door switches
2-3 Manual door locks
2-4 Power door locks
2-4 Deadlocking
2-6 The remote control
2-8 Tailgate lock
2-9 Rear door lock
2-10 Emergency procedure for electric door locks

KEYS AND LOCKS

Keys

Before placing the key on your key ring, remove the key code number (if still attached) from the key. Please keep in a safe place, together with the Car Pass (a card containing information about the engine immobilizer) away from your vehicle. Then, if your key is lost, replacements can be ordered through a Holden Retailer by quoting the key code number and providing proof of ownership.

Free turning door locks

The door lock cylinder is designed to free turn if it is forcefully rotated without the correct key or if the correct key is not fully inserted. To reset, turn the lock with the correct key until its slot is vertical, remove the key and then re-insert it. If the lock still free turns, turn the key through 180 degrees and repeat the operation.

Note: This feature is provided as a theft deterrent – to prevent the lock being forced open. The force required to make the key 'free turn' reduces each time. As the force gets easier with each 'free turn' please do not attempt to demonstrate or test this feature, and always remember to fully insert the key when locking and unlocking the doors.

If you have problems regarding this, contact your Holden Retailer. Remember that your vehicle is covered for the first 3 years by Roadside Assist, refer to Chapter 9.

Child safety rear-door switches (4 door models)

Child proof switching helps prevent rear doors from being accidentally opened by small children inside the vehicle.

The switches are provided on the rear edge of rear doors, accessible when the door is open.

Using the key, turn the switch away from the vertical position: the door cannot be opened from the inside. It can only be opened by pulling up the inside door lock button and then raising the outside door handle.

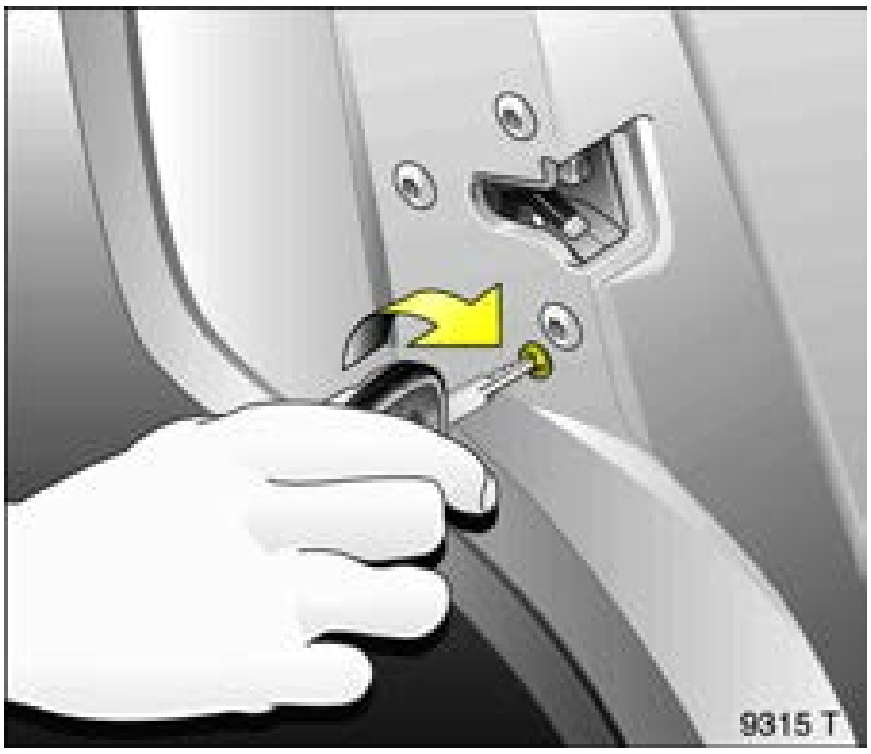

WARNING:

For safety, check that the child proof switch is operating correctly (after setting) by trying to open the door from inside the vehicle.

MANUAL DOOR LOCKS

Lock or unlock a front door

FROM OUTSIDE
To lock a front door from outside, turn the key in the door lock until the door lock-button moves fully down.

To unlock a front door, turn the key in the lock until the button lifts.

FROM INSIDE
To lock / unlock a front door from the inside, depress / lift its lock button.

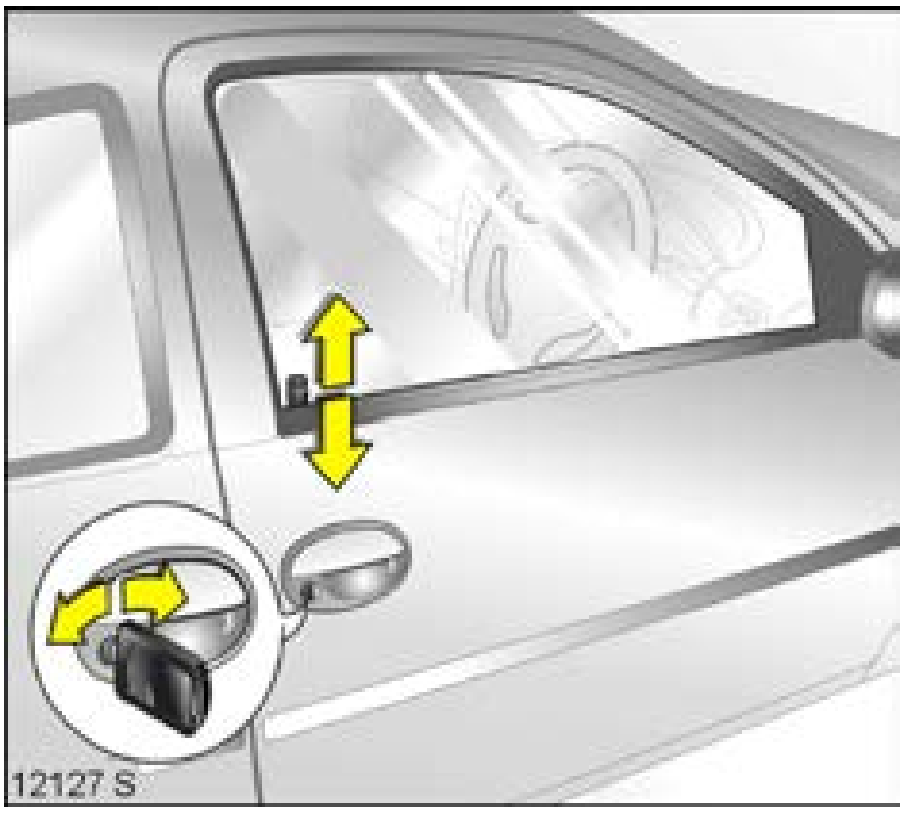

Lock or unlock sliding door (Combo)

FROM OUTSIDE
To unlock and open the sliding door, turn the key in the lock then pull the door handle towards the rear of the vehicle.

FROM INSIDE
To lock / unlock the sliding door from the inside, depress / lift its lock button.

To open the sliding door from the inside, pull the door handle towards the rear of the vehicle.

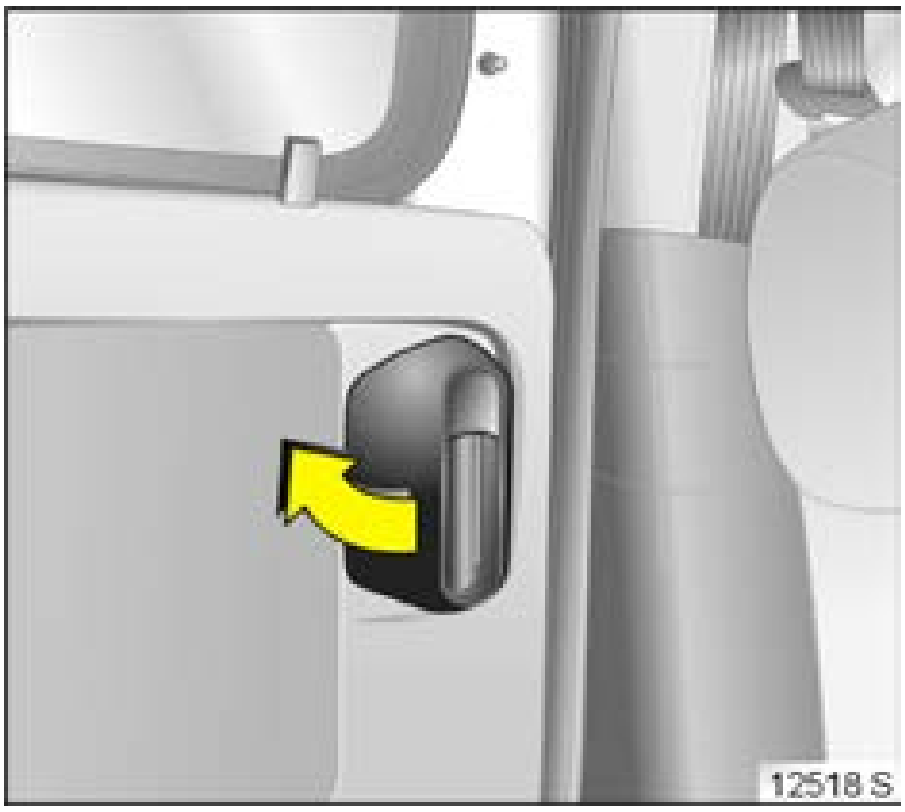

Fuel filler release

For vehicles fitted with central locking, the fuel filler flap is unlocked when you unlock the doors using the remote control. Otherwise, the fuel filler flap is opened manually to reveal a lockable fuel cap. A separate key is provided to unlock and remove this fuel cap lock. Refer to Chapter 5, Petrol filling.

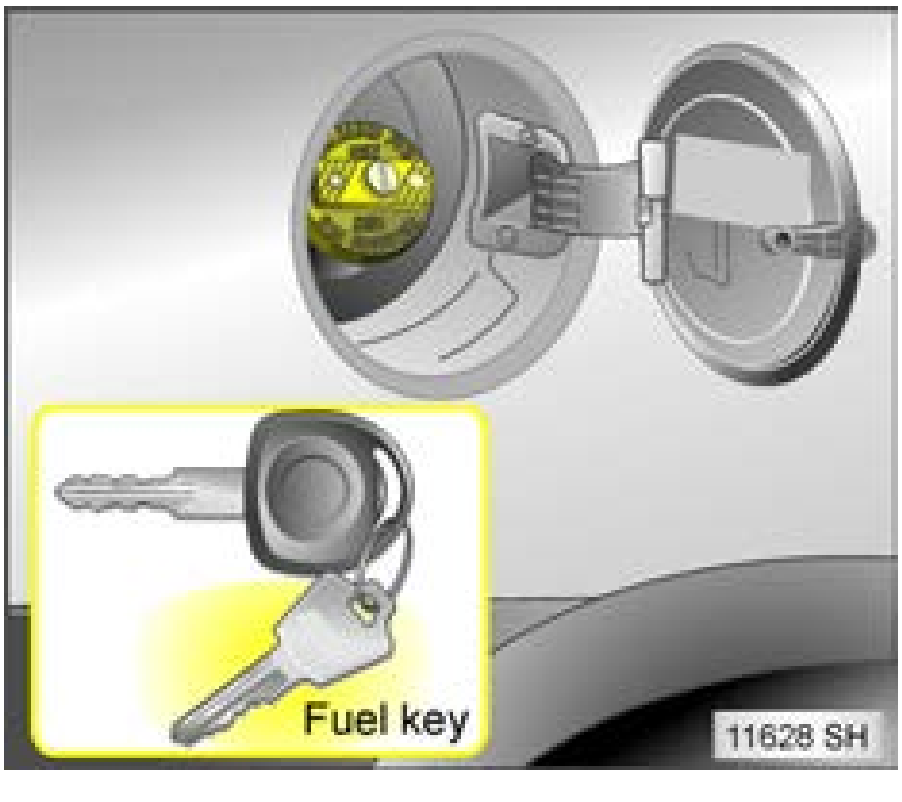

POWER DOOR LOCKS (if fitted)

Remote power door locks

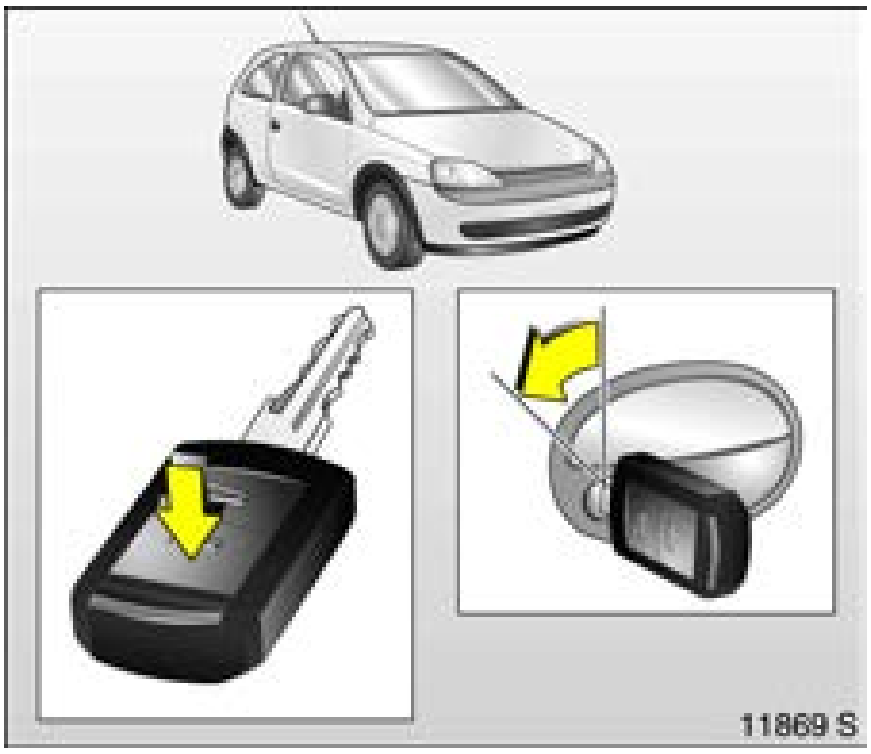

LOCKING THE VEHICLE

Press the rear button of the remote control or turn the key in the driver's door. This locks the doors, tailgate and fuel tank filler flap.

The light-emitting diode (LED) in the remote control lights up and the hazard warning lights flash briefly to show that the remote control is operational.

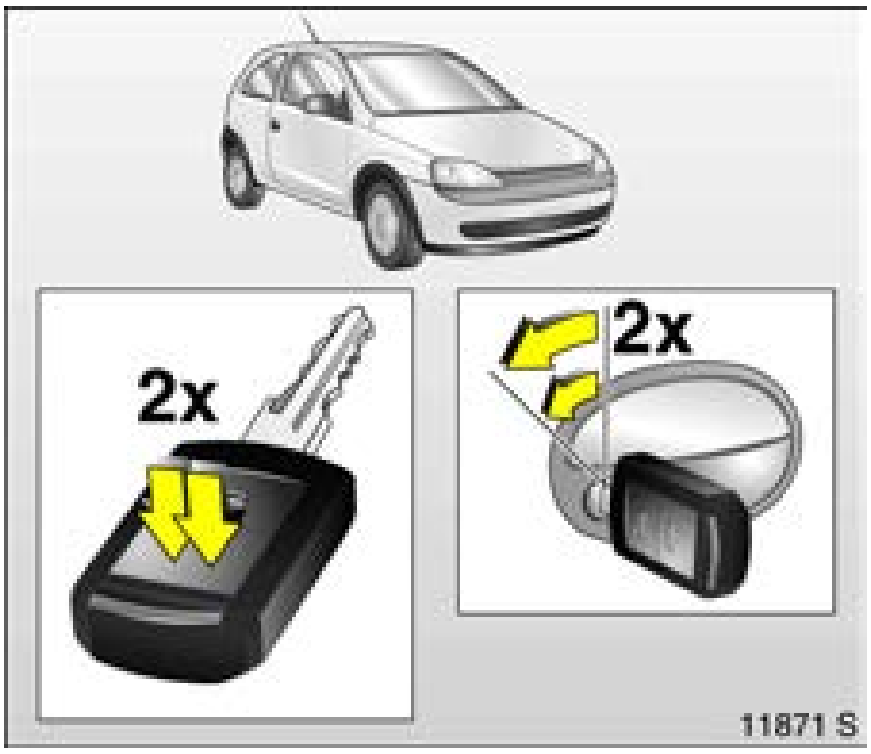

DEADLOCKING

To ***deadlock*** all doors, press the rear button on the remote control again within 10 seconds after locking

or

turn the key in the driver's door lock towards rear of vehicle again within 10 seconds after locking, then turn the key back to the vertical position and remove it.

Deadlocking locks all of the doors so that no door can be opened – even if entry is gained by breaking the glass. The doors can only be unlocked from outside of the vehicle with the ignition key.

WARNING:

Do not use deadlock if there are people in the vehicle. The doors cannot be unlocked from inside.

TO LOCK DOORS FROM INSIDE

Press the lock buttons. A door is locked when its inside lock button is down and is unlocked when its lock button is up.

To prevent the driver being inadvertently locked out, the lock button on the driver's door cannot be depressed when the door is open.

For safety reasons, the vehicle cannot be locked if the ignition key is in the ignition lock.

If the driver's door is not closed properly, the central locking system will unlock again immediately after locking.

POWER DOOR LOCKS (if fitted) cont.

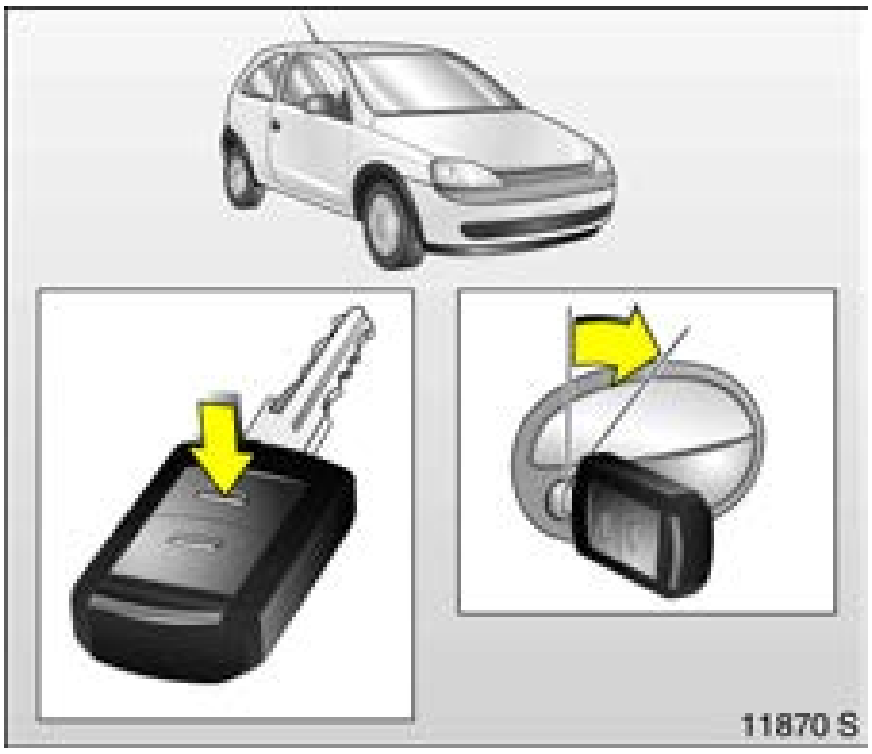

UNLOCKING THE DRIVER'S DOOR ONLY

Direct the remote control towards the vehicle and press the front button on the remote control unit **once**

or

turn the key in the driver's door **once** towards the front of the vehicle, then turn the key back to the vertical position and remove it. Unlocking the doors turns off deadlocking.

UNLOCKING ALL DOORS, TAILGATE AND FUEL FILLER FLAP

Direct the remote control towards the vehicle, press the front button on the remote control unit **twice**,

or

turn the key in the driver's door **twice** towards the front of the vehicle, then turn the key back to the vertical position and remove it. Unlocking the doors turns off deadlocking.

This unlocks the doors, tailgate and fuel tank filler and switches on the interior light.

AUTOMATIC RELOCKING

After unlocking the vehicle using the remote control, the vehicle will be automatically locked again after 30 seconds if a door or the tailgate has not been opened.

THE REMOTE CONTROL (if fitted)

The remote control

- The remote control is powered by a battery inside the key head. A weakening battery is indicated by a progressive 'loss of range', which means you must be closer to the vehicle when pressing the key. Originally the key should have a range of approximately 3 metres.
- Tinting the vehicle's windows reduces the range of the key if the tinting material has a metallic film.
- Treat the remote with care; it should be protected against moisture and should not be operated unnecessarily.
- When operating correctly, the light in the remote control lights up and the hazard warning lights on the vehicle flash briefly.

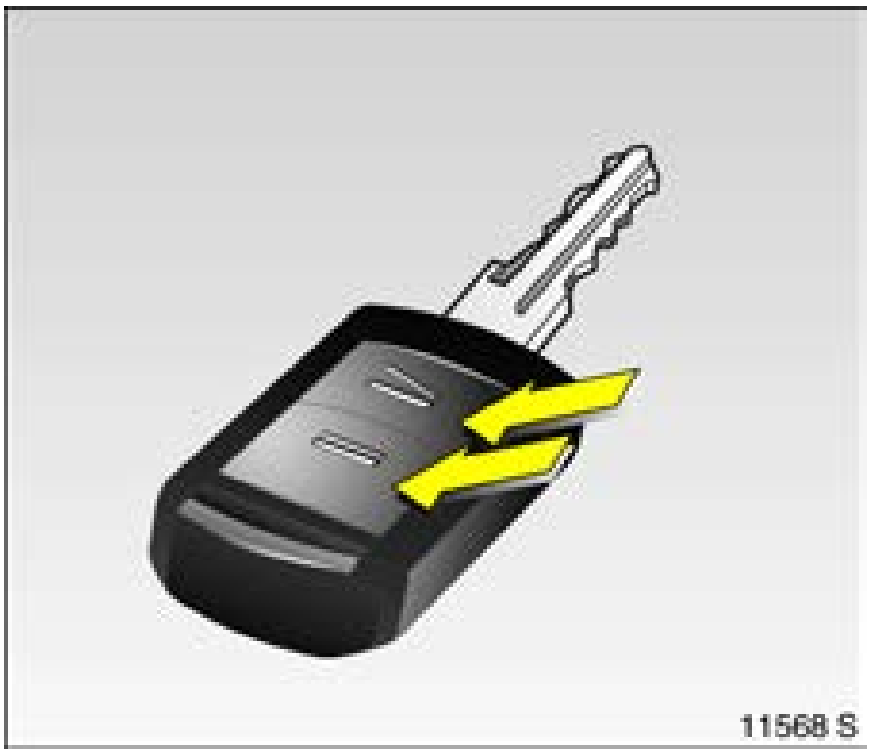

Remote control troubleshooting

If the central locking system cannot be operated with the remote control, this may be due to one of the following reasons:

- The range of the remote control has been exceeded. Move closer to the vehicle.
- The battery voltage of the remote control unit is too low. Change the battery as detailed on the following page.
- The remote control has been operated too many times in succession outside the vehicle's normal remote operating range. Resynchronise the remote control as detailed on the following page.
- Overload of the central locking system has occurred as a result of repeated operation at short intervals. The power supply will be cut off for approximately 30 seconds.
- Interference from higher powered radio waves from other sources may affect the operation of the central locking system. Open the vehicle by turning the key in the lock.

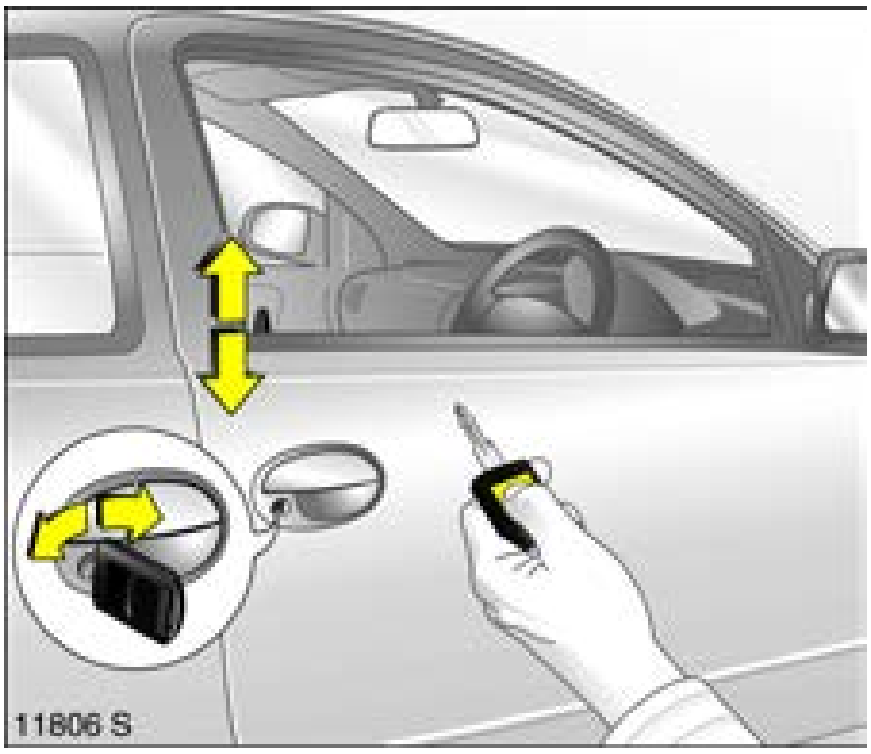

THE REMOTE CONTROL (if fitted) cont.

Synchronizing the remote control

In the event of malfunctions, synchronise the remote control:

- Switch on ignition; system will then remain in synchronising mode for 30 seconds.
- Briefly press any button on the remote control unit while the key is in the ignition.
- The central locking system locks and unlocks to show that the remote control has been programmed.

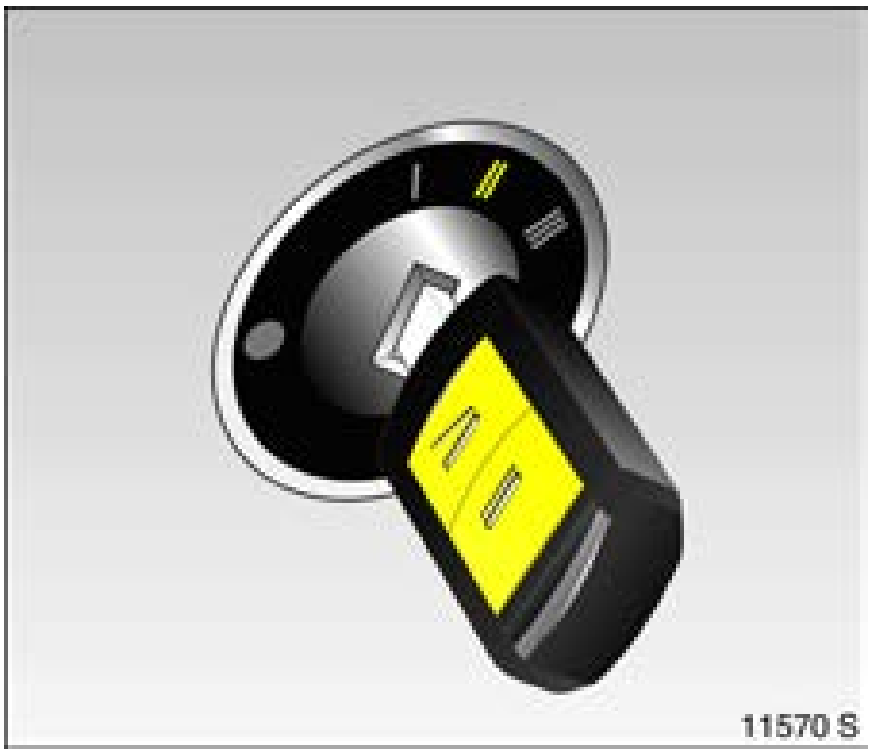

Replacing the battery

Disengage the remote control from the key part using a screwdriver and open the remote control battery cover. Replace the battery, ensuring that it is inserted correctly. Close down the remote control so that it 'clicks' into the key part.

The battery change must be performed within 3 minutes, otherwise the remote control will have to be resynchronised.

WARNING:

Keep lithium batteries away from children and pets. Swallowing a lithium battery can cause serious internal injury. If swallowed, contact a doctor immediately.

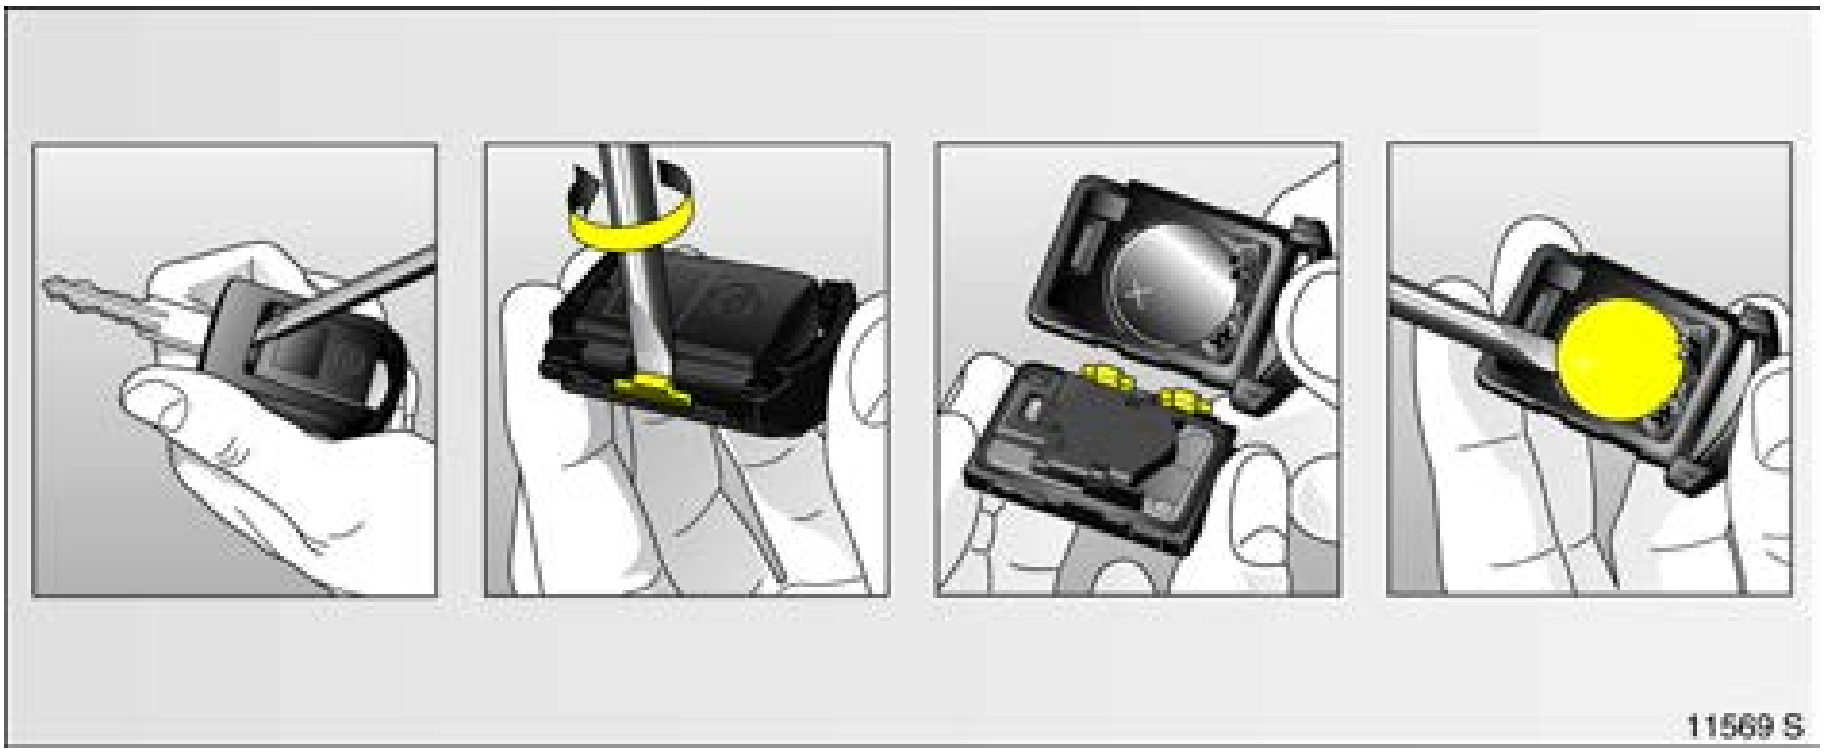

TAILGATE LOCK (BARINA)

The central locking system cannot be switched on or off from the tailgate lock.

Provided that the key slot is horizontal, the tailgate will lock / unlock when the doors are locked / unlocked.

To keep tailgate permanently locked (regardless of door lock position) turn the key slot to the vertical position.

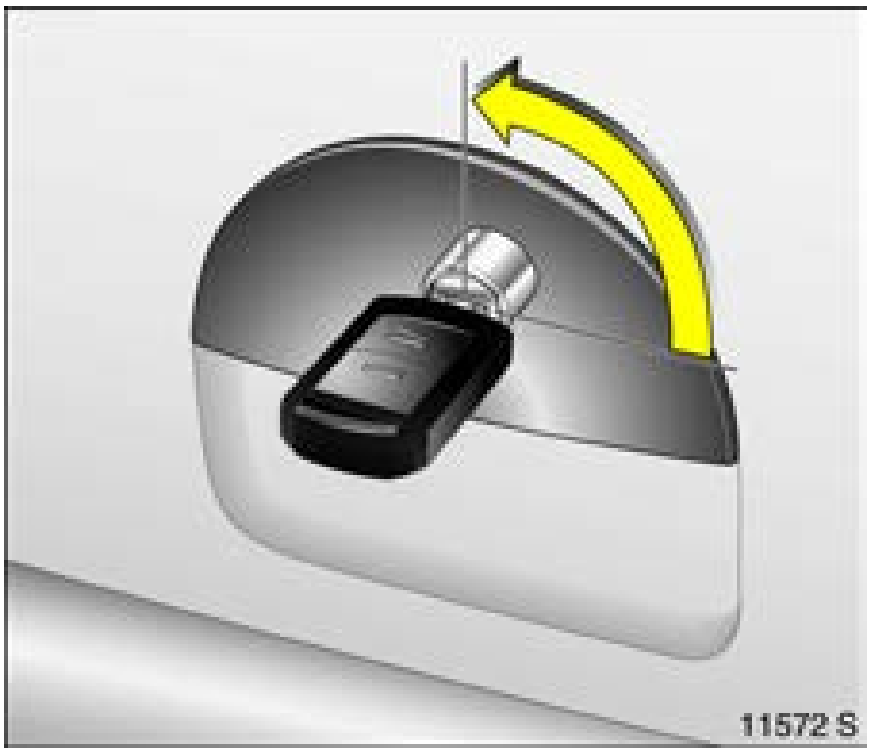

To unlock the tailgate when the doors are locked, turn the key fully clockwise, as far as it will go. *To guard against being locked out, the key cannot be removed in this position.* Press the button inwards.

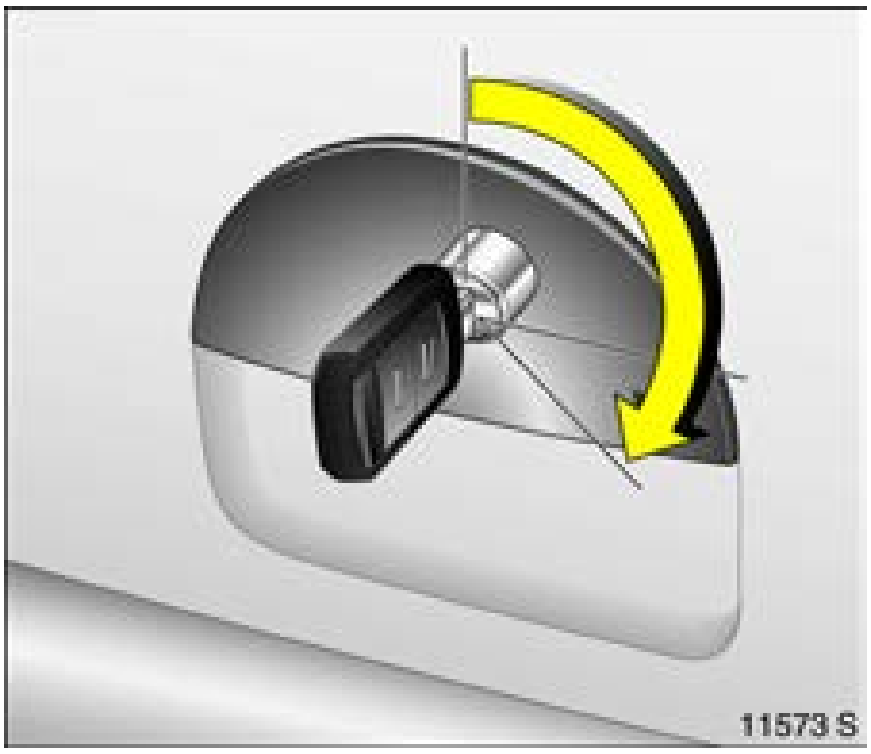

To return the operation to locking / unlocking in synchronisation with the doors, after closing the tailgate, turn the key back to the horizontal position.

Turning the key to the vertical position will disconnect the tailgate lock from the central locking system.

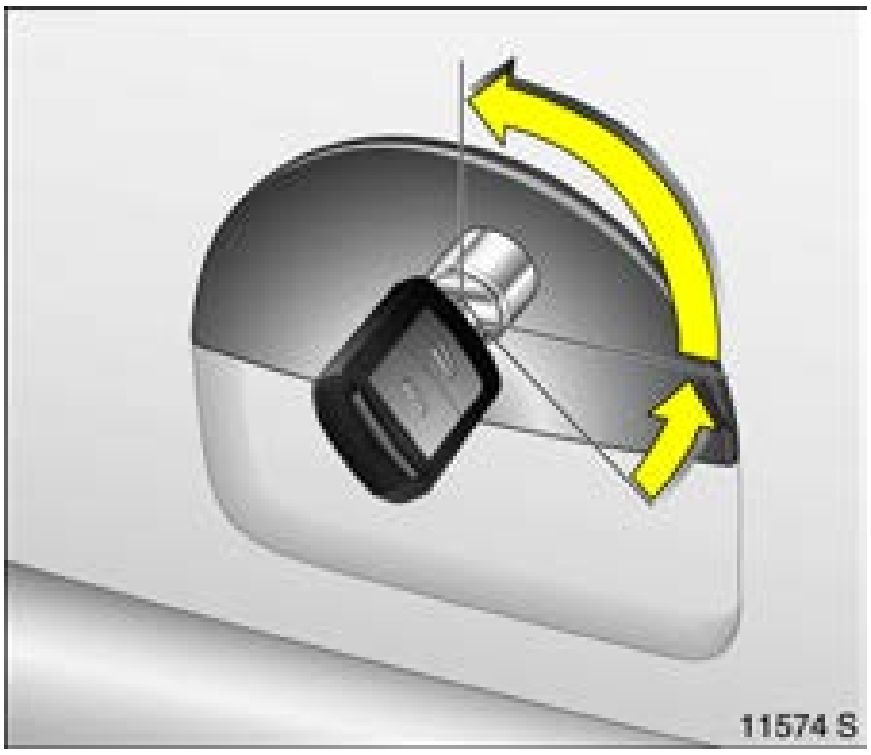

REAR DOOR LOCK (COMBO)

Lock or unlock the doors

To lock the rear doors, turn the key to the vertical position.

To unlock the rear doors, turn the key to the horizontal position.

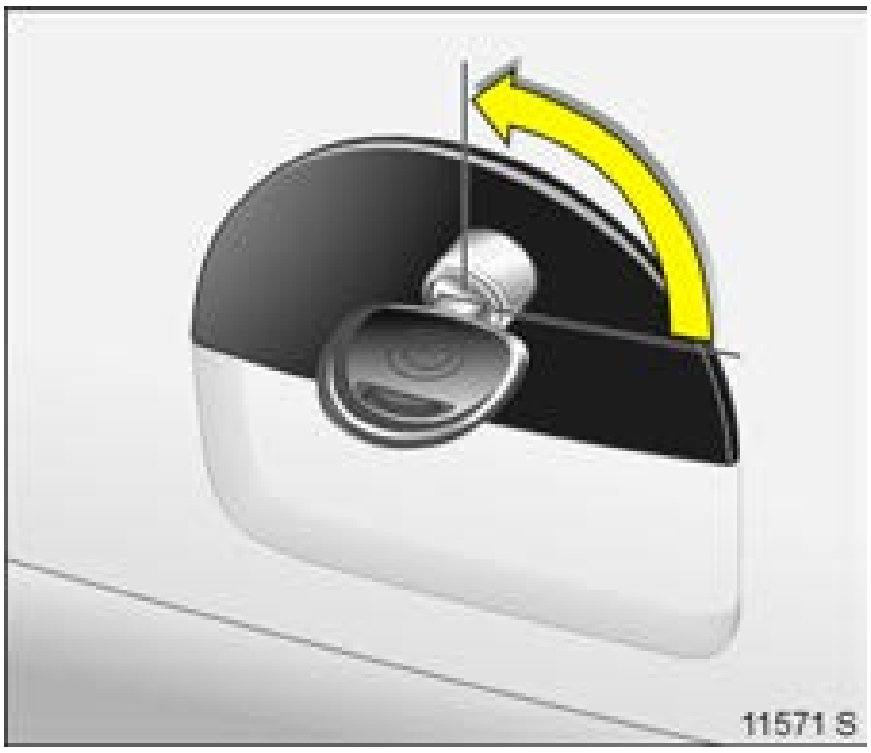

Open the rear doors

To open the rear doors from the outside, lift the door handle and open the right-hand door. Then release the left-hand door by pressing the handles.

Both doors can be opened up to 180° by pressing the door catch as illustrated and swinging the door outwards.

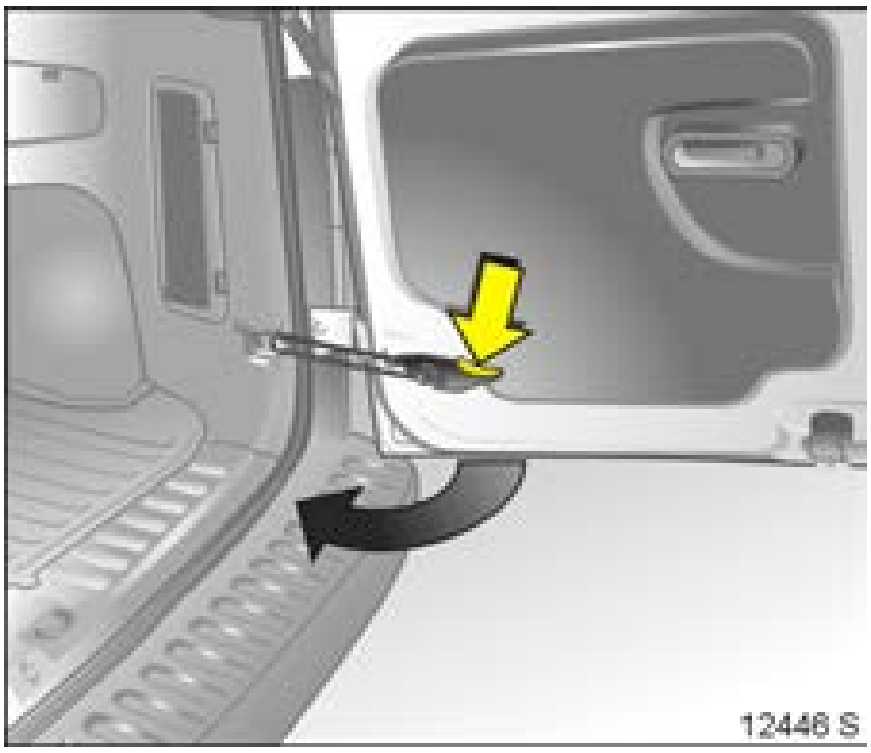

Close the rear doors

The doors are held open when they are opnend 90°. To close the rear doors, press the door catch as illustrated and swing the doors inwards.

EMERGENCY PROCEDURE FOR ELECTRIC DOOR LOCKS (if fitted)

Emergency – flat battery

Unlocking and locking the driver's door in the event of malfunction of the central locking system (if fitted).

(e.g. If the vehicle battery is flat.)

(A) To unlock: Turn the key in the driver's door-lock towards the front of the vehicle, turning it beyond its resistance point until it will not move any further. Turn the key back to the vertical position and remove it; raise the door handle. The lock button remains in the depressed position.

(B) To lock: With the driver's door closed, turn the key towards the rear of vehicle until it will not move any further. Turn the key back to the vertical position and remove it.

The other doors can be unlocked and locked by operating the interior lock buttons.

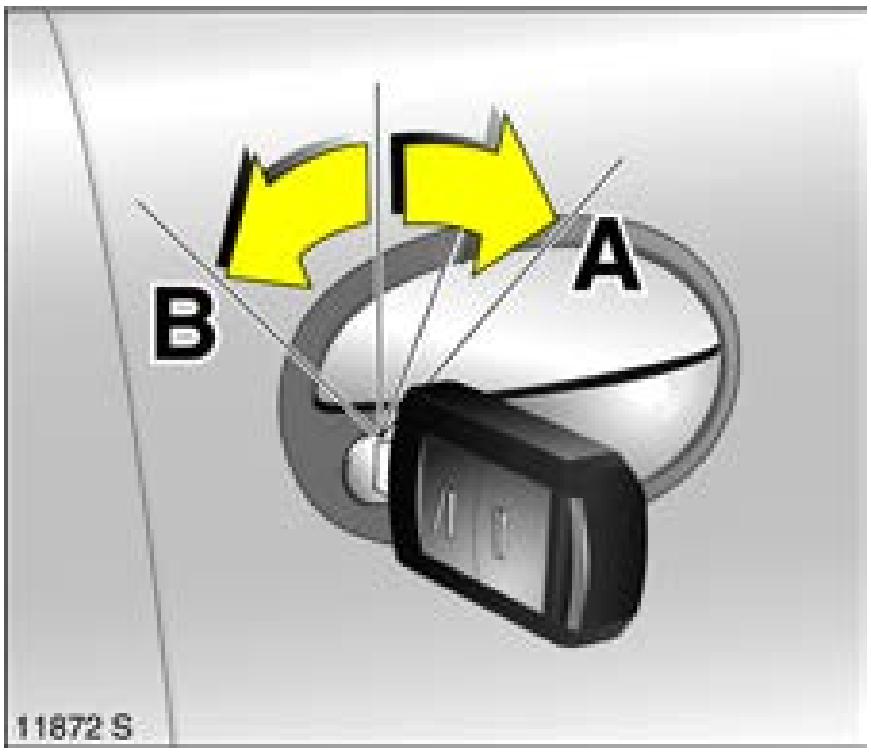

Emergency – accident

Locked doors are unlocked automatically in the event of an accident (to allow assistance from outside), provided that the ignition is not switched off.

CHAPTER 3

Know your car

Page

3-2 Front seat adjustment
3-3 Head restraint adjustment
3-5 Seat folding
3-6 Luggage compartment enlargement
3-7 Transporting objects
3-9 Seat belts
3-10 Seat belt height adjustment
3-12 Child restraints
3-15 Park brake
3-15 Interior lights
3-15 Reading lights
3-16 Luggage compartment lights
3-17 Convenience features
3-19 Windows
3-21 Mirrors

FRONT SEAT ADJUSTMENT

Forward / rearward

Pull the handle up at the front of the seat then slide the seat forward or backward. After releasing the handle try to move the seat back and forth to check that the catch has locked in position.

Never adjust the driver's seat whilst driving. The seat could move suddenly and cause the driver to lose control.

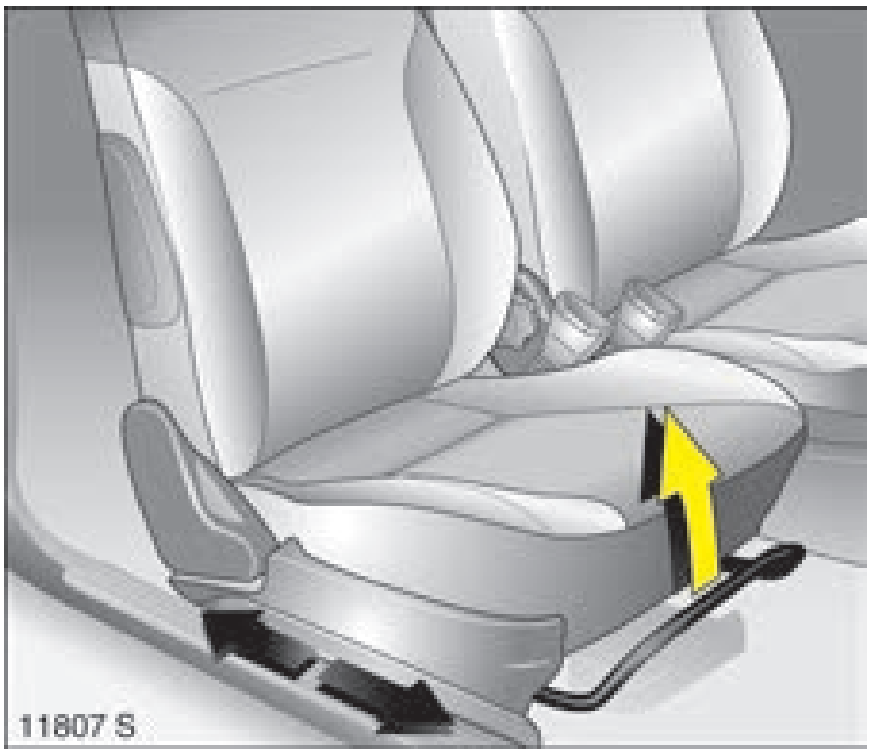

Recline / incline

To adjust the angle of the back of the seat, turn the large, toothed wheel illustrated.

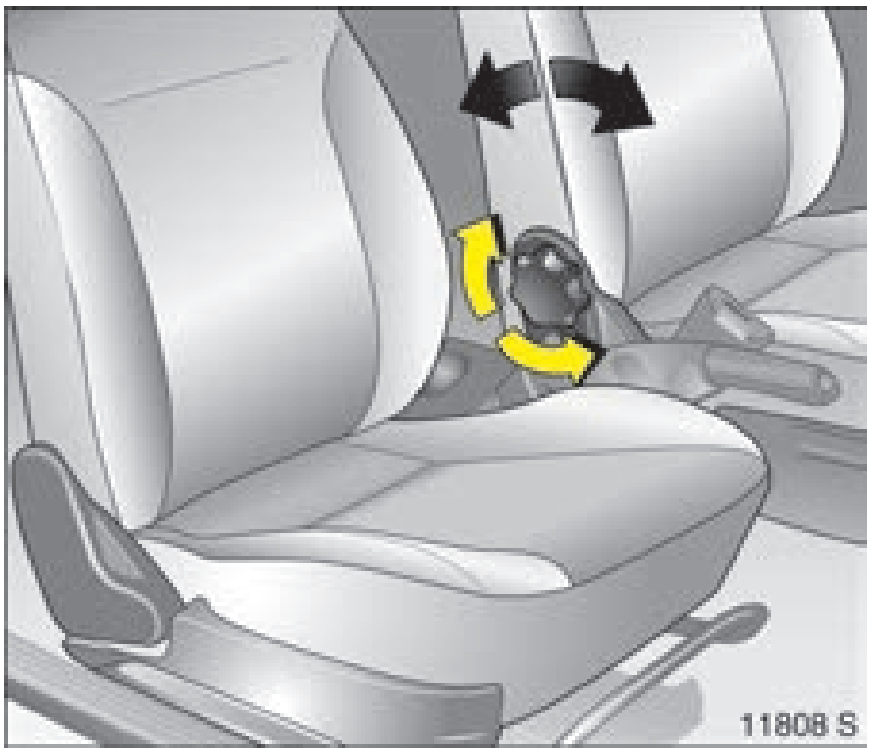

WARNING:

To avoid reducing the effectiveness of seat belts it is recommended that the reclining seats be used in no more than a semi-reclined position when the vehicle is moving. The fully reclined position should be used only when the vehicle is stationary.

Driver's height adjustment (if fitted)

Lift the lever at the front, left-hand side of the seat and remove body weight from the seat to raise the seat.

Lift the lever and press down on the seat with body weight to lower the seat.

Never adjust the driver's seat whilst driving. The seat could move suddenly and cause the driver to lose control.

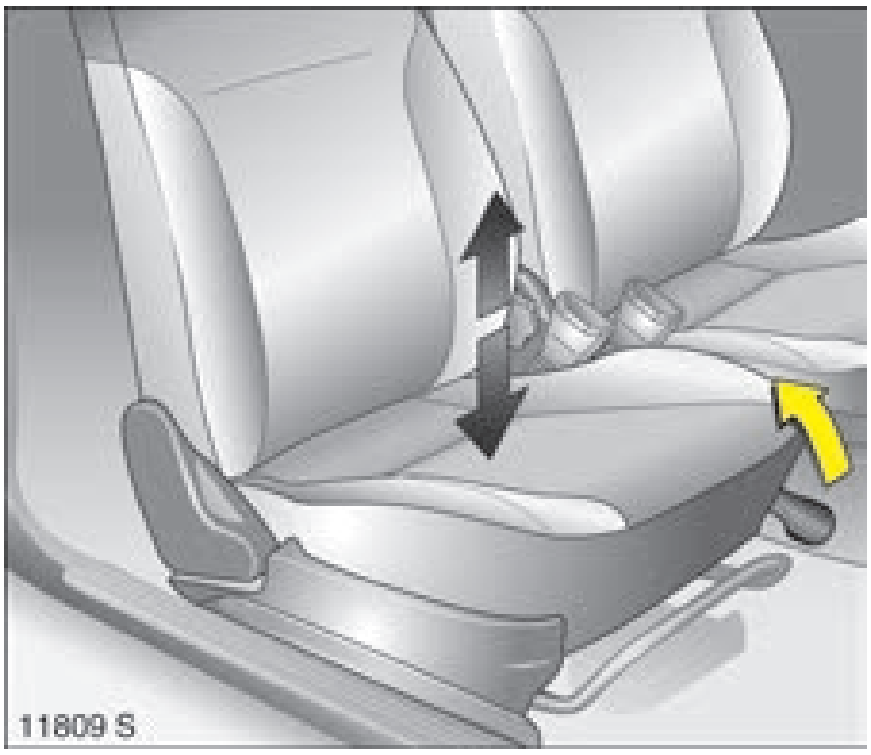

HEAD RESTRAINT ADJUSTMENT

Head restraint adjustment

To adjust the head restraint height hold the restraint firmly at the top, tilt it forwards, lift up or push down and then release.

WARNING:

For safety, make all adjustments to the driver's seating and controls prior to operating the vehicle; do not make these adjustments while the vehicle is moving.

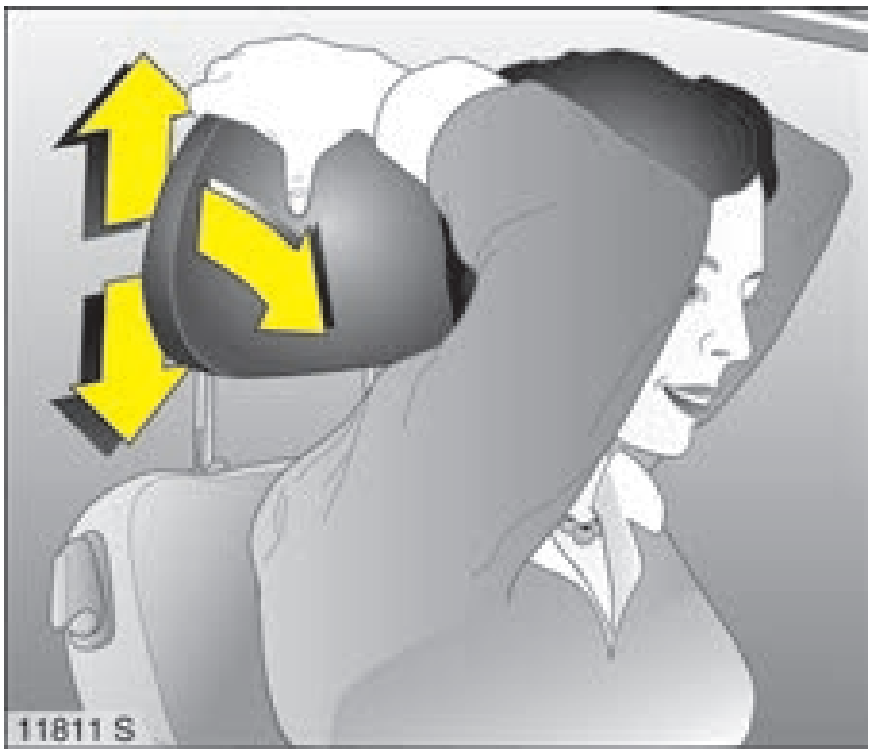

Head restraint height

The upper edge of the head restraint should be approximately level with the top of the head – never at neck level. If this is not possible for very tall passengers, the restraint should be set at its highest position.

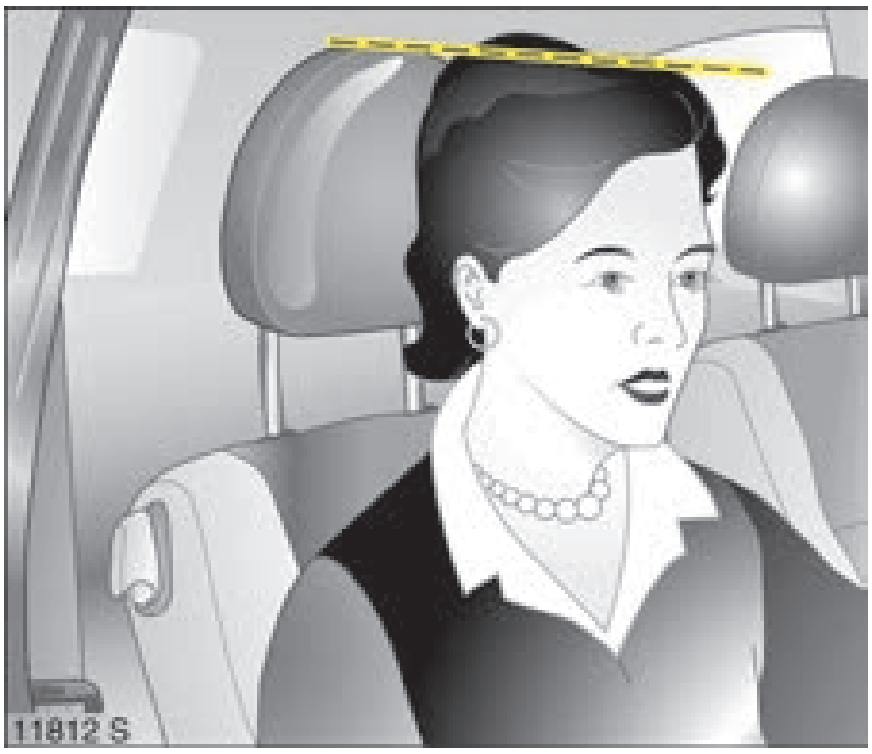

Head restraint removal

To remove head restraints, squeeze both locking springs while pulling head restraint upward.

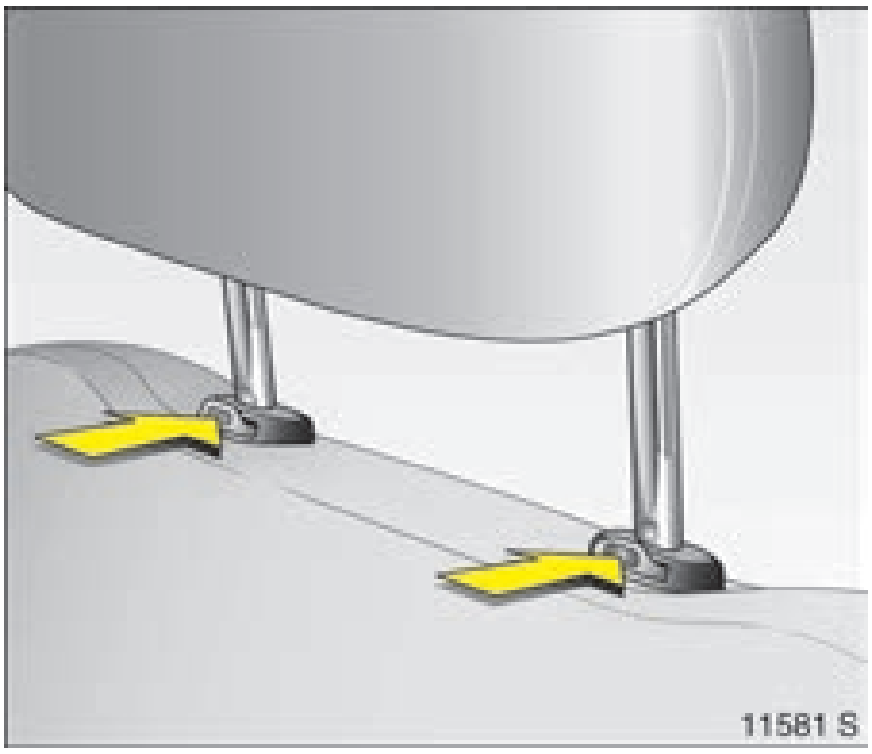

HEAD RESTRAINT ADJUSTMENT cont.

Front seat head restraints (if fitted)

In the event of a rear end impact, the front head restraints will automatically tilt forward. The head is more effectively supported by the head restraint and the risk of neck injury is reduced.

Rear-seat head restraints (if fitted)

To improve visibility to the rear if no one is sitting in the rear seats, push down the rear head restraints. To do so, press the locking spring located at the base of each left-hand side restraint stem.

Remove the rear head restraints prior to enlarging the luggage compartment. To do this, press the locking springs and pull the head restraints upwards.

If the rear seat position is occupied, adjust the head restraint to the correct height as previously outlined.

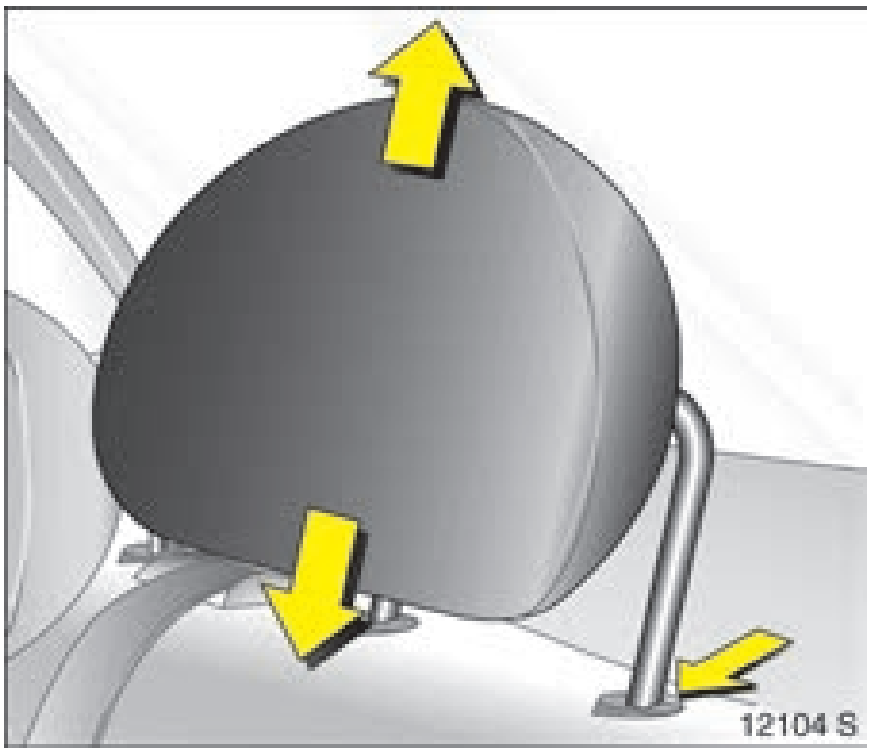

SEAT FOLDING

Front seat folding (2 door Barina models)

To allow easy entry and exiting of the rear seating positions, fold the front seat forward by pulling the lever upward.

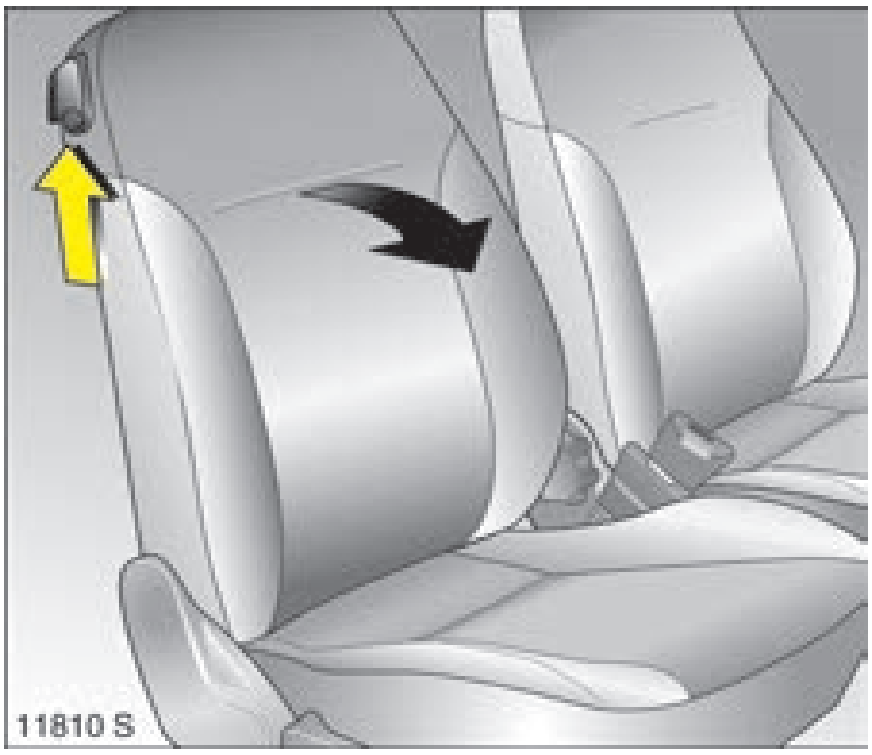

Rear seat backrest folding (if fitted)

To avoid injury from passing traffic, don't stand on the road side of the vehicle when converting the rear seat.

One or both rear backrests may be folded forward (60/40 split) to accommodate long objects. Prior to folding the seat, place the tongue of the seat belt into the holder on the side trim (if fitted).

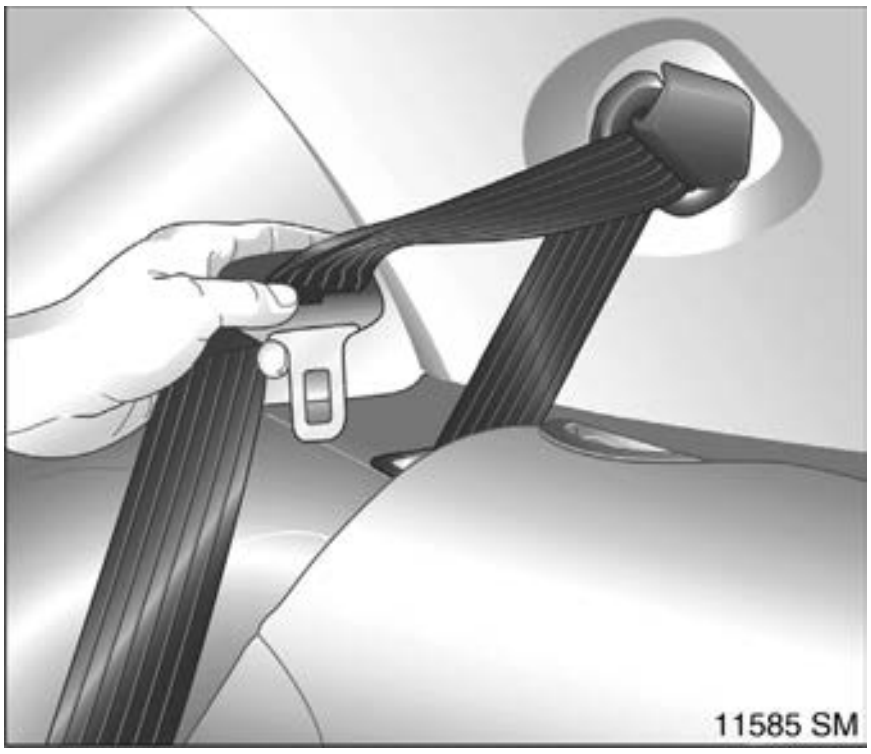

Disengage one or both rear backrests by depressing the push buttons located at the top, door-side of the seat and folding the backrest forward.

When repositioning rear seat backrests, pull the seat belt forward to ensure it is not trapped.

Also ensure that the seat-back is firmly locked into the upright position by grasping and attempting to move it.

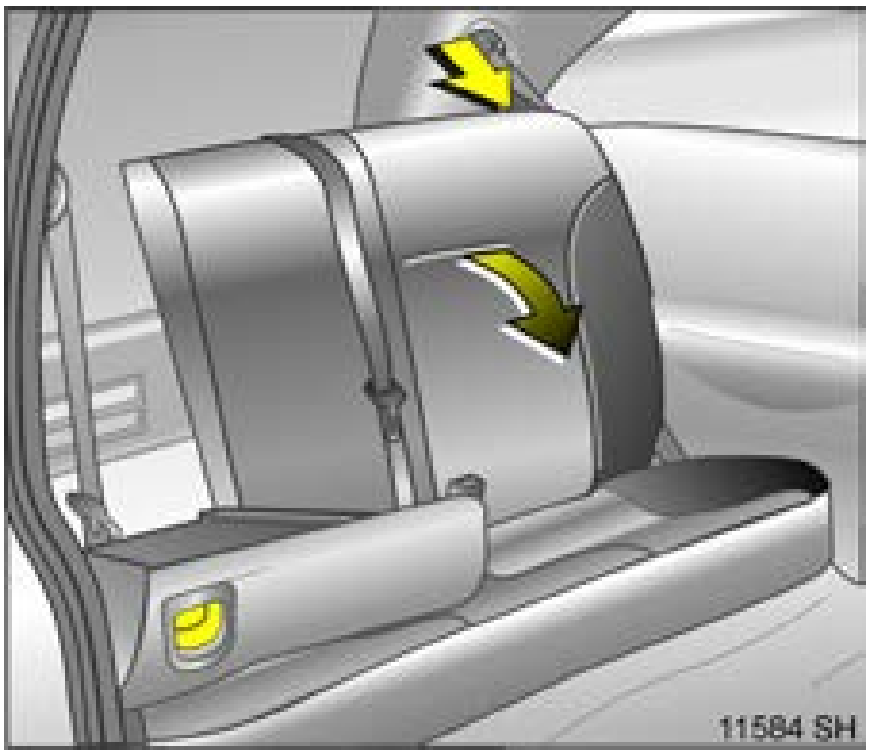

LUGGAGE COMPARTMENT ENLARGEMENT

BARINA

Place the tongues of the seat belts into the holders on the side trim (if fitted).

Remove the rear seat from the floor by grasping at the front edge in the areas indicated by the arrows and pulling it upwards. When the front of the rear seat is clear of the floor, pull it forwards.

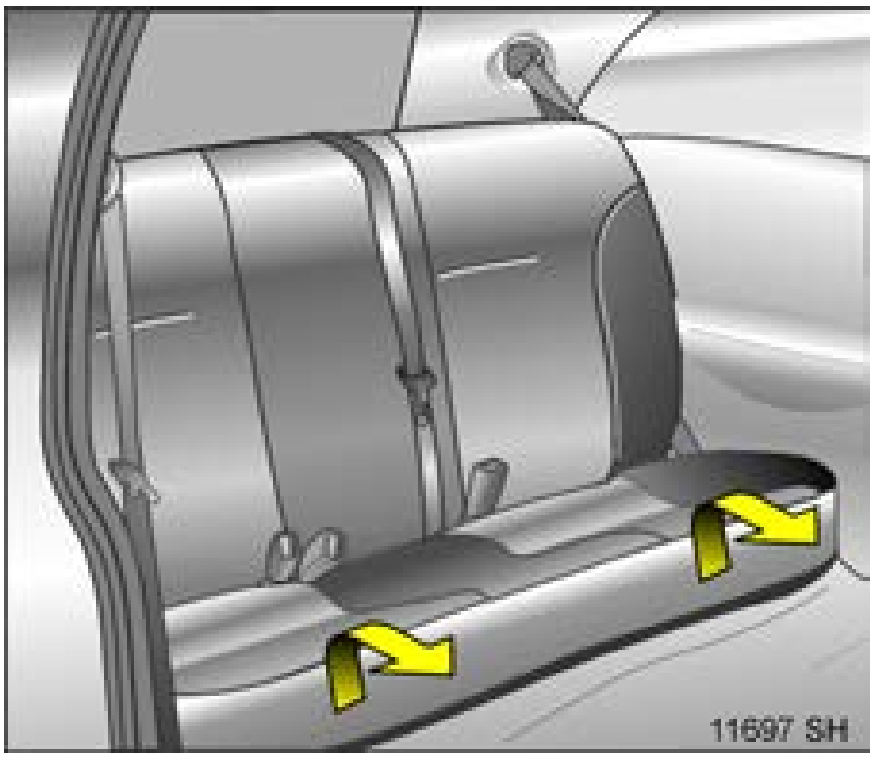

Swing the rear seat forwards. Fold the rear seat backrests forward as described on the previous page.

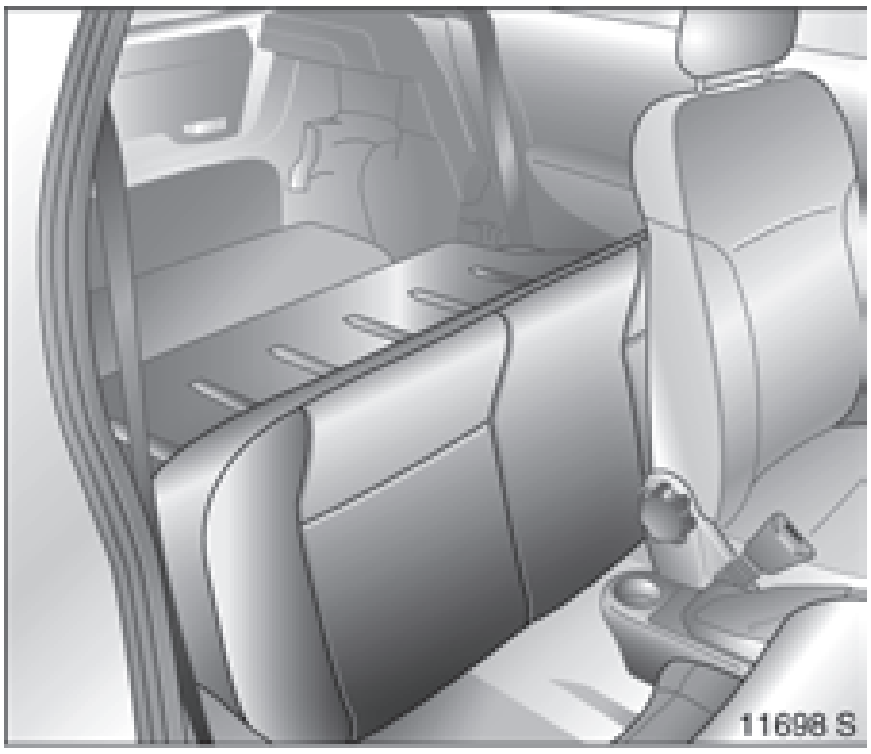

Repositioning the rear seats

Reposition the backrests as described on the previous page.

Fold the rear seat down and push it into place between the backrests and the floor. Press firmly on the front edge of the rear seat in the areas indicated by the arrows to lock the seat into place.

Ensure that the rear seat is firmly attached to the floor by grasping it and attempting to move it.

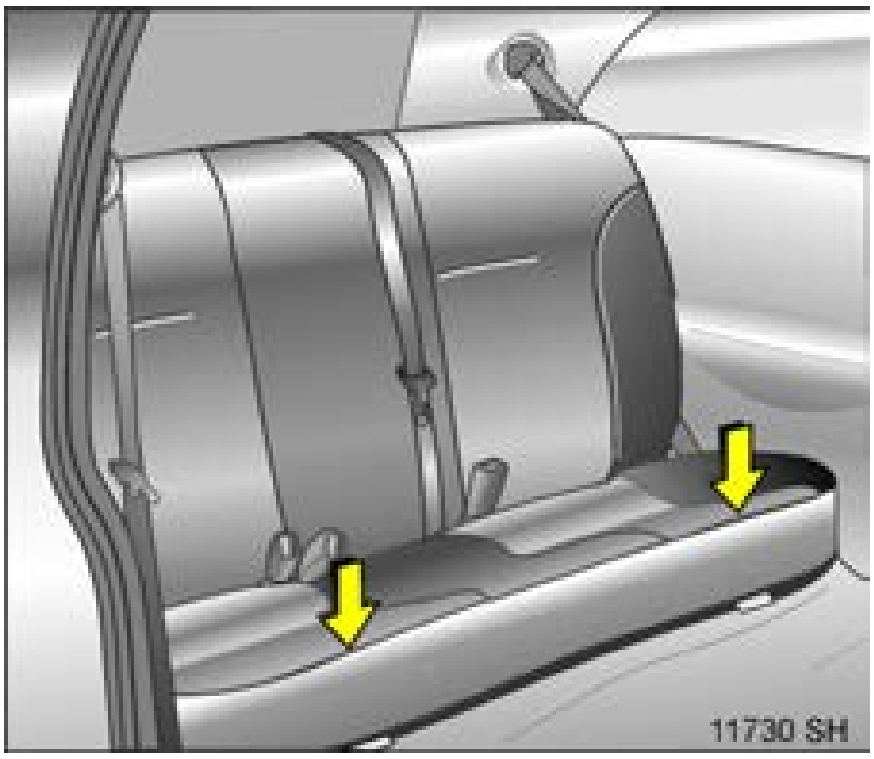

TRANSPORTING OBJECTS

Long objects and tall objects

To transport long objects in models fitted with rear seats, fold the rear seat backrest forward as previously described in this Chapter.

To transport tall objects, unhook the luggage compartment cover at the tailgate. Remove the cover from the side guides and place it behind the seat backrests.

Note: Avoid transporting bulky objects that cause the tailgate to be open or ajar. This can allow exhaust fumes to enter the vehicle.

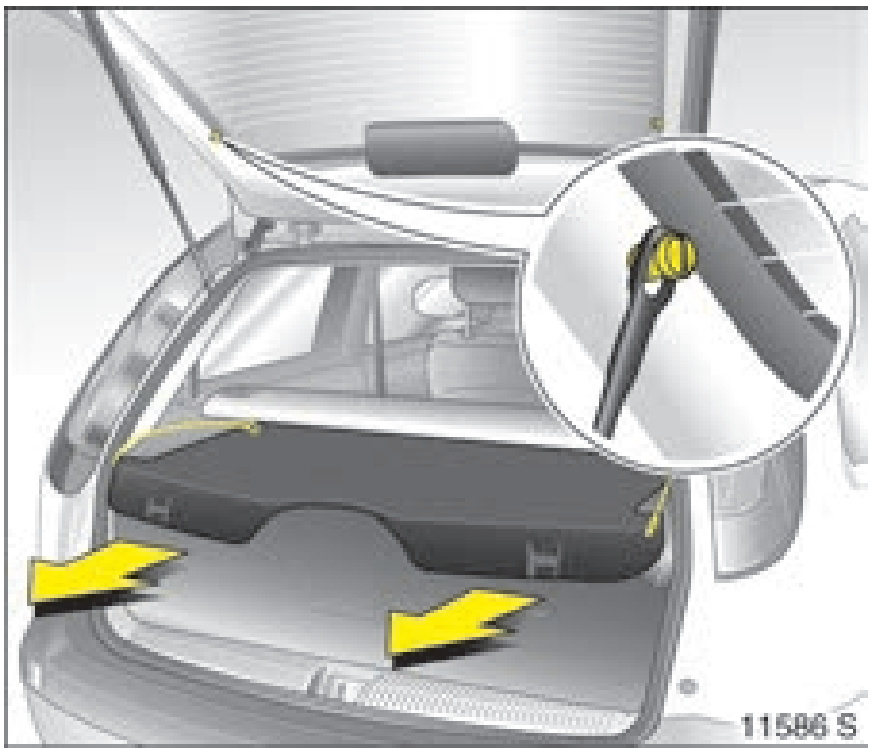

Heavy objects

Heavy objects in the luggage compartment should be placed as far forward as possible against the rear seat backrests (if fitted) or the restraining lattice (if fitted). In models with rear seats, if the rear seat backrests are folded down, position the objects against the front seat backrests. Ensure that backrests are locked in position.

No loads should exceed the maximum allowable vehicle weight. For weight limitations refer to Chapter 10.

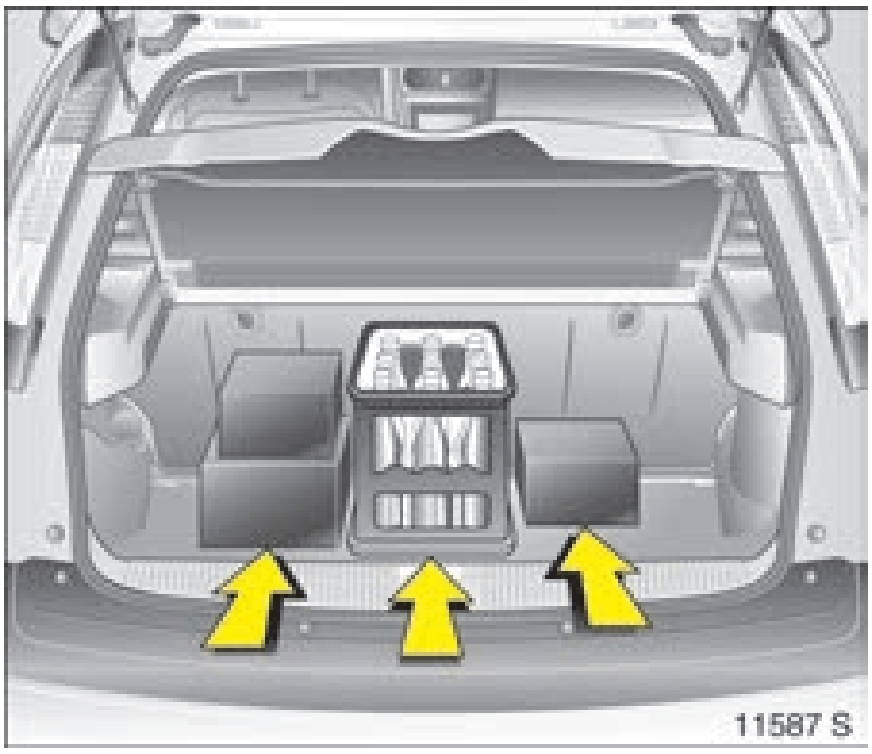

Hanger hooks (if fitted)

On the back of the rear seat backrests two hanger hooks are provided on which carry bags may be hung. The maximum load per hook is 10 kg.

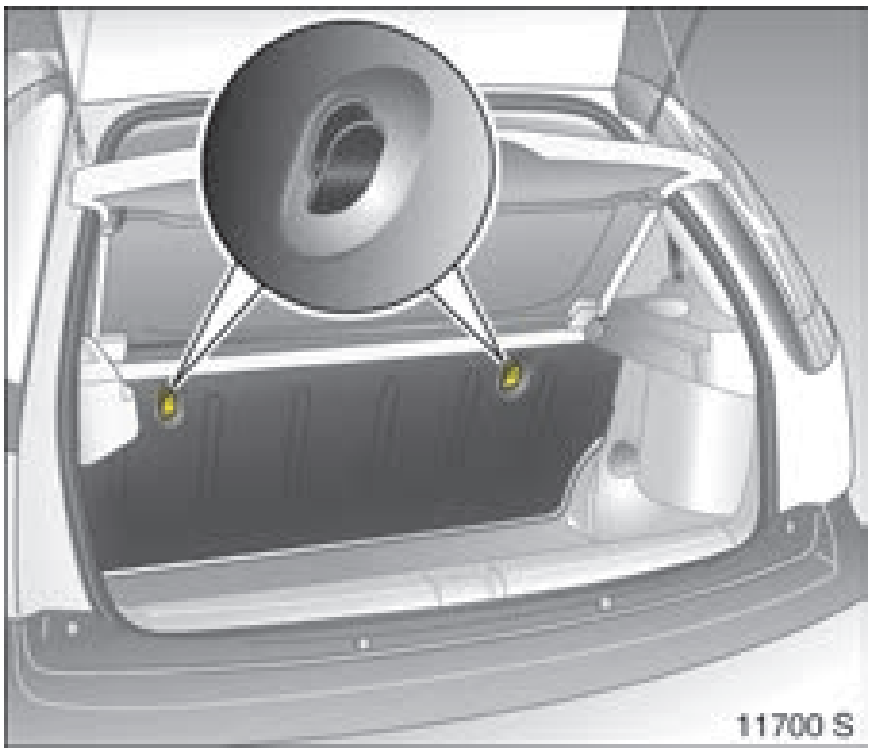

TRANSPORTING OBJECTS cont.

COMBO

Restraining lattice

The cargo should be secured so that it cannot slip and must not obstruct the driver's view in the mirror.

The restraining lattice helps to protect the occupants if the cargo does move, for-instance, in an accident or sudden braking. It should, therefore, be in position at all times when carrying goods in the rear compartment.

It is recommended that:

- loads are placed up against the restraining lattice
- long, thin items of cargo are positioned width-ways across the vehicle to minimise penetration risk
- objects are not attached to the front of the restraining lattice.

SEAT BELTS

Lap-sash belts

To put on a lap-sash seat belt, pull the metal tongue across your body and clip it into the buckle. When the metal tongue has locked safely into place you will hear a click. After fastening, settle the belt at the hip, then tension the belt by tugging the sash upward. Any extra belt length will retract automatically.

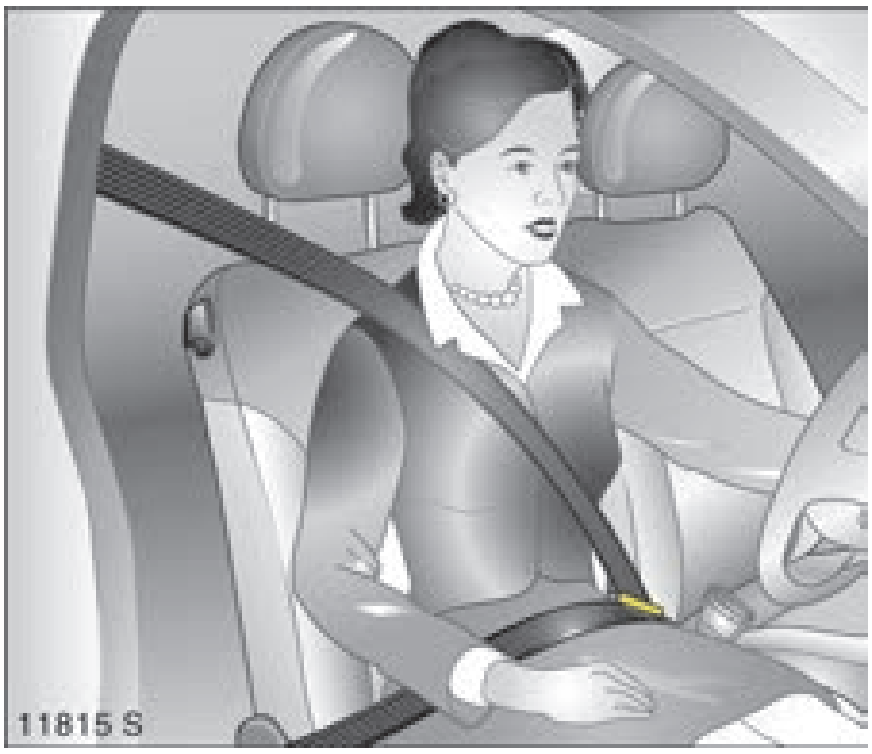

The lap section should be worn as low as possible on your hips, not on your waist. Make sure the sash and lap sections of the seat belt are free from twists and fits firmly.

The emergency-locking retractor allows you to move freely while the vehicle is travelling normally. The belt will lock immediately on fast braking, impact with a solid object or any quick movement by the wearer.

To undo the belt, press the release button on the buckle and allow the belt to retract. Check that it fully retracts without twisting or turning.

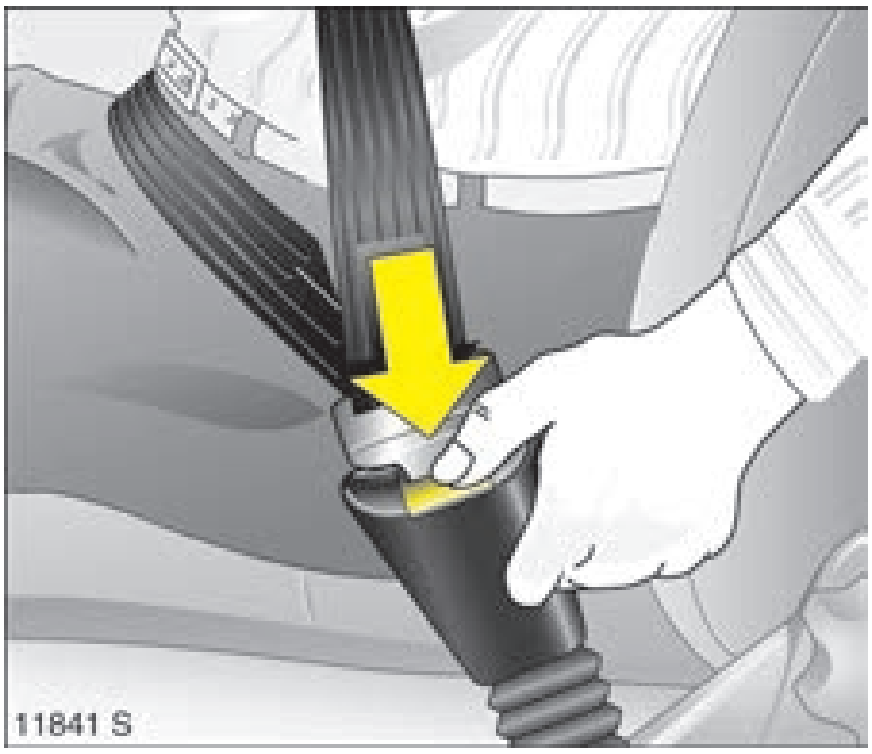

Seat belt pretensioners

The front seat belt system incorporates (once-only) seat belt pretensioners. In the event of a front-on or rear-end collision the belt buckles are pulled downwards; the diagonal and lap belts are instantaneously tightened.

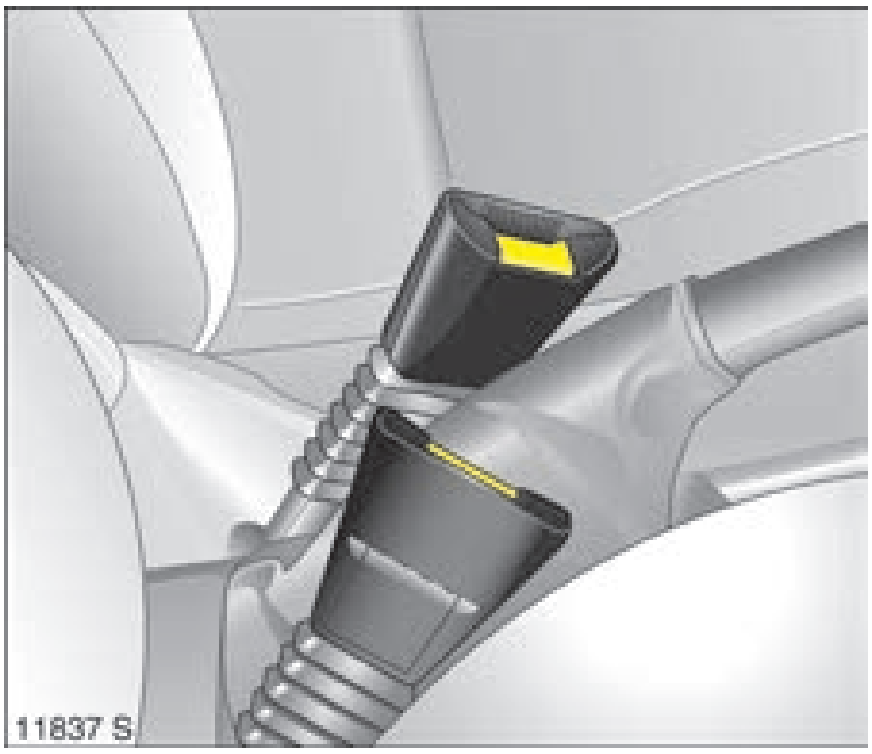

If the seat belt pretensioners have been actuated the control indicator lights up. Actuation may also be indicated by yellow tabs on the belt buckles. If the belt pretensioners have been activated they must be replaced by a Holden Retailer. The seat belts remain operational even when the belt pretensioners have been actuated.

SEAT BELT HEIGHT ADJUSTMENT

WARNING:

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oil and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

It is essential to replace the entire assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious. Belts should not be worn with straps twisted.

Each seat belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

No modification or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

The positioning of the tongue restrictor must never interfere with, or stop, the belt from fully retracting.

Seat belt height adjustment

Note: Do not adjust the seat belt height while driving.

TWO DOOR BARINA AND COMBO MODELS

For adjustment of the seat belt upper anchorage points:

- Tilt the belt guide inward at the top.
- Slide the belt guide to the desired height and release it.
- Allow the guide anchorage to lock audibly into position.

Adjust the height so that the belt passes over the wearer's shoulder and rests against the shoulder. It must not pass over the neck or upper arm. Short people should select a low belt guide position and tall people a higher one.

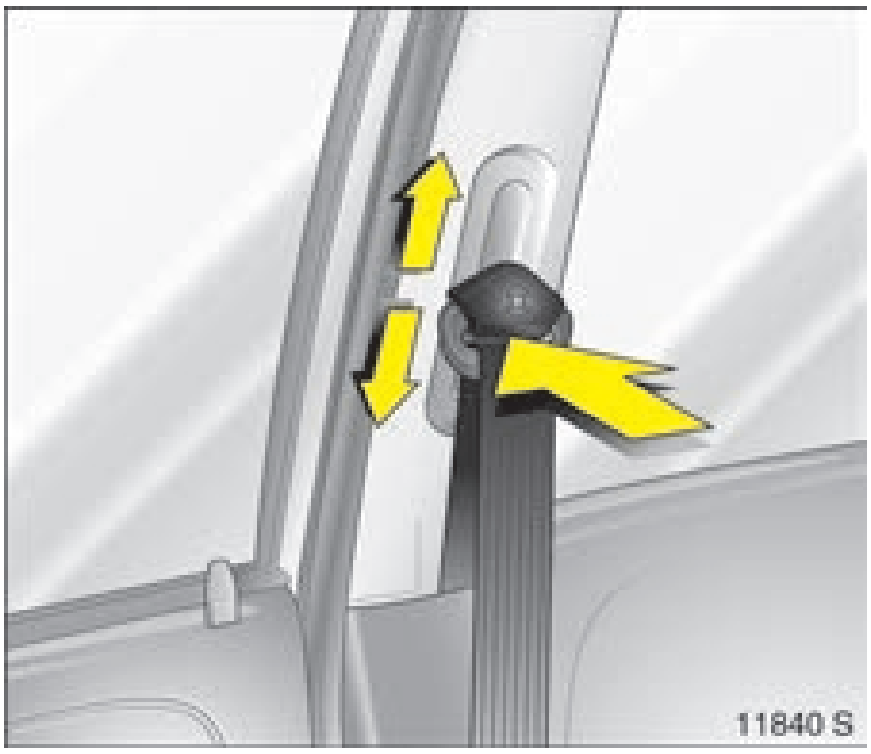

SEAT BELT HEIGHT ADJUSTMENT cont.

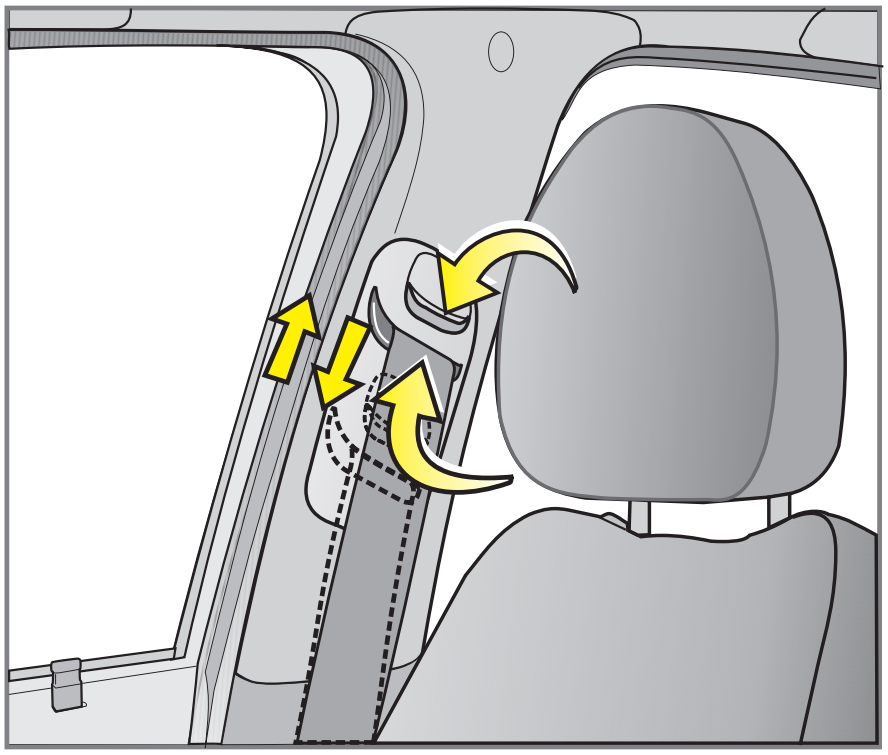

FOUR DOOR BARINA MODELS

For adjustment of the front seat belt upper anchorage points:

- Squeeze the recessed locking latch downwards.
- Slide the belt guide and anchorage point to the desired height and release it.
- Allow the latch to audibly lock into position.

Adjust the height so that the belt passes over the wearer's shoulder and rests against the shoulder. It must not pass over the neck or upper arm. Short people should select a low belt guide position, tall people a higher one.

Australian law requires that the driver and all passengers be properly restrained at all times with the seat belts provided in the vehicle. Failure to do so could increase the chance of injury and / or the severity of injury in accidents.

Ensure that belts are not damaged or trapped by sharp-edged objects.

CHILD RESTRAINTS

Combo

Combo models are not fitted with child restraint anchorages. Children small enough to require a child seat should not be carried in this vehicle.

Barina

Always ensure that the seat belt fits firmly around the child restraint.

If a child cannot see out of the window, do not raise the child by means of an ordinary cushion. It will not stay in place in a crash and the child can slip out of the straps and become entangled. Refer to page 13 in this chapter for further information about the use of child restraints.

WARNING:

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.

Only child restraints that have clips to attach to the vehicle's anchorage fitting are to be used (refer to the illustrations on page 3-14).

Earlier types of child restraints may not attach securely to this type of anchor and should not be used.

Only Standards Australia approved child restraint harnesses should be used on anchorage points. See your Holden Retailer for advice about the various types of approved child restraints available.

Do not install a rear-facing child restraint in the front seat of vehicle with a passenger's air bag. The child could be seriously injured if the passenger's air bag inflates, as the child's head would be very close to the inflating air bag.

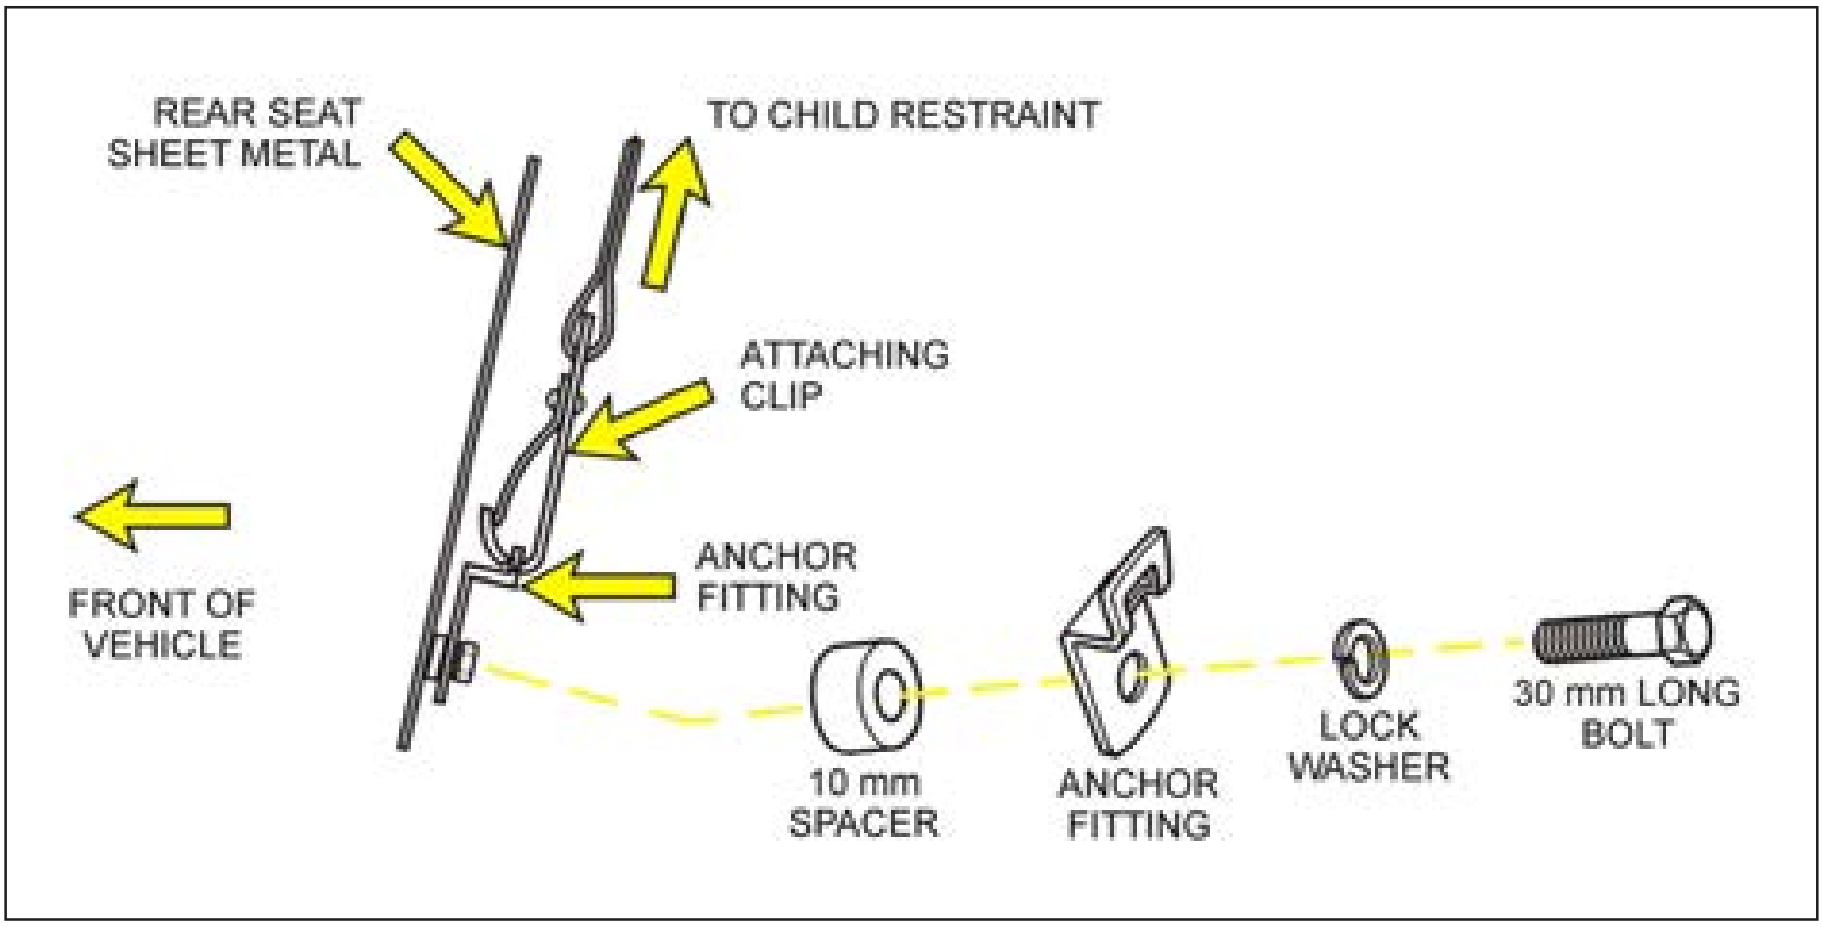

WHICH TYPE OF CHILD RESTRAINT FOR YOUR CHILD?

Children should be restrained at all times and fitted with a child restraint appropriate to their size when travelling in a vehicle. Following are some guidelines about selecting the appropriate restraint for your child.

Infants

Rearward facing infant capsule		
WEIGHT	**HEIGHT**	**APPROX. AGE**
Less than 9 kg	Less than 70 cm	Up to 6 mths

Designed so that in the event of a collision, impact forces will be evenly spread over the baby's back, with minimal jarring to the vulnerable head and neck area.

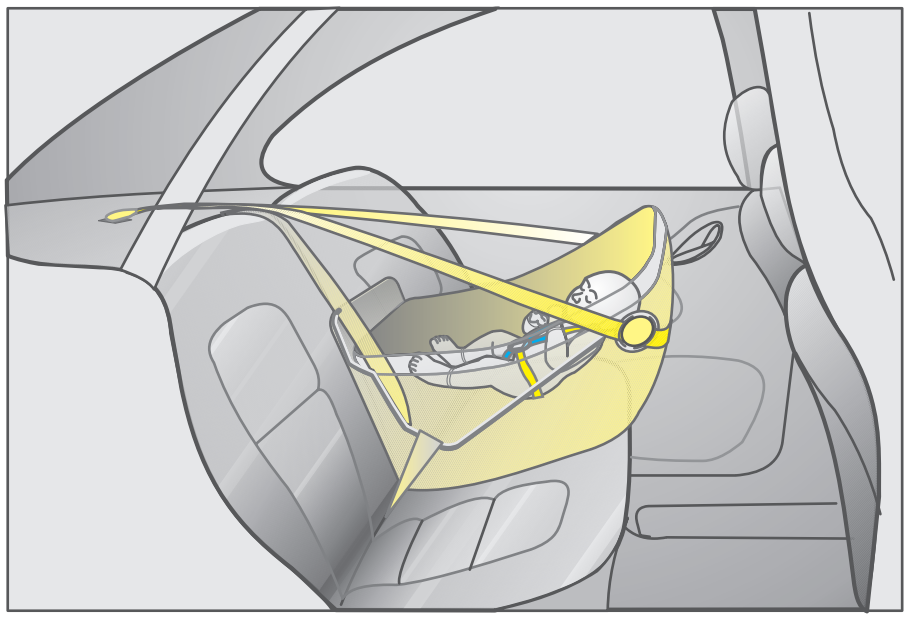

Rearward facing infant capsule

Young children

Forward facing child seat		
WEIGHT	**HEIGHT**	**APPROX. AGE**
8 to 18 kg	70 to 100 cm	6 mths to 4 yrs

For use when the child is able to sit and easily hold his/her head upright. It is also possible to purchase convertible seats which can be used as a rearward facing infant restraint or a forward facing child seat.

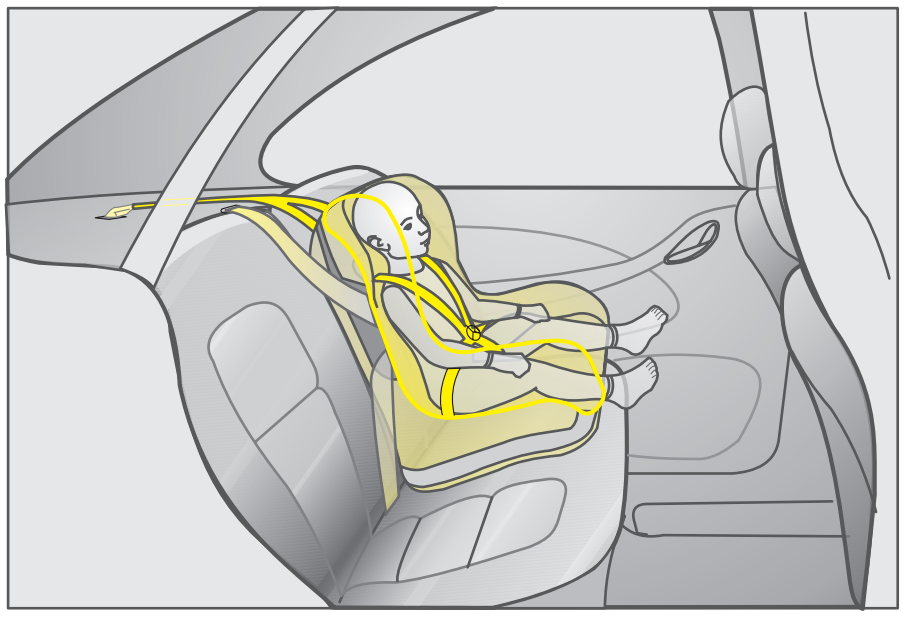

Forward facing child seat

Booster seat with lap / sash seat belt		
WEIGHT	**HEIGHT**	**APPROX. AGE**
–	More than 100 cm	4 to 10 yrs

When children outgrow a typical forward-facing child seat but are still too small for lap / sash seat belts, a booster seat raises the child so that the knees bend comfortably, the lap / sash seat belt is correctly positioned and the child can see out the window. A rigid booster seat with a back, side wings and sash guide gives the best protection. In assessing the range of children who would benefit from booster seats, height is a better indicator than age or weight.

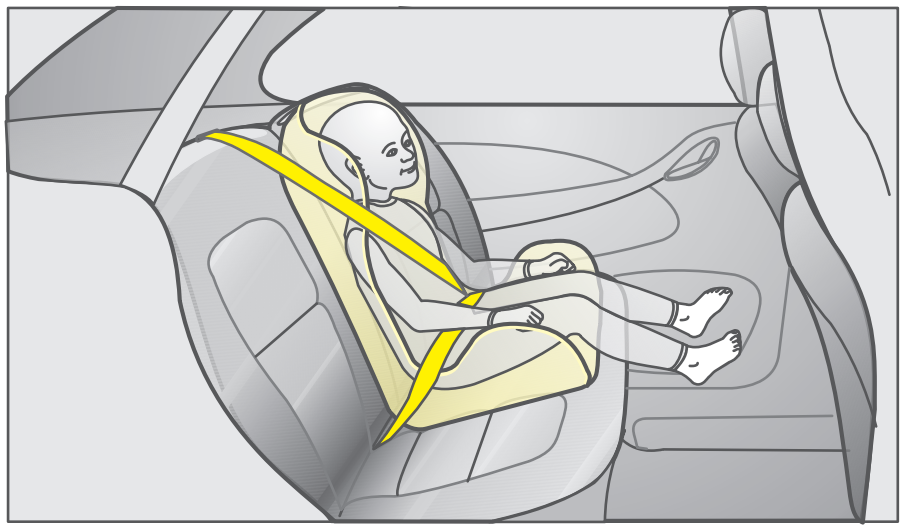

Booster seat with lap / sash seat belt

Older children

A child should use a normal lap / sash seat belt only when:

- he / she can sit against the back of the rear seat with knees bent comfortably at the edge of the seat,
- lap belt rests low and snug across the hips – not across the stomach,
- sash belt is centred on shoulder and chest,
- he / she is able to stay seated like this for the entire trip.

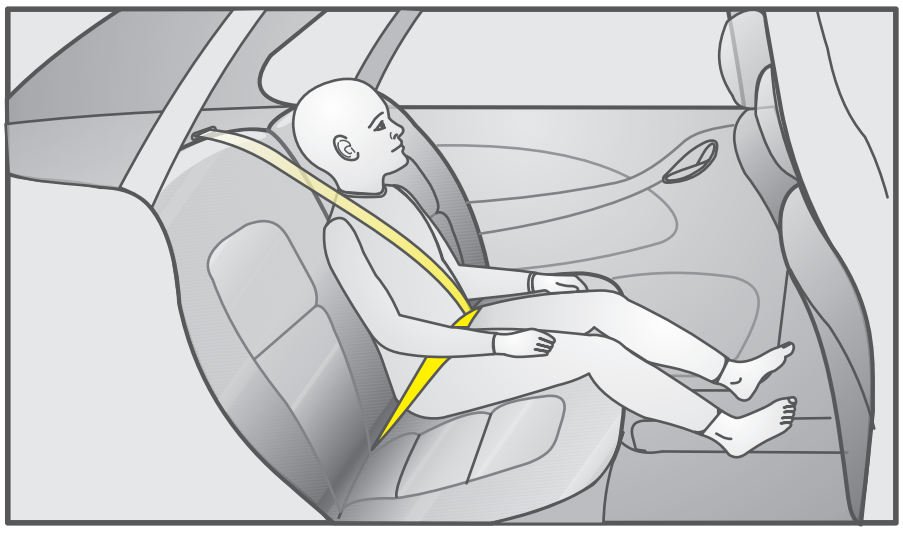

Adult lap / sash seat belt

CHILD RESTRAINTS cont.

Three anchorage locations are provided in the hatch area, behind the rear seats, as shown.

One anchorage fitting has been installed in the centre position.

If you wish to use a child restraint in either of the outer positions, remove the cover plug then install an additional anchorage fitting.

Use the bolt, spacers and washer supplied with a child seat, as per the illustration below.

Ensure that the bolts (inner or outer positions) are securely tightened (15 – 25 Nm). If unsure, consult your Holden Retailer.

Anchorage locations behind rear seat

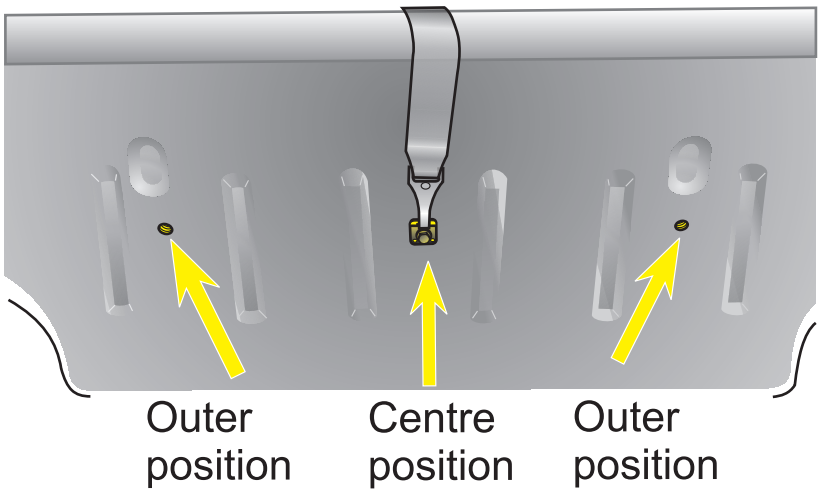

PARK BRAKE AND INTERIOR LIGHTS

Park brake

To apply, pull the lever straight up.

To release, pull the lever slightly upwards, push in the release button on the end of the lever and whilst depressed, lower the lever all the way down.

Never drive the vehicle with the park brake applied.

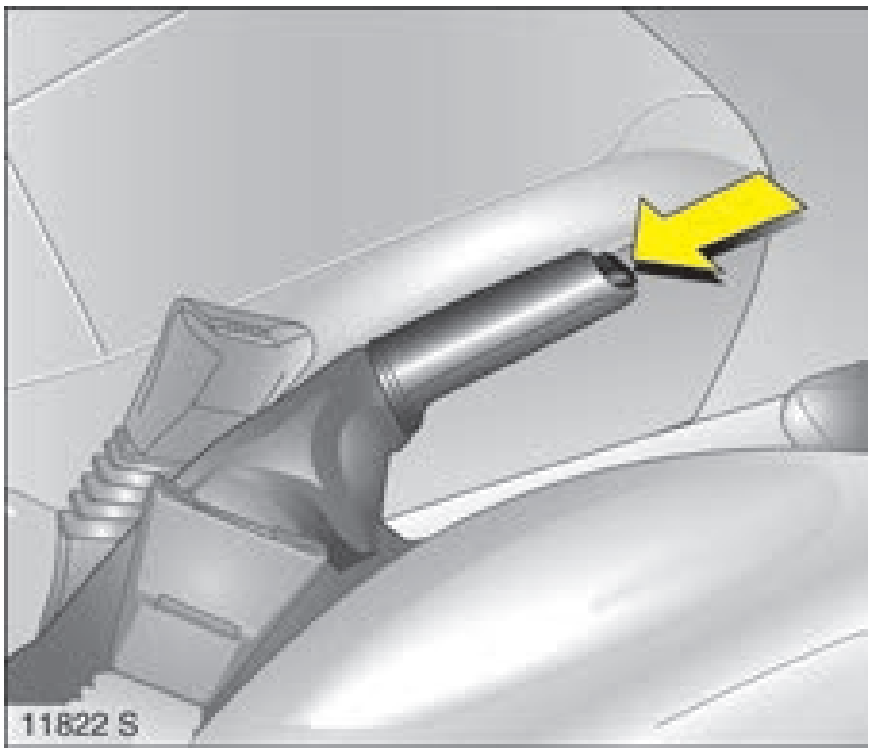

Interior light

The interior light switch is located in the centre of the headlight switch.

Press switch = On

Press switch again = Off

The interior light also comes on when a door is opened.

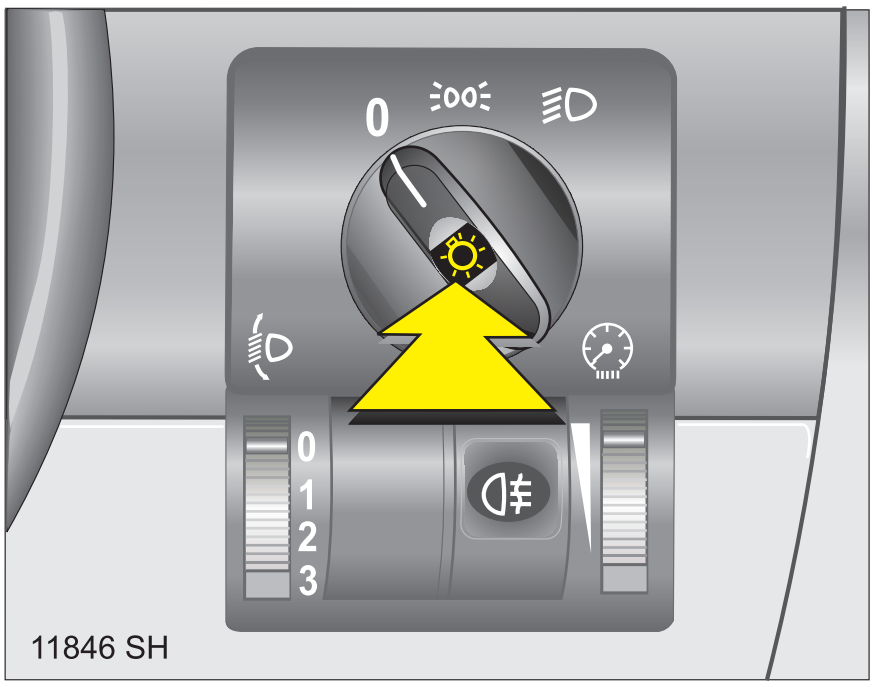

Reading lights, front (if fitted)

With the ignition on,

Press button = On

Press button again = Off

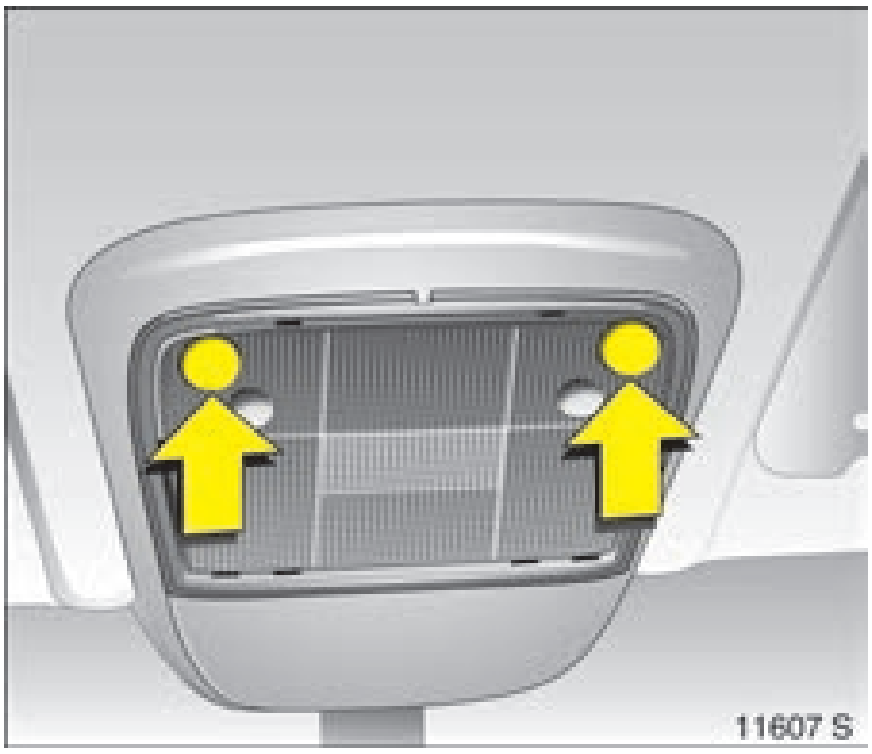

INTERIOR LIGHTS cont.

Rear reading light (if fitted)

Switch to left = Off

Switch to right = On

Switch to centre = Comes on when a rear door is opened.

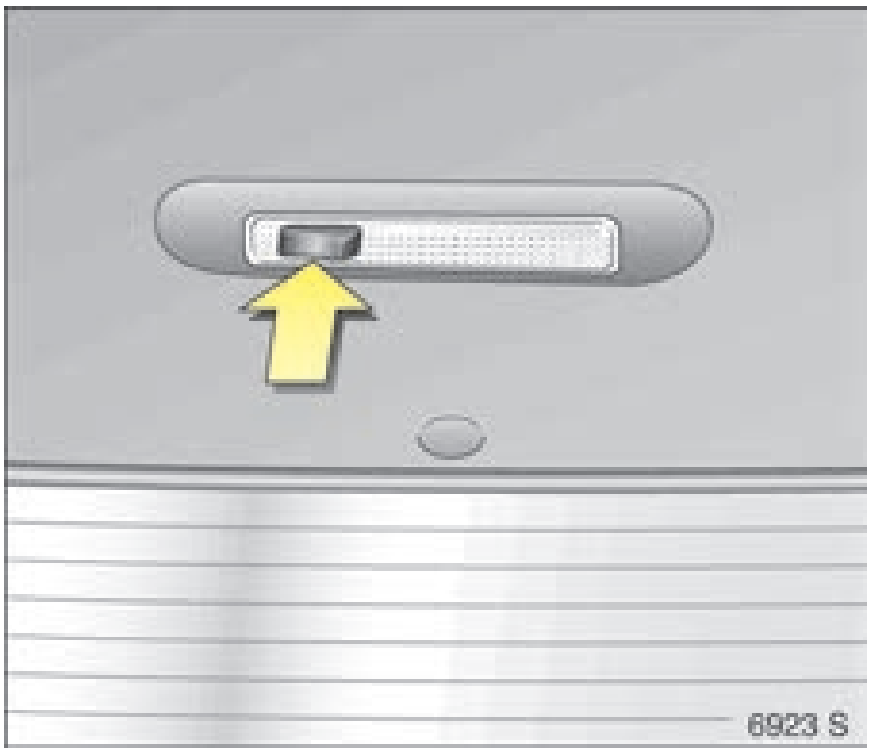

Luggage compartment light

BARINA

A light on the passenger side comes on when the tailgate is opened.

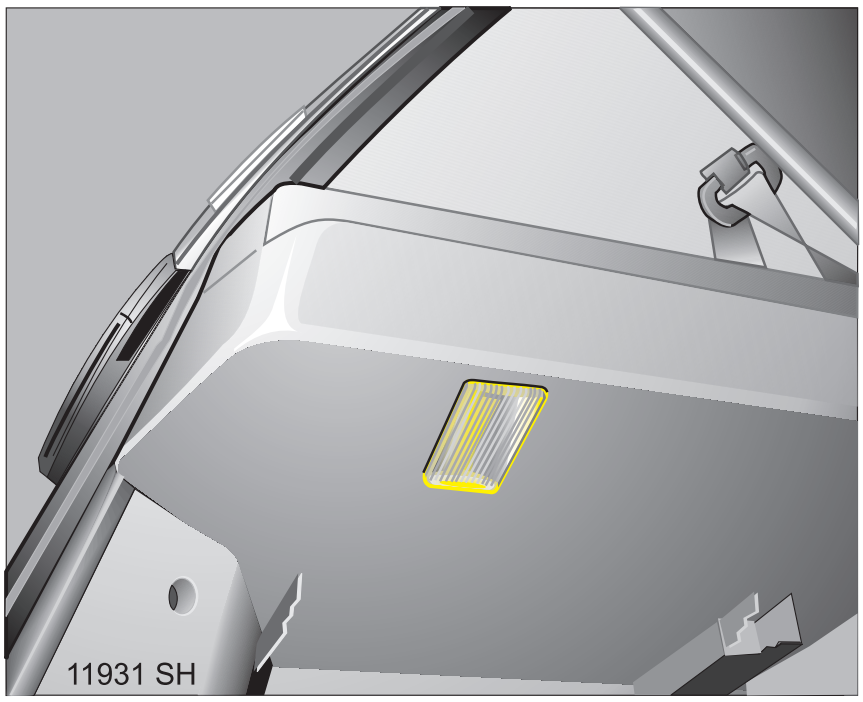

Luggage compartment lights

COMBO

Lights on either side of the luggage compartment come on when the rear doors are opened. Refer to Chapter 6, page 28 for bulb replacement details.

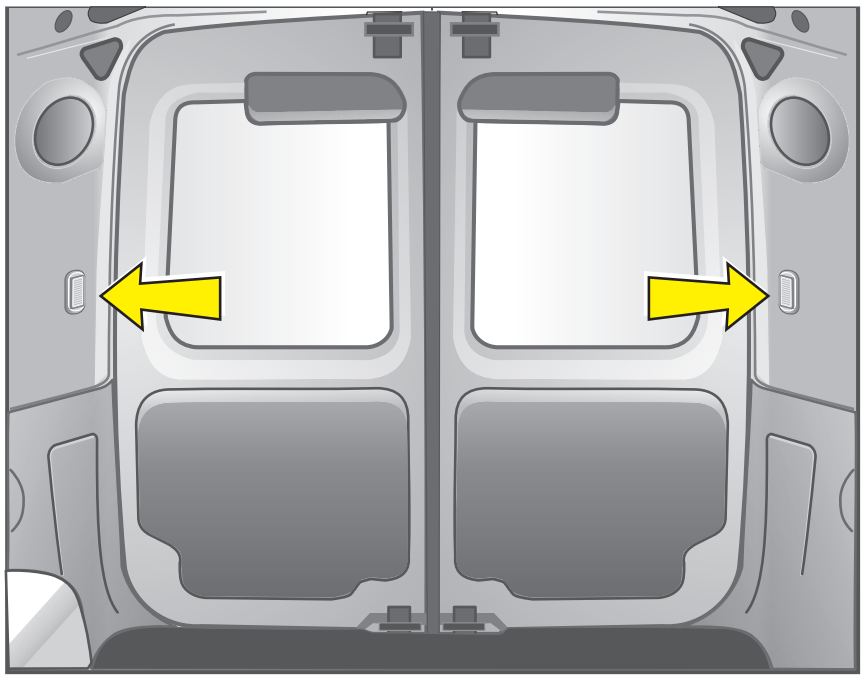

CONVENIENCE FEATURES

Glasses holder (if fitted)

Above the driver's door, a holder is provided to store sunglasses or reading glasses. Fold down to open.

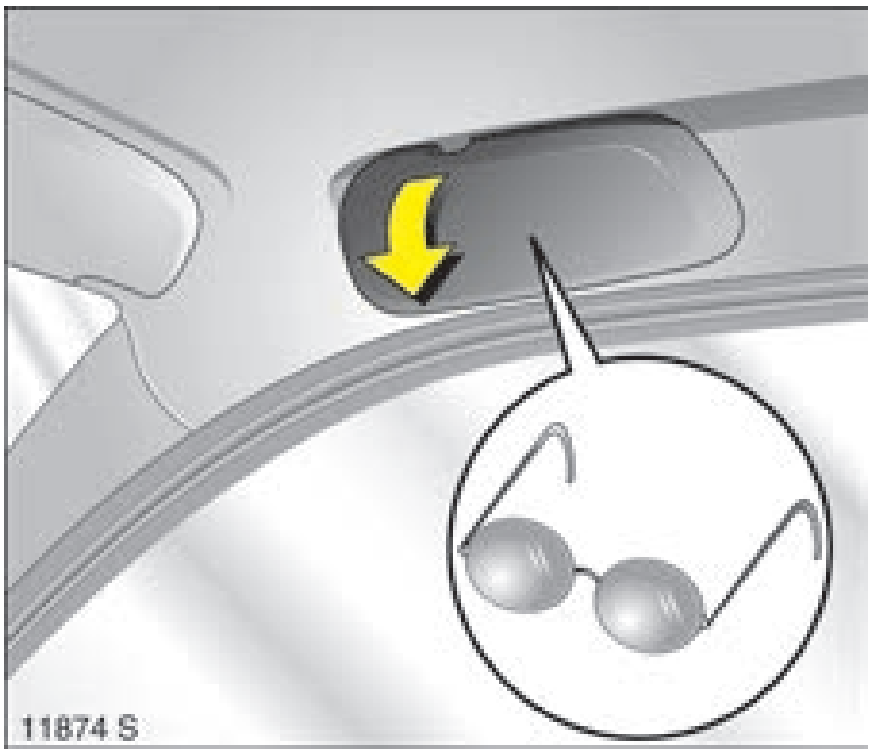

Coin holder

Slots for storing six coins are provided below the ashtray on the centre console.

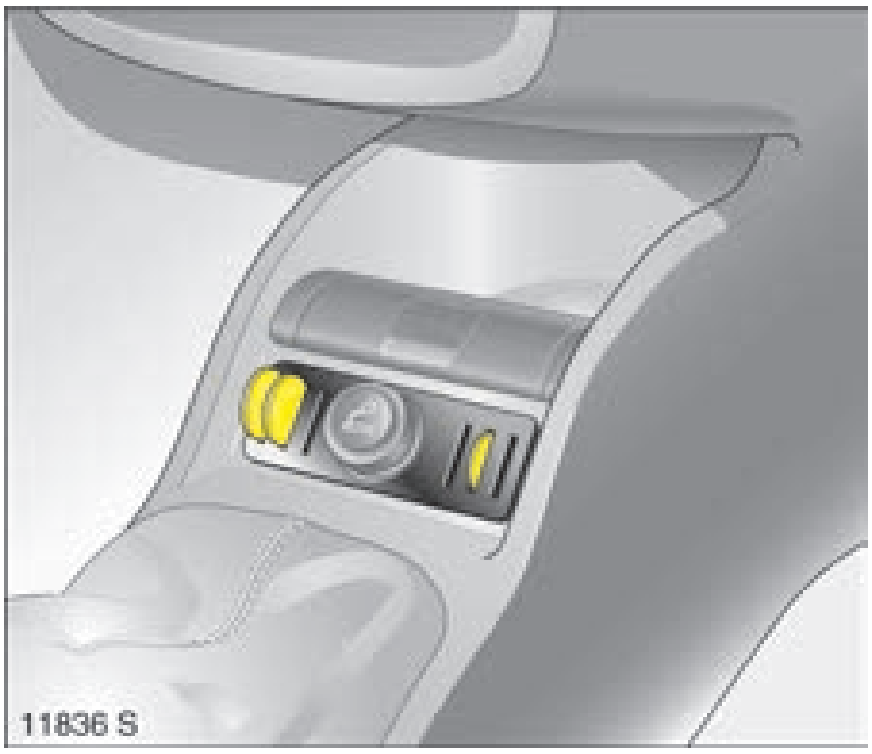

Glovebox with pen holder

To open the glovebox, pull the opener upwards.

On the inside of the glovebox lid is a recess for pen storage.

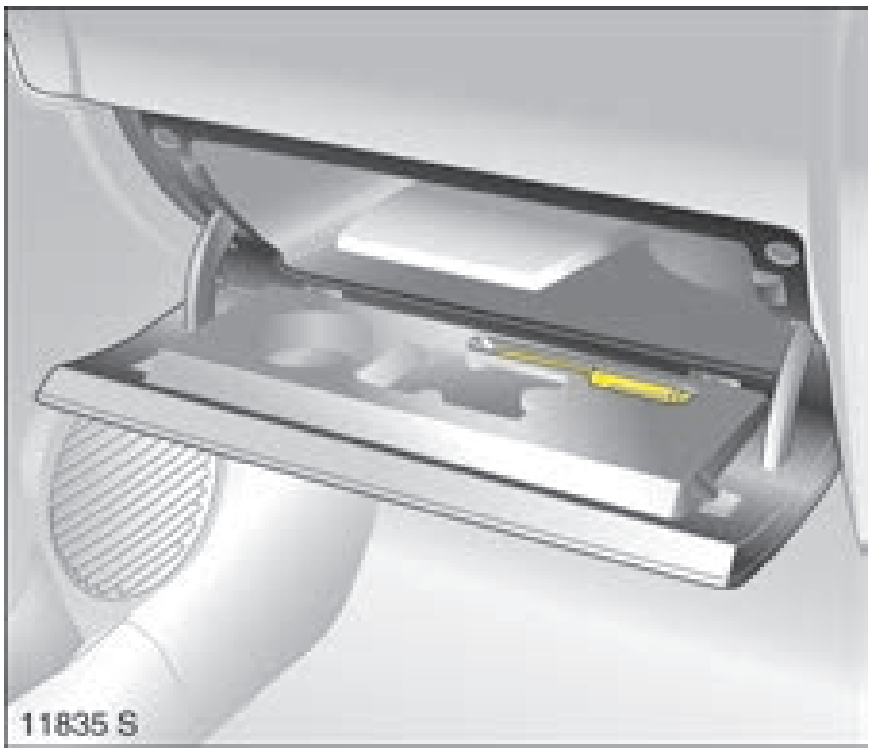

CONVENIENCE FEATURES cont.

Floor tray (if fitted)

A floor tray is provided under the front passenger's seat.

To open, lift the tray by grasping recessed edge and pull forwards.

To close, push the tray all the way in to lock in place.

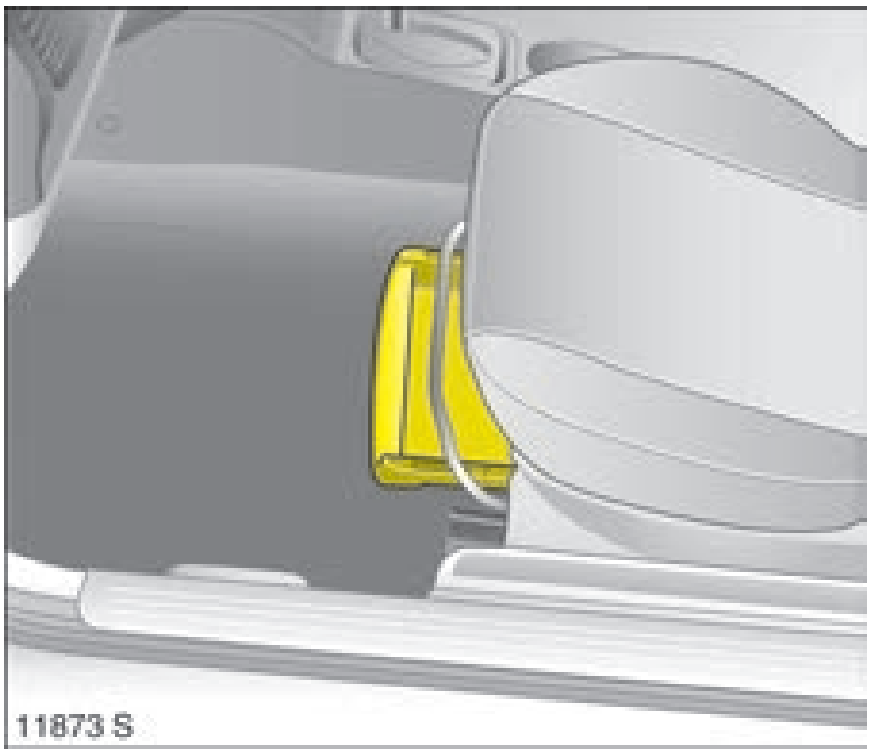

WINDOWS

Window winders

Turn the handle on the door to raise or lower a window.

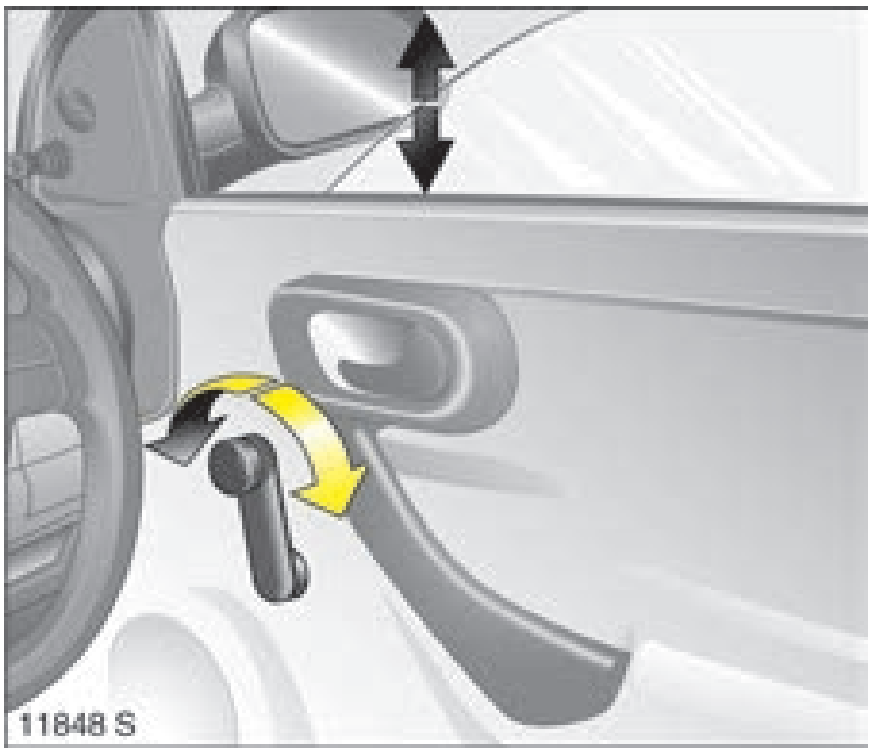

Electric front windows (if fitted)

The main switches for the windows are located in the driver side door pull-handle. The RHS switch controls the driver's window and the LHS switch controls the passenger window.

An individual switch is located on the front passenger door pull-handle for the front passenger window.

Control indicators in the switches glow when the switches are operational.

To operate the window in stages, tap the associated switch. For full closing or opening, keep the switch pressed for slightly longer. To stop the window during full opening or closing, tap the associated switch.

If the window glass encounters significant resistance during full closing (above the half way point), the window movement is immediately reversed to fully open.

To override this protective system (e.g. if the windows do not move easily due to frost) repeatedly tap the associated switch until the window closes.

To avoid risks associated with incorrect use of electric windows, remove the key from the ignition switch when leaving the vehicle.

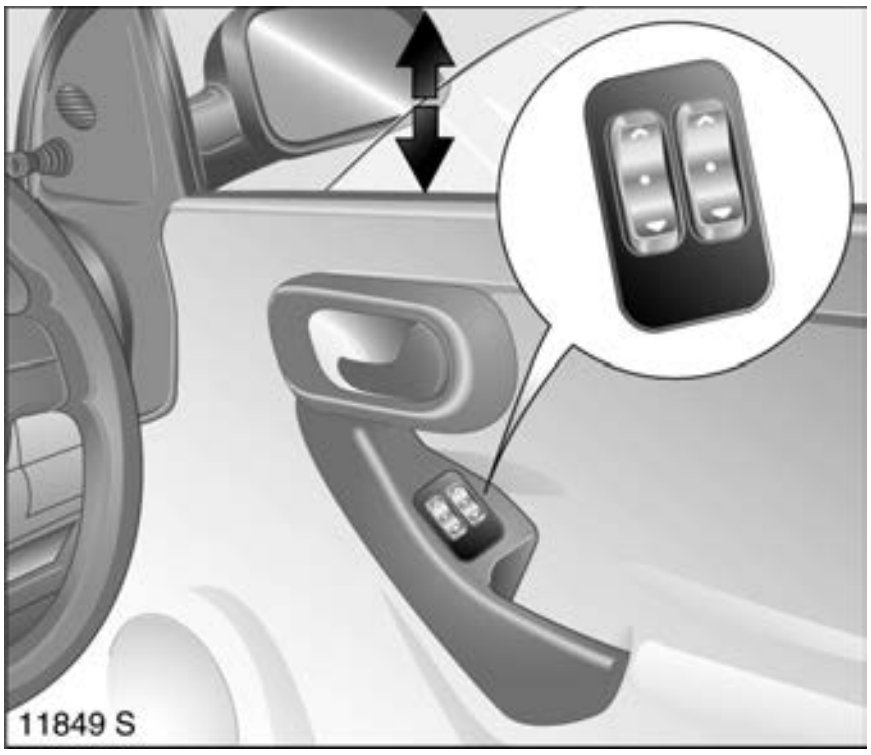

WINDOWS cont.

Closing electric windows from outside

Hold the key in the driver's door lock in the door-locking position until the windows are closed.

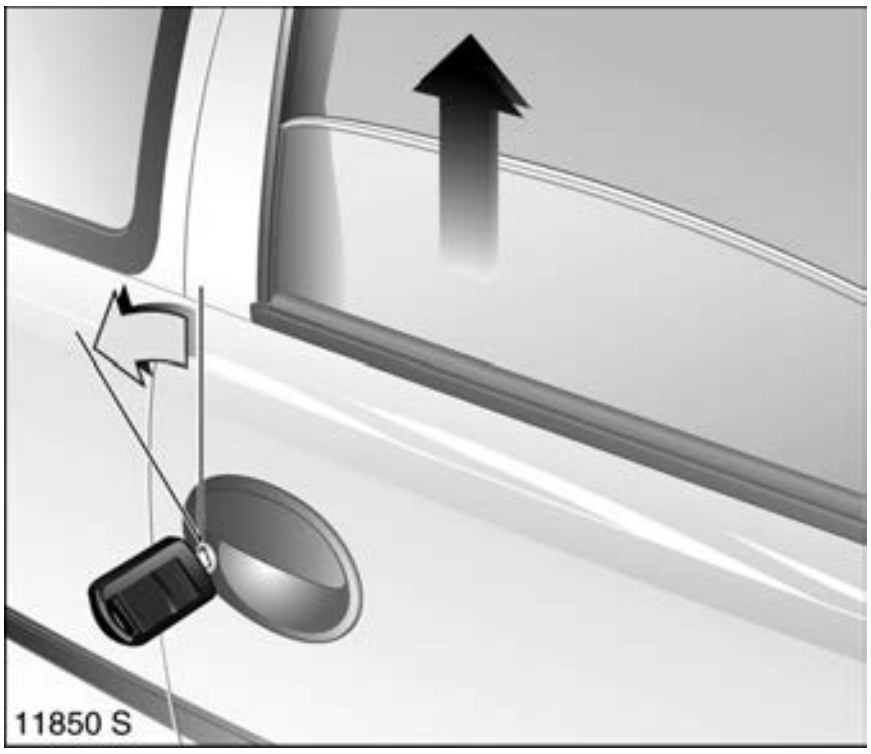

Overload

If the system is overloaded, the power supply is automatically cut off for a short time.

Interruption of power supply

Automatic opening and closing of the windows is not possible after an interruption of the power supply or a drop in battery voltage.

Activate the window electronics from inside the vehicle as follows:

- Close the doors.
- Switch on the ignition.
- Close the window.
- Hold the switch in the closed position for at least 5 seconds.
- Repeat for each window.

MIRRORS

Internal rear view mirror

Grasp the mirror and swivel to adjust height.

Swivel the lever on the lower edge of the mirror to reduce dazzle at night.

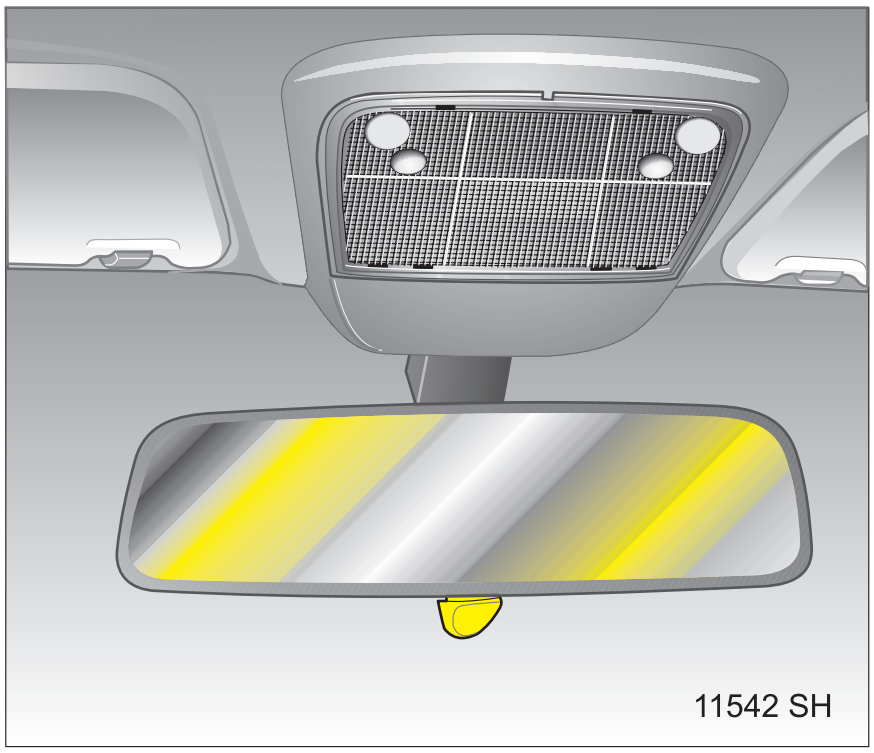

External mirrors

Grasp the lever inside the vehicle and move the mirror up / down and in / out as required.

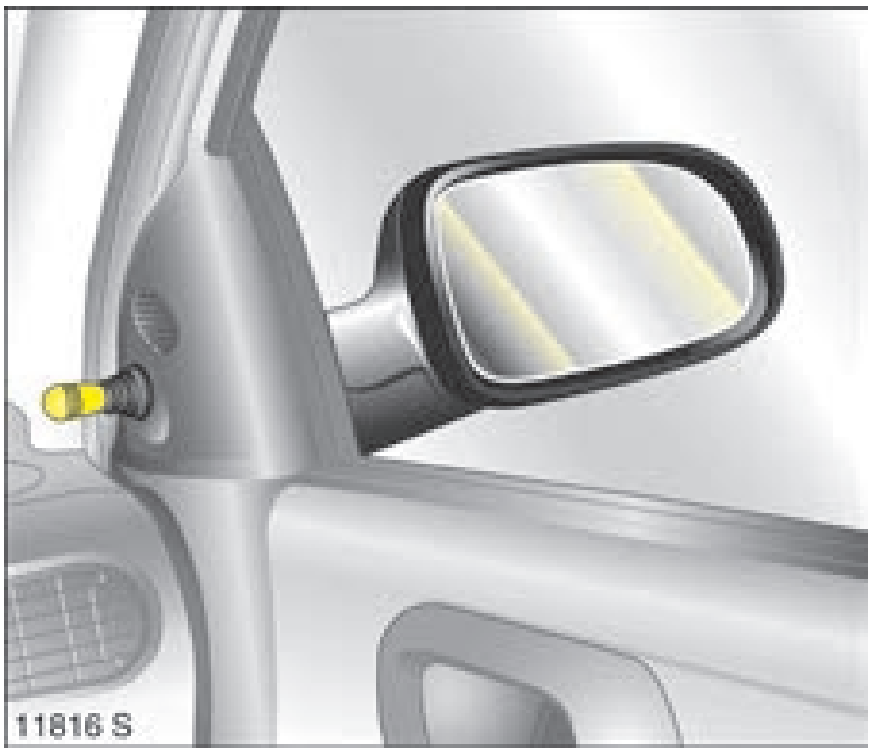

Power mirrors (if fitted)

The power mirror control is located in the driver's door pull-handle. The control has a selection rocker switch (upper) and a directional toggle switch (lower).

Use the rocker switch to select the LH or RH mirror. When the ignition is in the ON position, the four-way toggle switch can be used to adjust the angle of the selected mirror.

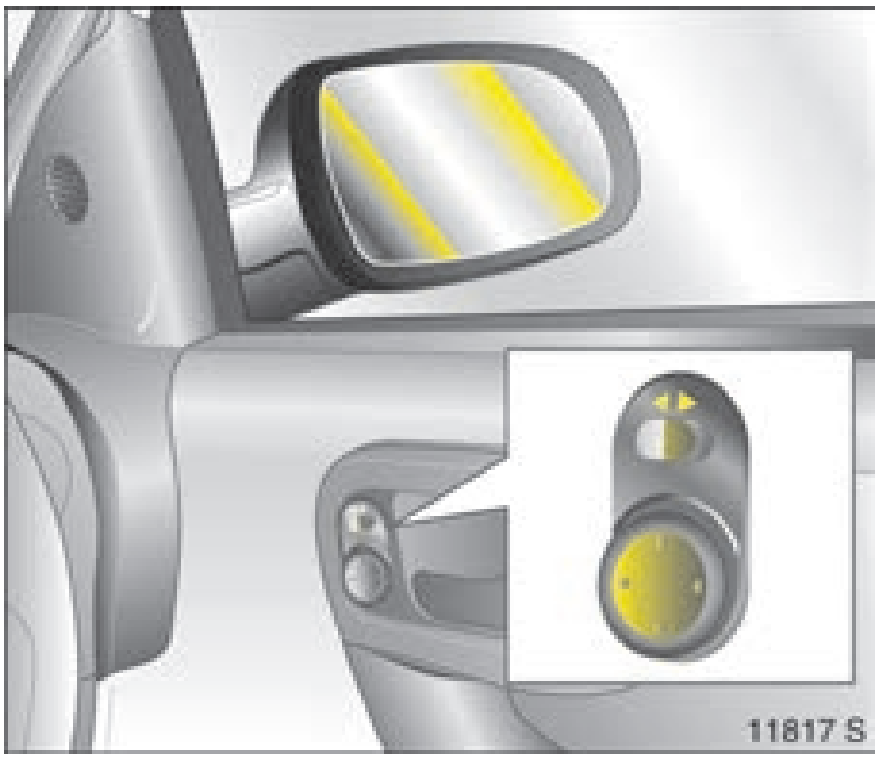

CHAPTER 4

Driving

Page

4-2 Engine starting
4-2 Running-in
4-3 Safety
4-4 Manual transmission
4-6 Automatic transmission
4-9 Driving precautions
4-9 ABS braking
4-10 Traction control
4-11 Snow chains

ENGINE STARTING

1. Apply the park brake firmly and release only after you have started the engine and are ready to drive off.
2. MANUAL: Depress the clutch pedal and shift the gear lever to Neutral position. The clutch pedal can now be released.

   AUTOMATIC: Move the shift lever to P (park) or N (neutral) position to start the engine. *Note: To move the shift lever away from the P position the ignition must be ON and the brake pedal depressed.*
3. Start the engine as outlined below (with your foot off the accelerator).

   For cold or hot starting the procedure is the same. Simply turn the key to the start position and release when the engine starts. YOU DO NOT HAVE TO DEPRESS THE ACCELERATOR PEDAL PRIOR TO, OR DURING, STARTING. DEPRESSING THE ACCELERATOR PEDAL WILL ONLY INCREASE CRANKING TIME AND WILL NOT HELP THE ENGINE TO START.

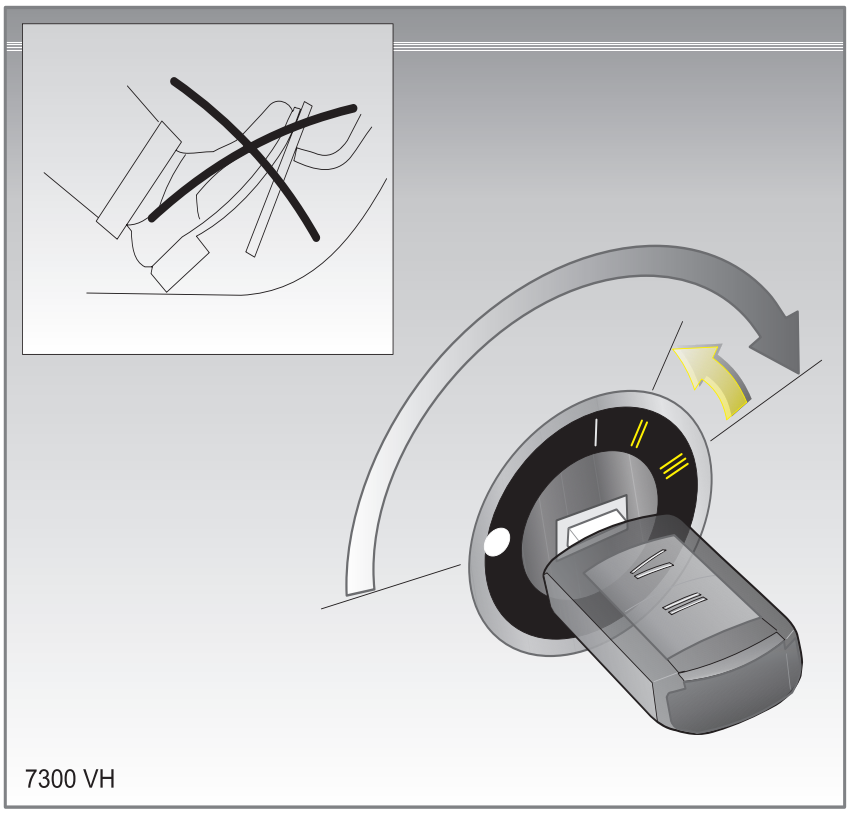

If the engine does not start and the check engine warning light on the instrument panel is flashing, turn the ignition key to OFF for at least 2 seconds before attempting to start the engine again. If the engine again fails to start, consult a Holden Retailer.

Running-in (for the first 1,000 km)

Drive your vehicle at various speeds. **Do not use full throttle.** Never allow the engine to labour.

Make good use of all gears. Depress the accelerator pedal a maximum of around three quarters of the available pedal travel in all gears and drive ranges.

Unless necessary, try not to brake too hard during the first 200 km or after new brake pads have been fitted.

Switching off the engine

If the engine temperature is very high, e.g. after driving in hilly areas, then allow the engine to idle for approximately 2 minutes (in order to prevent heat accumulation) before switching off the engine.

SAFETY

Before entering the vehicle

1. Check that windows, mirrors and lights are clean.
2. Check tyres are not flat.

Before driving off

1. Be sure that all doors are secured.
2. Position your seat for comfortable driving.
3. Adjust rear vision mirrors.
4. FASTEN SEAT BELTS.
5. Check that all the warning indicators light up when you turn the key to start the engine, refer to Chapter 1.

   AUTOMATIC ONLY: With the engine running, depress the brake pedal before moving the T-bar away from the P or N position.

Parking

1. Apply the park brake.
2. Automatic transmission: place in PARK.
   Manual transmission: place in FIRST or REVERSE gear.
3. Shut all windows.
4. Switch off exterior lights.
5. Turn ignition key to LOCK and remove the key.
6. Lock all doors and set deadlock, if appropriate (refer to Chapter 2).

WARNING:

Be careful where you park or drive. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Never leave the engine running in an enclosed space, such as a closed garage or underground car park.

MANUAL TRANSMISSION (if fitted)

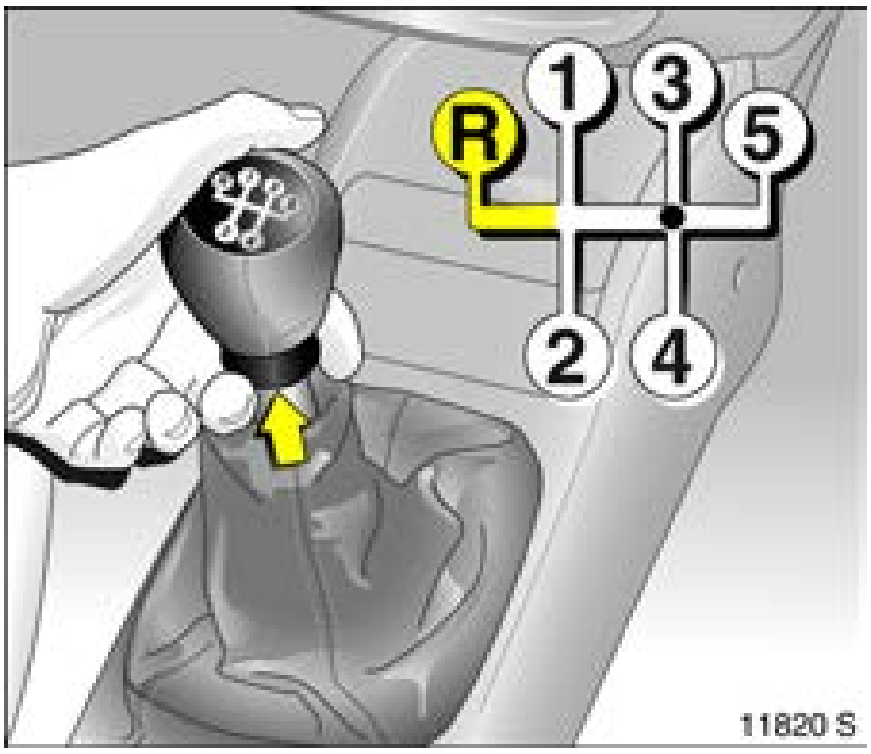

This system has 5 forward gears and a reverse gear. The shift pattern illustrated, is found on the top of the gear shift lever.

When selecting fifth gear you must shift the gear lever sideways against light spring pressure in order to pass into the gear.

To select reverse gear, lift the ring beneath the knob on the gear shift lever and move the lever into the reverse position.

If the gear does not engage easily, then release and depress the clutch pedal, or try moving to another gear, before trying again.

Shift speeds

The chart shows the recommended speeds at which gear changes should be made for normal driving. Using shift speeds in the 'economy' category will assist in maximising fuel economy.

Upshifting at higher road speeds may be necessary according to varying driving conditions such as load, road gradient, during overtaking and when other than light acceleration is required.

Manual transmission change speed chart

Vehicle	Barina		Barina SRi		Combo	
Gear change	Normal	Economy	Normal	Economy	Normal	Economy
1st~2nd	24 km/h	20 km/h	24 km/h	15 km/h	24 km/h	15 km/h
2nd~3rd	40 km/h	28 km/h	40 km/h	20 km/h	40 km/h	20 km/h
3rd~4th	64 km/h	46 km/h	64 km/h	30 km/h	64 km/h	30 km/h
4th~5th	72 km/h	58 km/h	72 km/h	40 km/h	72 km/h	40 km/h

MANUAL TRANSMISSION (if fitted) cont.

Operating notes

- When shifting from one gear to another, be sure to depress the clutch pedal fully to avoid clashing and possible chipping of the transmission gears.
- Never attempt to engage reverse gear until the vehicle has completely stopped. A slight pause (a few seconds) between depressing the clutch pedal and moving into reverse gear is desirable to allow all the rotating components to stop and avoid gear clashing. Whenever reverse gear is selected with the ignition ON, the reversing lights will operate.
- Shift the gear lever with a moderate effort to allow time for the transmission synchronisers to work properly.
- Do not drive with your foot resting on the clutch pedal. This will cause substantial clutch wear.
- When stopped on an incline do not hold the vehicle by slipping the clutch. Use the park brake or brake pedal.
- To maintain safe speeds on a steep downgrade and to reduce brake wear and overheating, shift into a lower gear before starting the descent.
- Do not over-speed the engine when shifting down to the next lowest gear.

AUTOMATIC TRANSMISSION (if fitted)

T-bar selector position indicator

When the ignition is on, the current T-bar position is displayed on the instrument panel below the tachometer. The engine will not start unless the T-bar selector is in P or N.

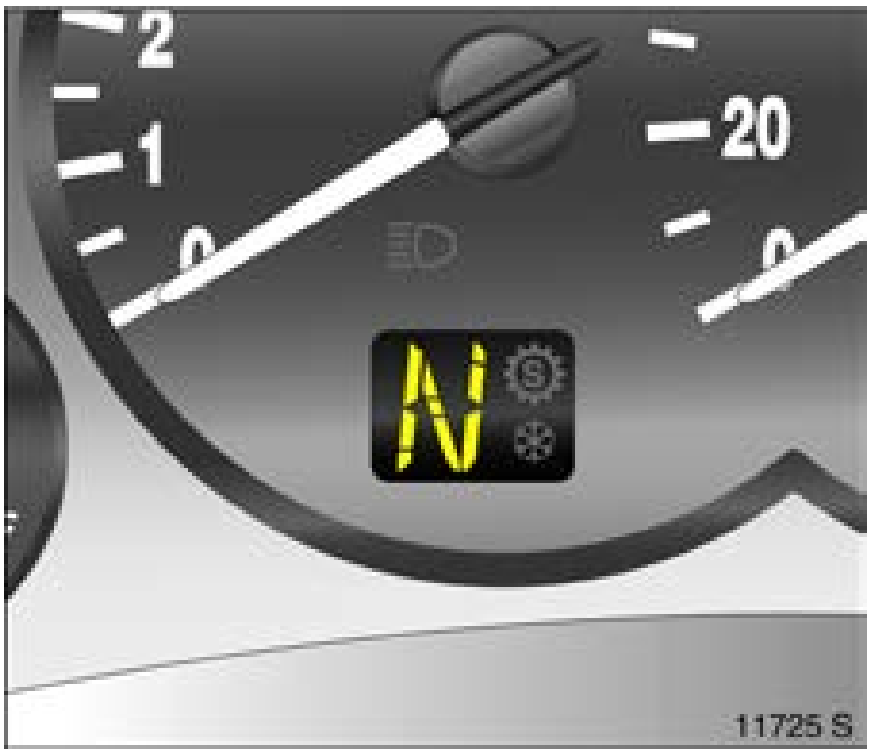

To move out of P position, switch on the ignition, depress the brake pedal and raise the gear selection release under the T-bar.

Raise the release when shifting into any position indicated by the black arrow.

You may shift (without raising the release) into any position marked by the outline arrow.



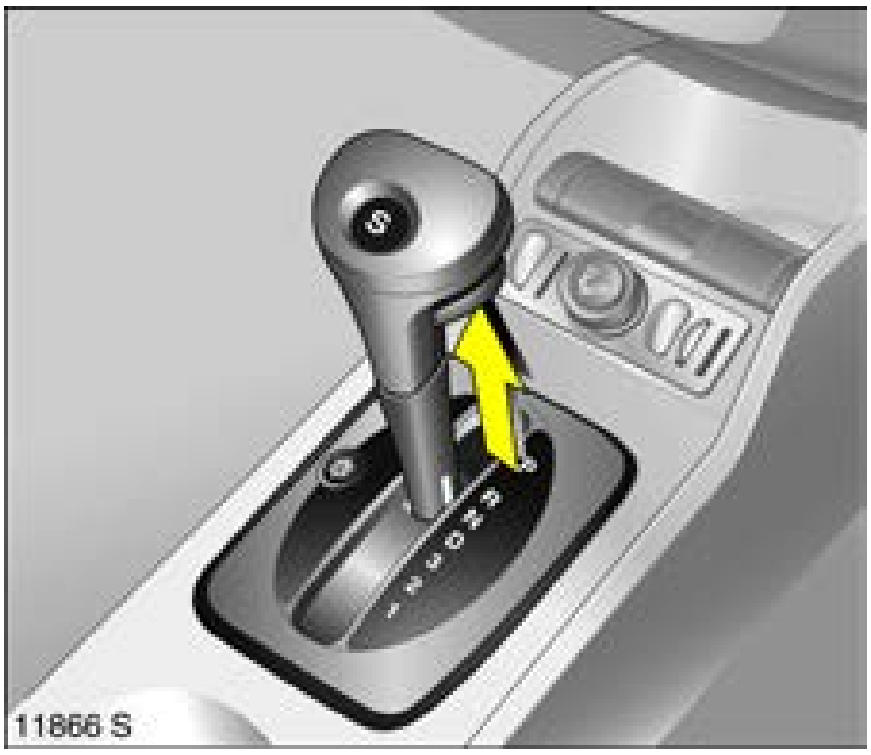

Sports / economy drive

Press the button on top of the T-bar to switch between sports and economy drive programmes.

When the sports programme (higher engine speeds) is selected the indicator light on the instrument panel will be illuminated.

Note: After the engine has initially been started and Drive selected, the economy programme is automatically selected.

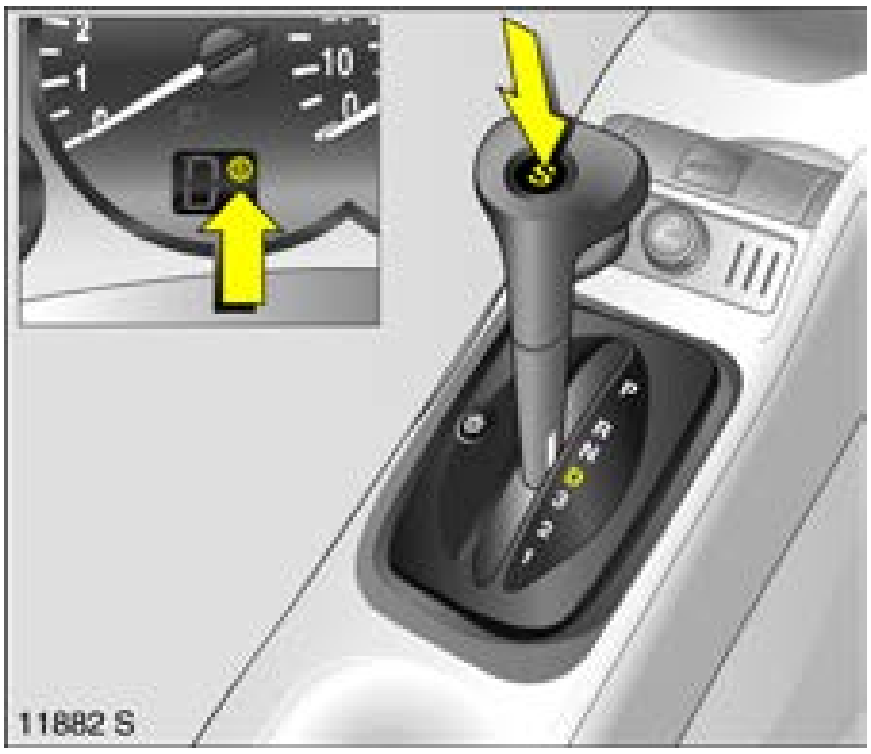

AUTOMATIC TRANSMISSION cont.

Starting-off aid (slippery conditions)

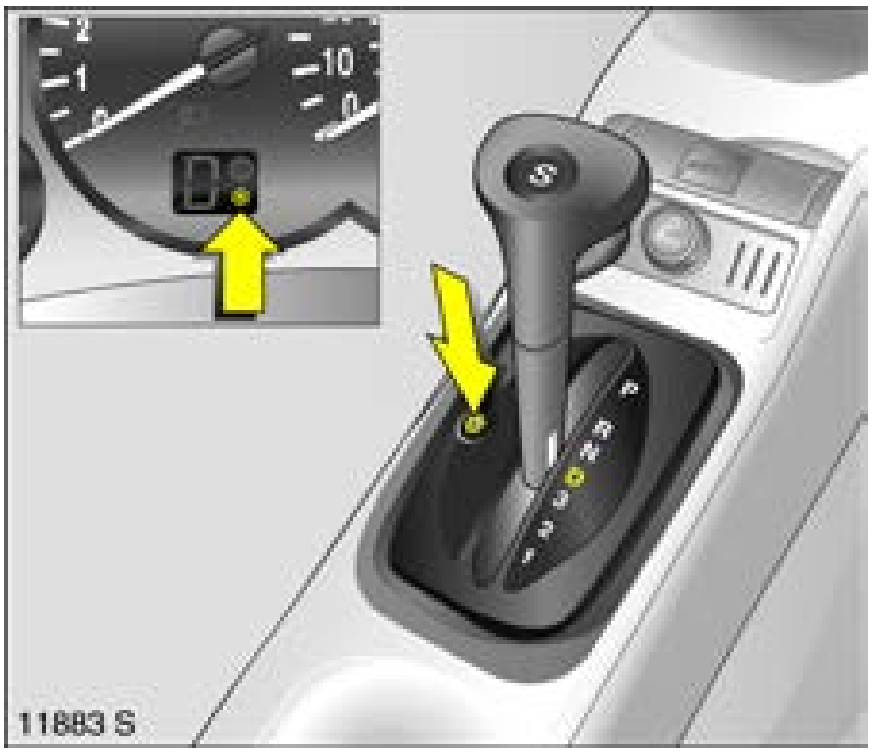

In the event of starting-off difficulties in slippery conditions, press the button shown. The T-bar must be in P, R ,N, D or 3.

If the starting-off programme is selected, the indicator light on the instrument panel will be illuminated.

When the vehicle moves off it will be in third gear.

Press the button again to switch the system off.

It will be automatically switched off:

- if the T-bar is moved to position 2 or 1
- if the ignition is turned off.

Operating notes

P (park)	This stops the front wheels from turning and so should be selected (together with the park brake) when leaving the vehicle. Never select P until your vehicle is fully stopped. The brake pedal must be depressed and the ignition ON before the T-bar can be moved away from the P position.
R (reverse)	Never select R until your vehicle is fully stopped. Reversing lights will operate when R is selected and the ignition is on. After reversing, make sure the vehicle has fully stopped before proceeding forward again.
N (neutral)	This is the out-of-gear position. You may restart a stalled engine while the vehicle is still moving or stopped.
D (fourth)	This is the most effective position for normal or freeway driving. The D position gives maximum fuel efficiency, as the transmission can choose the appropriate gear (1 through to D) for the load and driving conditions.
3 (third)	Third is most effective when overtaking and gives responsive acceleration and deceleration, especially in hilly areas. This position allows the transmission to shift between first, second and third gear as conditions require. Drive (4th gear) is excluded.
2 (second)	Use this position when going down a steep gradient to avoid excessive use of the brakes. The transmission will shift between first and second gear as required. Move the lever back into the Drive position to return to normal driving.
1 (first)	Use this position when strong braking effect is needed down a very steep gradient. Remember to move the T-bar back to Drive position so that the transmission will again up shift into higher gears. If 1st gear is selected at too high a speed then the transmission remains in 2nd gear until you have slowed down sufficiently.

AUTOMATIC TRANSMISSION cont.

Tips for better driving

- If selecting a lower gear than D while driving, ensure vehicle speed is sufficiently reduced before moving the T-bar.
- Do not press the accelerator pedal with the brakes on in either 1, 2, 3, D or R. This will overheat the transmission.
- Do not use the accelerator pedal to hold the vehicle on a slope. Use the brakes.
- Do not coast the vehicle in neutral (N) – this reduces your control and the engine braking power.

Transmission operating characteristics

- NEUTRAL IDLE CONTROL: This feature is designed to reduce fuel consumption. Neutral Idle Control electronically switches the transmission into neutral (without you having to move the T-bar) when the engine is idling in a forward gear (1, 2, 3, D), the accelerator pedal is not depressed, the brake pedal is depressed and the vehicle is stationary. When the brake pedal is released (to move from stationary) the transmission electronically switches back to the selected position of the T-bar.
- COLD START OPERATION: By means of delayed shifting (higher engine speeds) following a cold start, the operating temperature programme quickly and automatically brings the catalytic converter to the temperature required for optimum pollutant reduction.
- ADAPTIVE SHIFT PROGRAMMES: Adaptive programmes automatically adapt gear shifting to suit the prevailing driving conditions, such as if the vehicle is carrying a heavier than normal load, or is being driven on inclines.
- FAULT MODE: If the vehicle suddenly will not accelerate as usual, or will not shift down to a lower gear when you press the accelerator pedal to the floor, or the automatic transmission fault light (in the instrument panel) is illuminated, then a fault is indicated in the transmission. Refer to Chapter 1 for transmission fault light details. You should use the T-bar to manually shift through the gears. Second gear is not available in Fault Mode. In Fault Mode the gears are as follows:

  1 = 1st gear
  2 = **3rd** gear
  3 = **4th** gear
  D = 4th gear
  N = Neutral
  R = Reverse gear
  P = Park

  Consult a Holden Retailer as soon as possible after a fault is indicated.

DRIVING PRECAUTIONS

Brakes

- The power assisted brakes fitted to your vehicle use vacuum from the engine when it is running. Never drive the vehicle down steep grades with the engine not running. Never coast with the engine switched off.
- Driving through water may affect performance. Applying the brakes lightly will indicate whether the brakes have been affected. To dry them quickly, lightly apply the brakes while maintaining a slow forward speed with an assured clear distance ahead until brake performance returns to normal.
- Brake pedal travel should not be obstructed by ill-fitting floor mats or any other material under the pedal which causes interference with normal pedal movement.
- Your seat should be positioned so that you can push the brake pedal satisfactorily under all braking conditions.

ABS: Anti-lock Brake System (if fitted)

Anti-lock Brake System (ABS) continuously monitors the vehicle's brake system and prevents the wheels from locking, irrespective of the road conditions and tyre grip. It starts to regulate the braking effect as soon as a wheel shows a tendency to lock. The vehicle remains steerable, even in the event of panic braking, for instance on bends or when swerving to avoid an obstacle.

However, DO NOT let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style.

In an emergency braking situation the driver should keep full force on the brake pedal, without 'pumping' the brake pedal. 'Pumping' the brake pedal can reduce brake efficiency when ABS is controlling the braking.

The ABS warning light is illuminated for a few seconds when the engine is switched to position **II** (ignition on). If it does not go out, or if it comes on during driving, there is a defect in the ABS. The vehicle's brake system remains operational but without ABS assistance. You should consult your Holden Retailer as soon as possible.

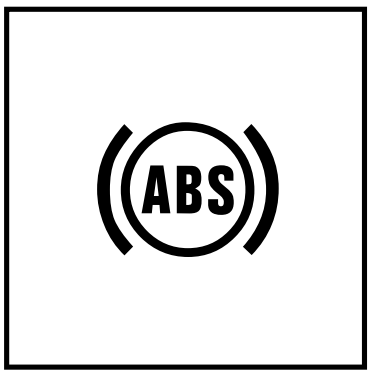

The braking effect is regulated by the ABS every millisecond during braking.

When your vehicle is in a critical braking condition ABS will make itself noticeable through pulsing of the brake pedal and the noise of the regulation process, thereby reminding you to match your speed to the road conditions, even though it is keeping control of the braking.

Shortly after driving off again, the system performs a self check which may be audible.

DRIVING PRECAUTIONS cont.

Power steering

If the power steering is rendered ineffective because a fault has developed with the power steering system, the vehicle can still be steered.

However, due to the much greater effort required to steer, it is recommended that you have the problem fixed promptly.

Loose articles

Do not leave loose articles or luggage in the passenger compartment. Whenever possible, loads stowed in the luggage compartment should be firmly secured.

WARNING:

Gas cylinders can leak, creating a risk of fire or explosion. As a precaution, ensure adequate ventilation when carrying gas cylinders. They must be restrained from rolling around, and where possible, placed in the load area of the vehicle. It is recommended that if gas cylinders are frequently transported that a purpose-built carrying compartment be used.

Tyre traction

A decrease in driving, cornering and braking traction occurs when water, snow, ice, gravel or other materials are on the road surface. Driving practices and vehicle speed should be adjusted to the road conditions.

Traction Control (if fitted)

Traction Control prevents the driving wheels from spinning. As soon as even one driving wheel starts to spin, traction control reduces the power from the engine and applies the brakes, as necessary. This can improve the vehicle's steering, particularly on snow and ice, as well as on wet or slippery roads.

The traction control light on the instrument panel starts flashing when traction control is controlling wheel spin, indicating that the vehicle is now in a critical situation. During the control operation the engine power output is reduced and the sound of the engine may change.

Traction control helps you to keep control of the vehicle and reminds you to match your speed to the road conditions. However, DO NOT let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style.

To check that the bulbs are working, the warning light on the instrument panel illuminates for a few seconds when the ignition is switched on. If the warning light does not illuminate or if it comes on during driving, a fault is indicated in the system and traction control is no longer be operational. You should contact your Holden Retailer.

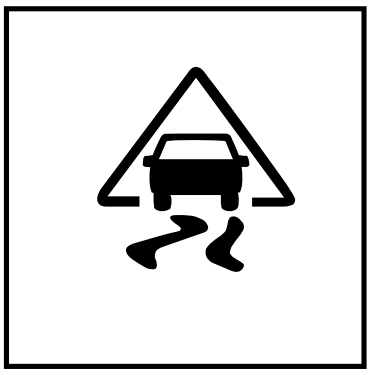

DRIVING PRECAUTIONS cont.

Snow chains (175/65 R14 tyres)

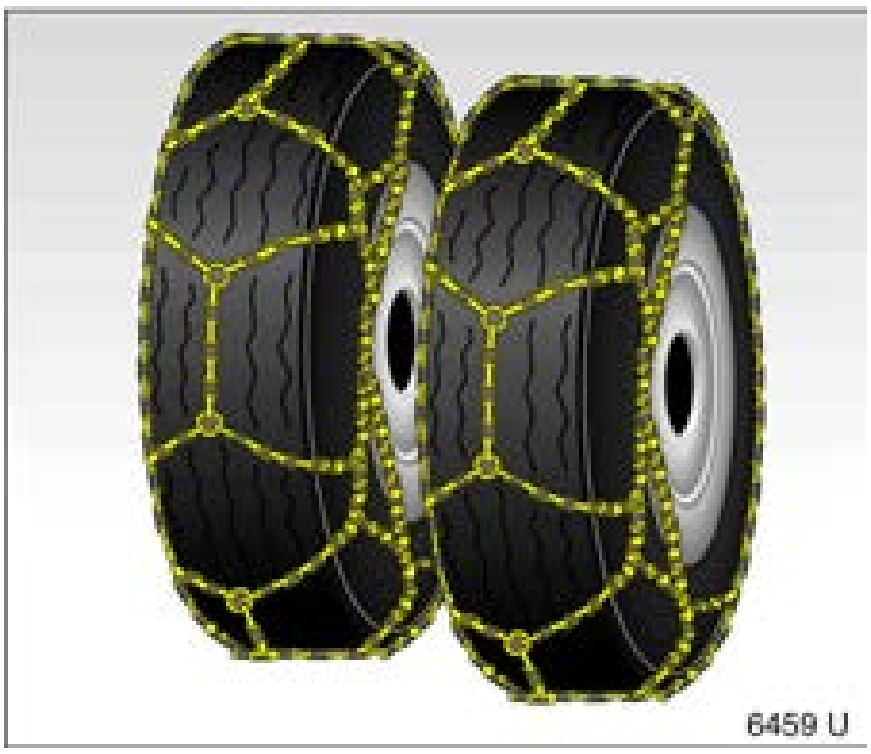

- Your vehicle is a 'front wheel drive' vehicle so snow chains are only to be fitted on the front (driving) wheels.
- They must be fitted symmetrically on the tyre to ensure that they are seated concentrically. Only fine-linked chains, not protruding more than 15 mm on the tyre tread and inside of the tyre (including the chain lock) should be used.
- Depending on design, large hub caps may come into contact with parts of the chains. In such cases, remove the hub caps.

WARNING:

Tyre chains can only be used at speeds up to 50 km/h and, when travelling on roads that are free of snow they should only be used for brief periods, since they are subject to rapid wear on hard roads and may snap.

Snow chains (185/55 R15 tyres)

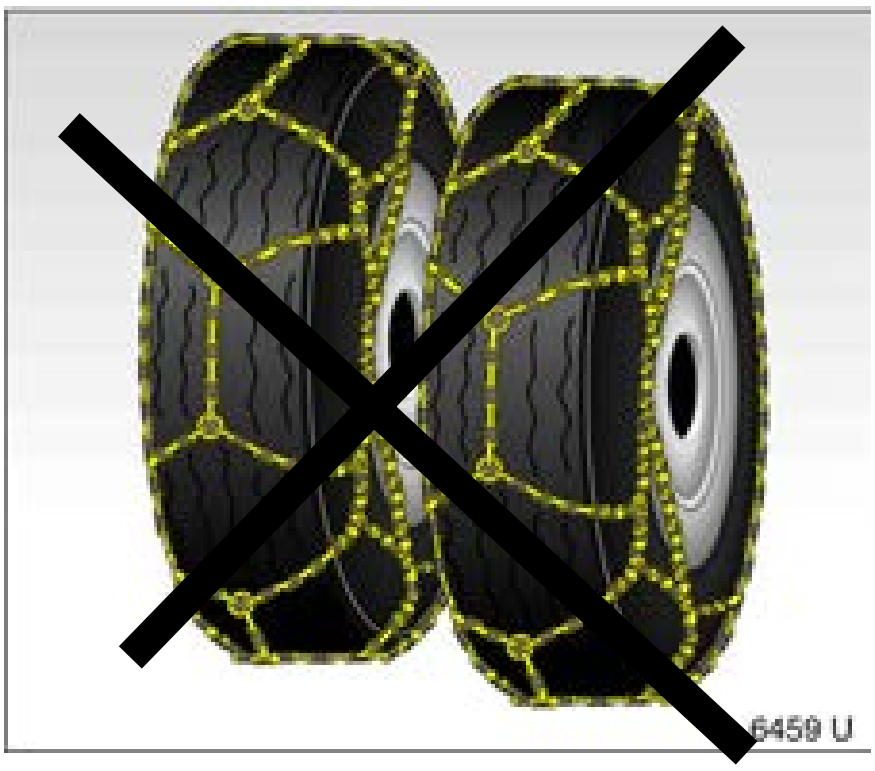

Barina SRi has 185/55 R15 tyres fitted as standard.

Due to lack of clearance, tyre chains are not to be fitted.

CHAPTER 5

Fuel

Page

5-2 Carbon monoxide caution
5-3 Petrol filling
5-4 Fuel tank capacity
5-5 Emission control
5-6 Reducing fuel consumption

PETROL

EXHAUST WARNING – CARBON MONOXIDE POISONING

Exhaust gases can produce carbon monoxide, a dangerous gas, which can cause unconsciousness and even death to both humans and animals.

You could inhale the gases if the exhaust system on your vehicle is faulty.

To protect against exhaust gases entering the vehicle, the exhaust system and body should be inspected:

- **each time the vehicle is serviced,**
- **whenever a change is noticed in the sound of the exhaust system,**
- **whenever the exhaust system, underbody or rear of the vehicle is damaged.**

Take the vehicle to your Holden Retailer if you think your vehicle needs inspecting for any of the above reasons.

DO NOT SIT (OR LEAVE CHILDREN OR PETS) IN A PARKED VEHICLE FOR ANY EXTENDED PERIOD OF TIME WITH THE ENGINE RUNNING. DO NOT RUN THE ENGINE IN AN ENCLOSED AREA (SUCH AS THE GARAGE) ANY LONGER THAN IS NEEDED TO MOVE THE VEHICLE.

Driving with the hatch / rear door open is not recommended. If you *must* travel with the hatch / rear door open, close all windows, ensure that the heater controls are set to the fresh air position (rather than recirculate) with air directed to the face and the fan on the highest speed. Do not exceed 50 km/h.

PETROL FILLING

WARNING:

- **Petrol should be regarded as extremely flammable and highly explosive.**
- **Always turn off the engine and any mobile phones when refuelling.**
- **Do not smoke or allow open flames or sparks near the vehicle when refuelling.**
- **If petrol fumes are smelt while driving, the cause should be found and corrected without delay by a Holden Retailer.**

The petrol filler is located on the driver's side of the vehicle.

MODELS WITH CENTRAL LOCKING

The petrol flap is unlocked when the doors are unlocked and locked when the doors are locked.

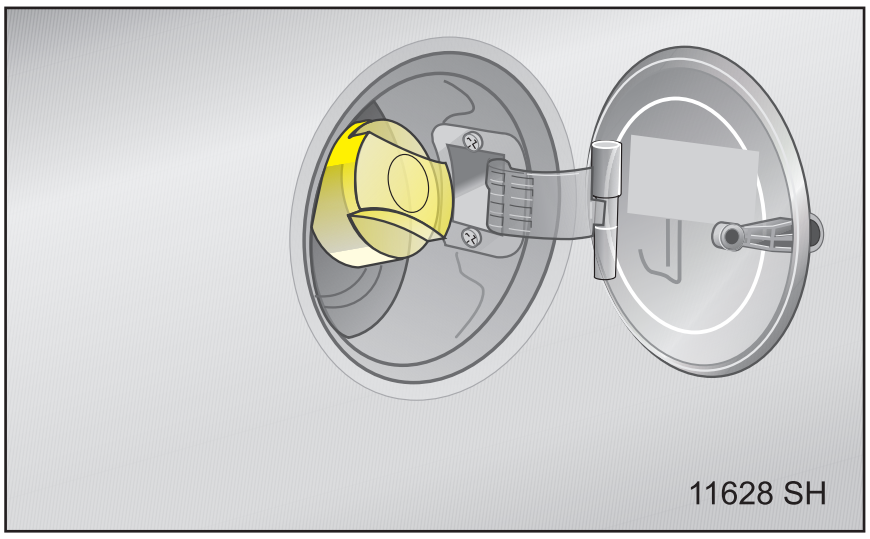

MODELS WITHOUT CENTRAL LOCKING

Pull the petrol flap to open it. Unlock the petrol filler cap by inserting the key and turning the key anticlockwise. Remove the cap by turning it anticlockwise.

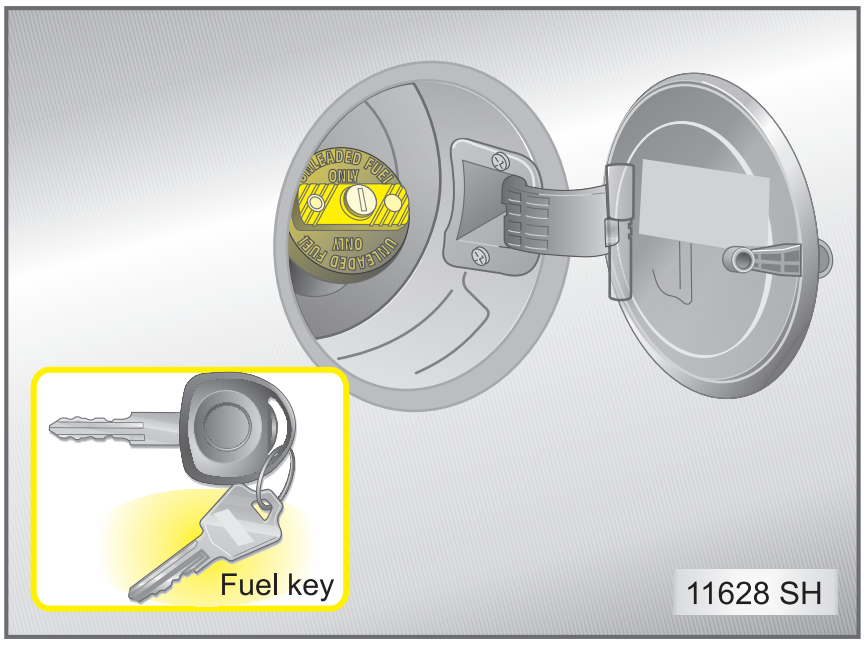

After refilling, firmly tighten the cap clockwise. For vehicles with a lockable fuel filler cap, turn the key clockwise to lock the cap. Close the petrol flap.

Over filling of the petrol tank can affect the evaporative Emission Control System and can also result in a smell of petrol inside the vehicle. Therefore:

1. Petrol tanks should always be filled at the intermediate or fast fill rate. Do not add any more petrol after the petrol filler first clicks off (or petrol blows back) – as this allows room for the petrol to expand inside the tank.
2. It is permissible to 'trickle fill' petrol tanks when vehicles are to be driven for more than 50 km straight after the tank is filled. However, this is not recommended on hot days (over 30°C).

Wipe off any overflowing petrol from the vehicle immediately; close the fuel opening then spray or splash with water.

PETROL FILLING cont.

Refer to Chapter 8 for fuel tank capacities.

Petrol filler nozzle restrictor

To help the atmosphere, your vehicle has been designed to operate on UNLEADED PETROL. A petrol nozzle restrictor is fitted to ensure that only UNLEADED petrol is used. This allows the smaller diameter, unleaded petrol nozzle to open the hinged flap inside the filler neck, so that petrol can be added to the tank. The leaded petrol nozzle is wider and therefore cannot open the flap. The use of fuel other than unleaded fuel will seriously damage the fuel system of your vehicle (particularly the catalytic converter and oxygen sensor) and may void your Warranty.

Petrol requirements R.O.N. (Research Octane Number)

Use clean, UNLEADED PETROL of at least 91 octane rating. High octane (PREMIUM UNLEADED) can be used and will provide slight improvement in engine power and torque.

EMISSION CONTROL

Your vehicle is fitted with emission control systems which are designed to reduce the amount of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) that are emitted from the engine and fuel system into the atmosphere. Hydrocarbons and oxides of nitrogen, when exposed to sunlight under certain conditions, contribute to photochemical smog. In addition, carbon monoxide is toxic when it becomes highly concentrated in the air.

Owner responsibility

Vehicles sold and serviced within Australia have been designed to comply with Australian Design Rules and State Regulation emission requirements.

The engine or exhaust system of your vehicle must NOT be modified in any way. Any change to the Manufacturer's design may increase the emissions or otherwise defeat the intent of the regulations.

WARNING

Any person who removes, modifies or hinders any part of the emission control system fitted to a vehicle will be contravening Australian Design Rules. Refer to A.D.R. 28/01 (External Noise for Motor Vehicles) and Barina – A.D.R. 37/01 (Emission Control for Light Vehicles) or Combo – A.D.R. 79/00 (Emission Control for Light Vehicles).
It is also illegal to drive a vehicle modified in this way.

Maintenance requirements

To ensure continuing compliance with the regulations you must maintain your vehicle's emission control system as per your vehicle's service manual, at the frequency shown in the Maintenance schedule in Chapter 12.

It is recommended that the necessary servicing be performed by an authorised Holden Retailer who has the specialised servicing equipment and trained personnel available to ensure that the adjustments and services specified are carried out.

REDUCING FUEL CONSUMPTION

Engine

Maintain the engine in peak mechanical condition by having it serviced regularly in accordance with the Maintenance schedule in Chapter 12. This will ensure items such as the spark plugs, air cleaner, etc. are maintained for minimum fuel usage and peak engine performance.

Tyre pressure

Inadequate tyre pressure causes higher fuel consumption and increased tyre wear. Keep the tyres at the recommended pressures.

Wheel alignment

Maintain correct front wheel alignment. Incorrect alignment makes the front wheels drag and increases fuel consumption.

Warm ups and idling

Avoid long engine warm ups through idling. They are unnecessary and waste fuel. An engine reaches its efficient operating temperature most effectively when driving.

You should also avoid long engine idling. If you have to wait for more than a couple of minutes it is worthwhile to switch off the engine and conserve fuel. Three minutes of idling corresponds to approximately 1 km of driving.

Accelerating, driving and braking

Accelerate gently and avoid rapid starts. Sudden bursts of speed, full throttle acceleration and hard braking are certain fuel wasters.

Drive the vehicle at steady speeds where possible (after run-in). It is desirable to reach top gear as soon as possible, but under no circumstances should you force the engine to labour in top gear.

Riding the brake

'Riding the brake' by resting your foot on the brake pedal when you do not intend to brake can cause overheated brakes. This can wear out the brake pads faster, damage the brakes and waste fuel.

Air conditioning (if fitted)

Turn off the air conditioning when not required, to reduce fuel consumption.

Roof racks (if fitted)

Roof racks can increase fuel consumption by 1 litre per 100 km or more, due to the increased air resistance. They should therefore be removed when not in use.

Loading

Unnecessary weight increases fuel consumption, especially when accelerating. In city traffic, a load of 100 kg can increase fuel consumption by 0.5 litre per 100 km.

Notes

CHAPTER 6

Emergencies

Page

6-2 Accidents
6-3 Medical assistance
6-4 Flat tyre
6-10 Towing your vehicle
6-12 Engine overheating
6-14 Flat battery
6-16 Air bags
6-18 Bulb replacement
6-28 Fuses

Your new vehicle is covered for 3 years by 24 hour Roadside Assistance. Refer to Chapter 9.

ACCIDENTS

All motorists are advised to learn what to do at the scene of an accident, particularly where persons are injured. Injured people can choke to death if their air passages are not cleared. They can bleed to death unless the bleeding is stopped. They may require mouth-to-mouth resuscitation or may have to be moved, even though badly injured. It is important that you understand how to avoid further damaging an injured neck or back or other broken limbs. In all cases, ensure safety for the rescuers, victims and bystanders. The following notes may help.

Part 1. Accident – being involved

- If you are involved in an accident you are advised to do as follows:
- Stop immediately and remember to turn off the engine and apply the park brake.
- Remember that time is vital. Remain calm and alert. Think quickly and clearly.
- Give all possible assistance to all injured persons (see Part 3. Medical assistance).
- Send for police and ambulance if anyone has been injured. Give information as accurately as possible. Give the exact location, the number of injured people and a brief report on the overall situation.
- Warn all other traffic approaching the scene. Turn off all ignition switches. Stop any smoking and mobile phone use near spilt petrol. In darkness, try and light up the area to warn others - use hazard lights, a torch, headlights etc. Do not use flammable items.
- Clear the road of accident debris.
- Exchange your name, address, vehicle registration number and the vehicle owner’s name and address with the other parties involved in the accident.
- If damage to property only has occurred, report the facts to the owner of the damaged property, to his or her representative, to any police present at the scene or to the nearest Police Station.
- Try to note all important facts because such details may be important if needed later.

Part 2. Accident – being a witness

If you witness a road accident or it becomes your task to stop and help at the scene of an accident:

- Keep in mind that an observant witness can prove most helpful. Some day you yourself might be very glad of help from a witness.
- DO NOT stop at the scene of an accident just to be a spectator.
- Where other people are already in attendance and giving assistance, you should stop only if you can contribute assistance.
- Give what assistance you can to any injured persons (see Part 3. Medical assistance).

ACCIDENTS

Part 3. Medical assistance

This information is basic first aid information which is intended as a guide only and may not be applicable in all situations. You should always defer to a trained medical officer or other person with first aid knowledge. Protective equipment, such as rubber gloves are recommended.

Keep calm and think clearly. Your experience may not be much but do your best.

- Look after the unconscious person first. Check airway, breathing and circulation. If there is no breathing, check if air passages are clear, i.e. nose and mouth. Use your fingers to clear air passages if necessary. If the air way is clear then mouth-to-mouth resuscitation may be needed at once.
- You must be very careful when moving an injured person. It is best not to move at all, except if in danger, as serious and permanent damage can be done to an injured neck or back if not supported during movement. AVOID BENDING OR TWISTING A NECK OR BACK. KEEP THEM STRAIGHT. All injured limbs require support when an injured person has to be moved.
- Unconscious people can choke. To help avoid this:
  - carefully turn the person to one side
  - tilt their head back slightly
  - wipe out the mouth with your finger to remove blood, vomit, broken teeth or dentures.

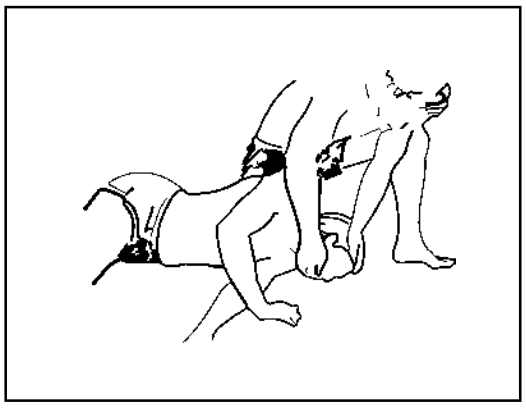

- Provided it is not dangerous to do so due to injuries, an unconscious person will do best in the following position:
  - lay the person on one side
  - bend the uppermost knee until the thigh is at a right angle to the body
  - bend the uppermost shoulder and elbow so that the hand lies near the face
  - gently pull the underneath arm so that it rests straight on the ground free of any body weight.

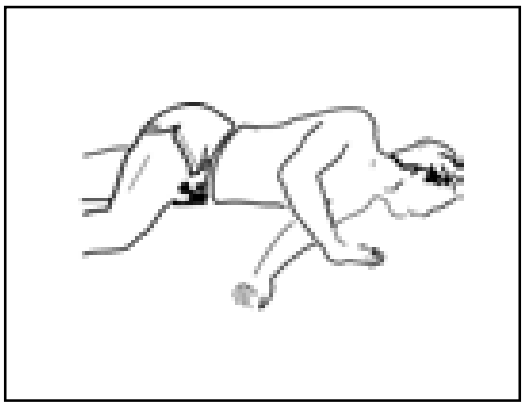

- Try to stop bleeding by applying direct pressure, using your hand, or by pressing torn flesh together. Use any clean cloth available. Fold cloths to make pads. If necessary press one pad on top of another. Keep pressure around edges of a wound BUT NEVER USE A TOURNIQUET.
- Shock may be treated by reassurance, relieving pain, controlling any bleeding and keeping the injured person warm but not hot. It is best not to give any fluids and NEVER ALCOHOL.
- If the injured person is in danger and has to be moved, try and have three or four people help and concentrate on not bending or twisting the neck, spine and injured limbs. Keeping the neck and spine straight is most important.

FLAT TYRE

WARNING:

- **Use the jack only for lifting the vehicle when changing wheels.**
- **Never get beneath the vehicle when it is only supported by the jack.**
- **Do not start or run the engine while the vehicle is only supported by the jack.**
- **All passengers should be out of the vehicle when it is being jacked.**
- **Use the jack only at the designated lifting points. Use in other locations could damage the vehicle.**
- **The vehicle should only be jacked on hard, level surfaces.**
- **If your vehicle is fitted with alloy wheels and supplied with a steel spare wheel, the flat tyre on the alloy wheel should be repaired and refitted to the vehicle as soon as possible.**

1. Park on a level surface, ensure the wheels are pointing straight ahead and set the park brake firmly.
2. Remove the ignition key (to lock the steering) and place the transmission in REVERSE gear (for a manual vehicle) or in PARK (for an automatic vehicle).
3. Remove the spare wheel, jack and tool kit.

BARINA

The spare wheel, jack and tool kit are stored under the luggage compartment floor area.

Lift the floor cover to access and remove the spare wheel. The spare wheel is secured by a large plastic wing nut.

The jack and tool kit are stowed in a bag underneath the spare wheel.

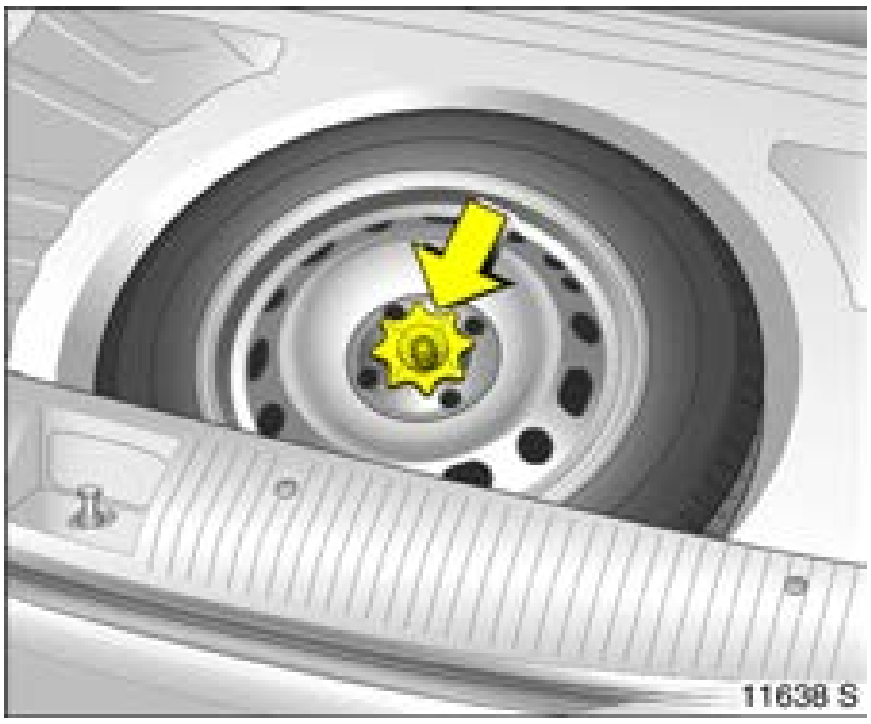

FLAT TYRE cont.

COMBO

The jack and tool kit are stored behind the driver's seat. The spare wheel is located under the rear of the vehicle.

Remove the tools by unfastening the rubber retaining bands. Release the jack by turning the jack retaining screw anticlockwise.

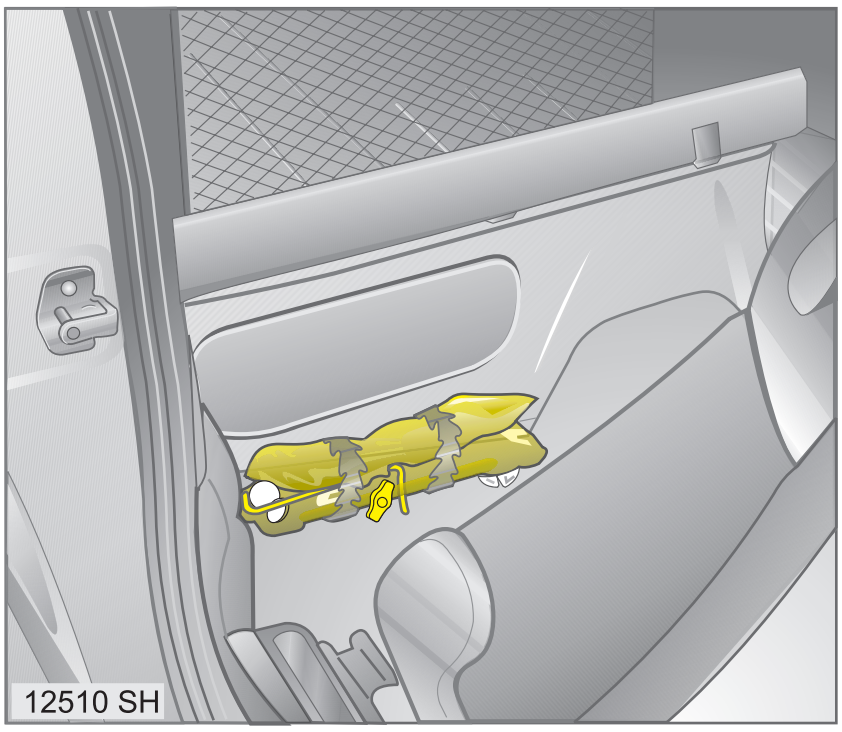

Remove the spare wheel as follows:

Unhook the catch that prevents unintentional lowering of the spare wheel.

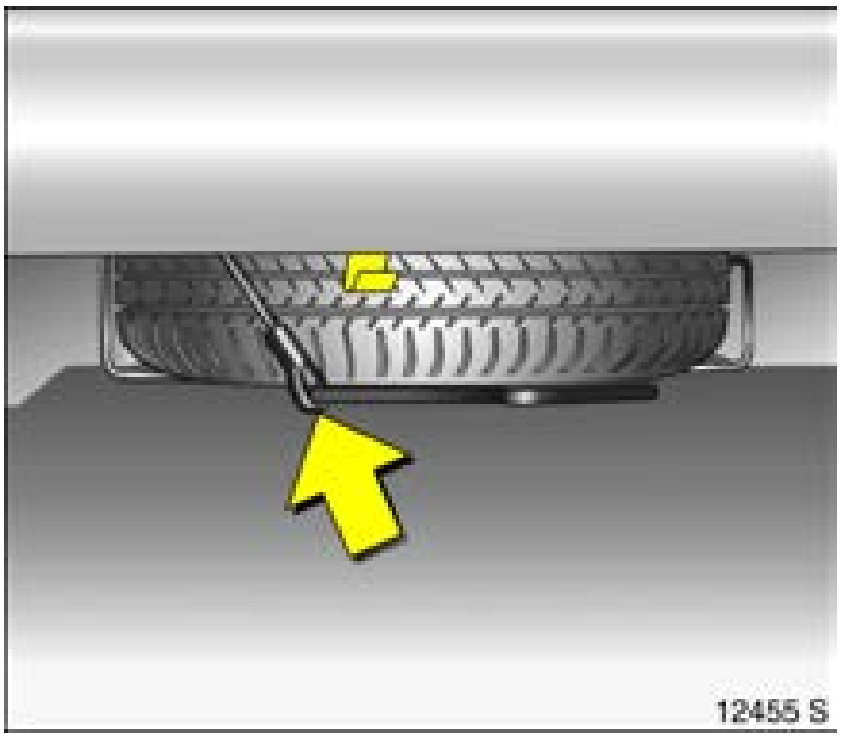

Locate the spare wheel retaining bolt at the rear of the luggage compartment.

Use the wheel brace provided in the vehicle tool kit to turn this bolt anticlockwise and lower the spare wheel a short way.

Detach the safety cable.

Lower the spare wheel to ground level and remove it from its retaining frame.

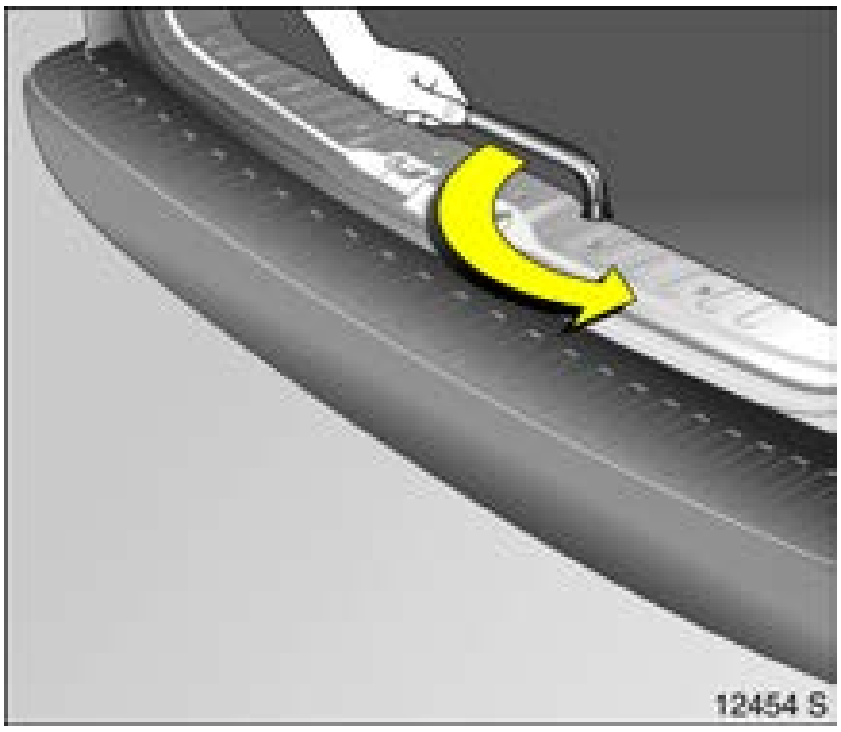

FLAT TYRE cont.

4. Chock the wheel diagonally opposite the flat tyre by placing wedge blocks, any available blocks of wood or rocks behind and in front of it.

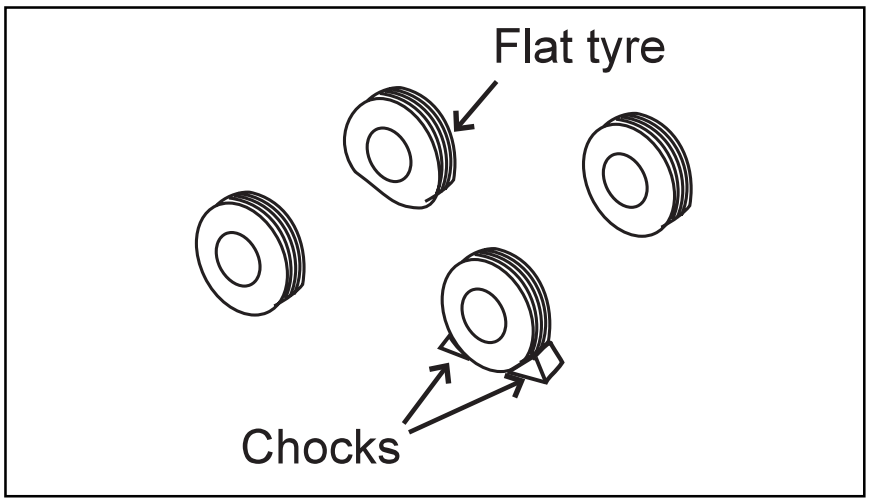

5. Remove the wheel trim, if fitted.

   STEEL WHEELS
   For vehicles with full wheel covers or half wheel covers, remove the cover using the tool provided in the vehicle tool kit.

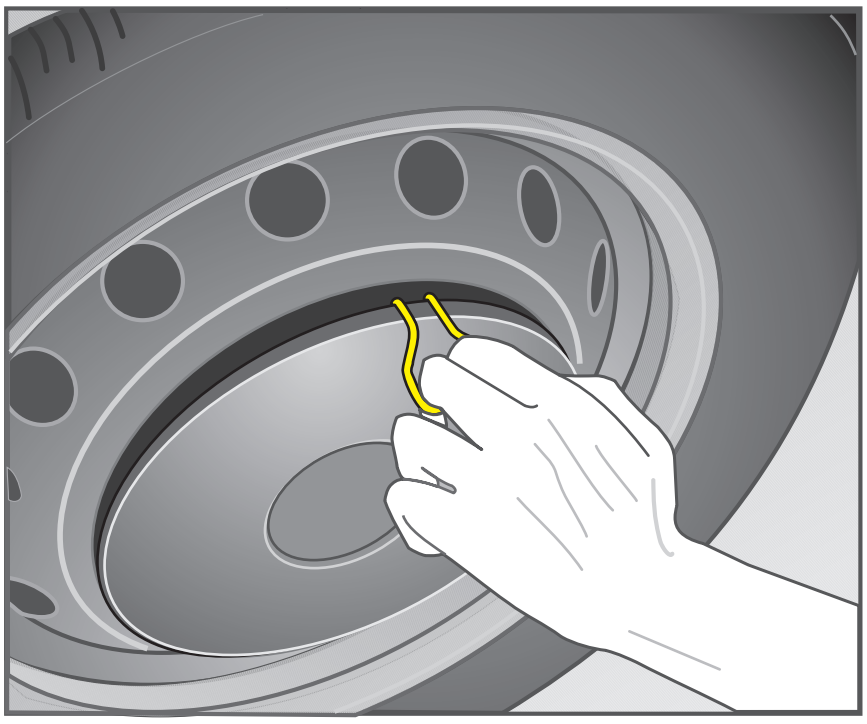

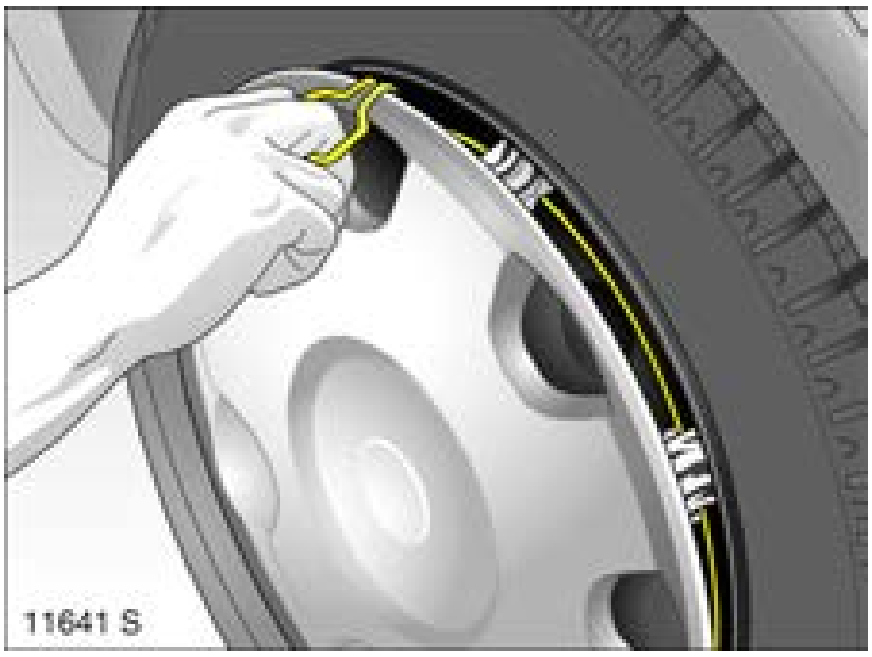

FLAT TYRE cont.

ALLOY WHEELS
For vehicles with centre caps, use a screwdriver (provided in the tool kit) to remove the cap using the following method.

Position the screwdriver in the recess at the side of the hub cap and lever the cap partly off. Place the screwdriver in the opposite bolt hole and lever the cap fully off the wheel.

Use the screwdriver to remove the plastic wheel bolt caps (if fitted).

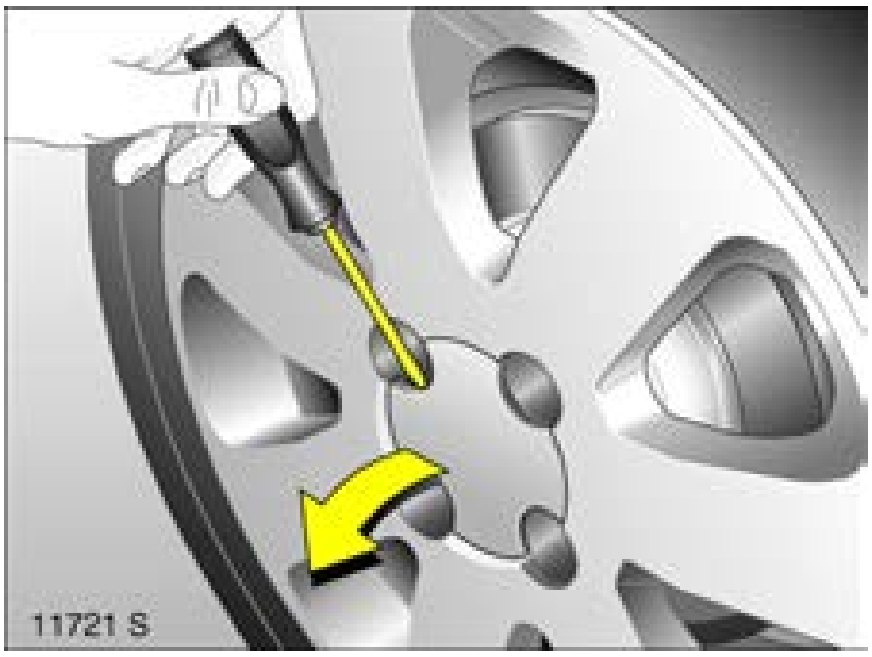

ANTI-THEFT WHEELS
Use the key provided in the tool kit to remove the centre cap.

6. Loosen (but do not remove) the wheel bolts with wheel bolt wrench.
7. Depressions on the lower edge of the vehicle underbody indicate the points where the jack is to be placed.

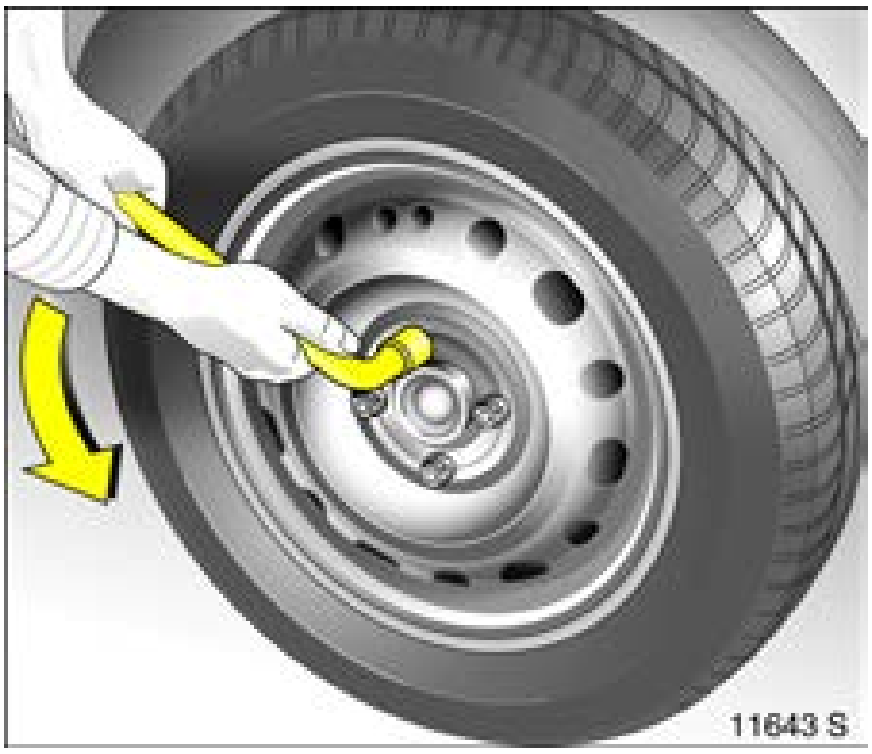

FLAT TYRE cont.

SIDE-SKIRT BODY TRIM

If your vehicle has side-skirt body trim fitted, side skirt cutouts are situated near the jacking points to provide adequate clearance for jack operation.

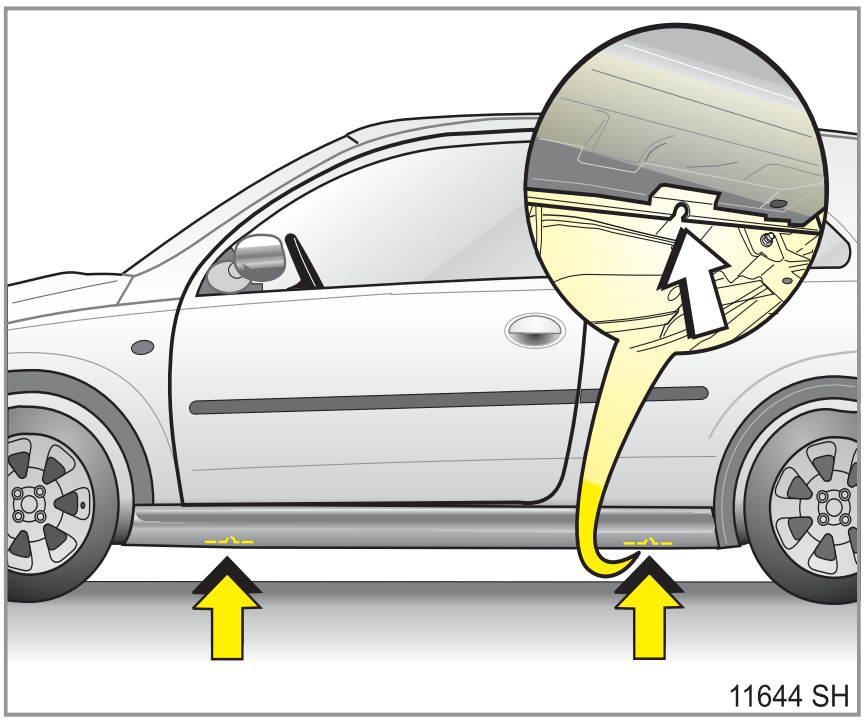

8. The jacking points may be concealed by covers. Remove the jacking point covers, as necessary.

WARNING:

Failure to position the jack as described above could result in serious personal injury or vehicle damage caused by the vehicle slipping off the jack.

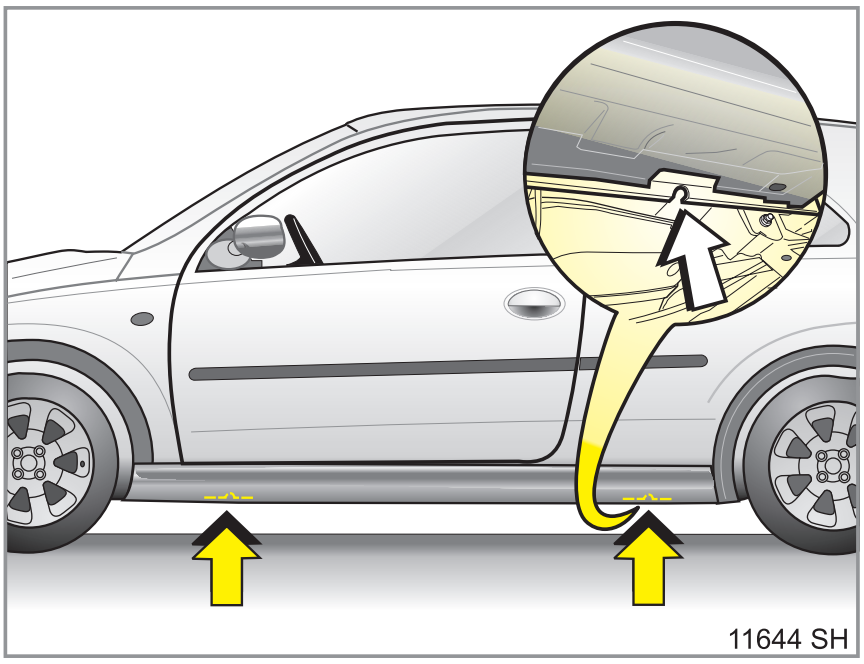

9. Position the jack in the underbody depression that is nearest the flat tyre.

   Ensure that the centre of the jack claw is in line with the half circle cutout in the underbody and that the jack base is in line with the claw. Refer to page 6-4 for jacking precautions.

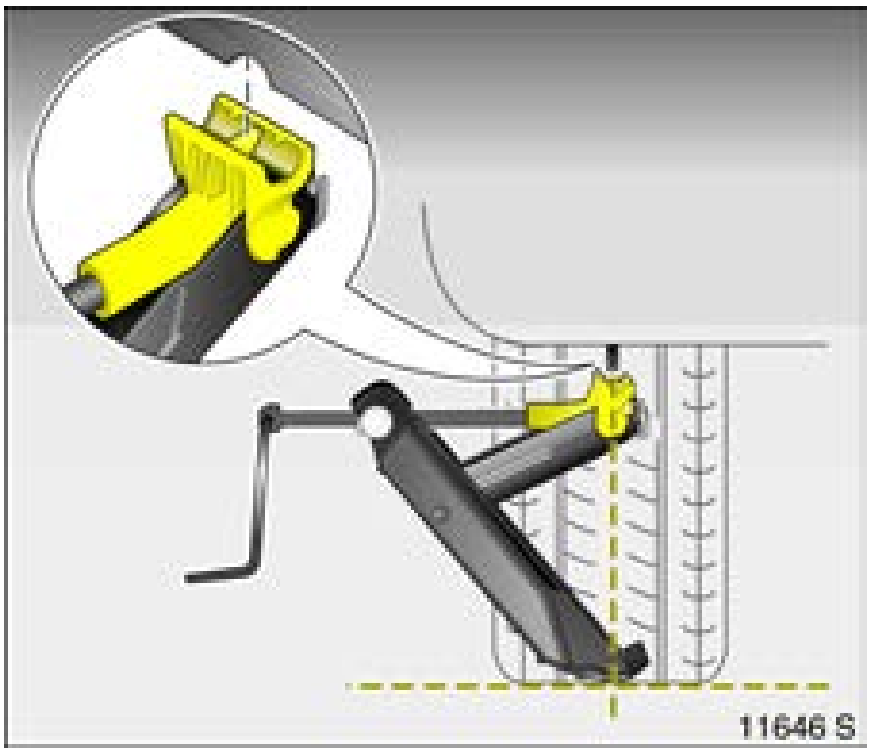

FLAT TYRE cont.

10. Raise the vehicle by turning the crank handle, until the tyre is clear of the ground.
11. Remove the wheel bolts and place together in a dry spot, to avoid getting dirt in the threads.
12. Remove the wheel from the vehicle and change it over with the spare.
13. Install the wheel bolts and tighten by hand. Then, with the wheel wrench, lightly tighten in a crisscross sequence.
14. Lower the vehicle completely and remove the jack.
15. Fully tighten the wheel bolts with the wheel wrench in a crisscross sequence, as shown.

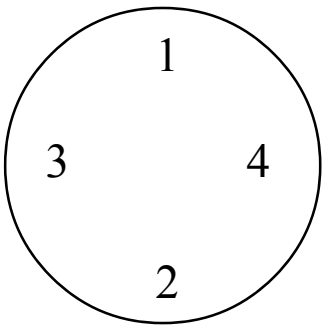

16. Install the wheel trim:

    Steel wheels: Full size wheel covers have a valve symbol on the rear of the cover, which should point towards the valve. Line the hole for the valve with the valve and press on the wheel trim.

    Alloy wheels: Install the individual wheel stud caps and press on the centre cap. When replacing the centre cap, align the pin on the back of the cap with the corresponding hole in the wheel and push the centre cap firmly into place.
17. Place the jacking point cover back over the jacking point, as necessary.
18. Stow away wheel, tools and jack.
19. Have the flat tyre repaired as soon as possible.

WARNING:

As soon as possible after changing a wheel, you should have the wheel bolts tightened with a torque wrench to 110 Newton metres and have the new wheel balanced on the vehicle.

Wheel bolts should be tightened evenly to the correct torque in a crisscross pattern. Wheel bolts which have not been tightened properly could eventually allow the wheel to come off while the vehicle is moving.

TOWING YOUR VEHICLE

Proper lifting or towing equipment is necessary to prevent damage during any towing operations. Follow state and local laws. In an emergency, your vehicle may be towed on all four wheels in the following manner:

- Remove the towing eye hole cover (located at the front, driver's side of the vehicle) by pressing the lower edge of the cover then pulling it outwards.
- The towing eye is located with the jack and tools (Barina – beneath the spare wheel in the load area, Combo – behind the driver's seat).
- Screw in the towing eye anticlockwise as far as it will go and use the wheel bolt wrench to tighten it until it is horizontal.
- Attach a tow rope to the eye. Do not attach it to the bumpers, brackets or any other part of the vehicle.
- Place the transmission in neutral (N) and release the park brake.
- Switch the ignition to position II (ON). This frees the steering lock and allows the correct operation of the windscreen wipers, horn and turn signals.
- For safety and to prevent damage to the vehicle, avoid jerky movements and drive slowly during towing operations.
- Remember that power assist for brakes and power steering is not available when the engine is off. Therefore, more effort is required to brake and steer.
- To prevent the entry of exhaust fumes from the towing vehicle into the passenger compartment of your vehicle, close the windows and move the heating and ventilation controls to the recirculate position.
- Vehicles fitted with automatic transmissions should only be towed facing forwards and must not be towed for more than 100 km or over 80 km/h.
- If the transmission is defective or if the above speed or distance is to be exceeded, the front of the vehicle must be raised.
- Only the driver should be in a towed vehicle.

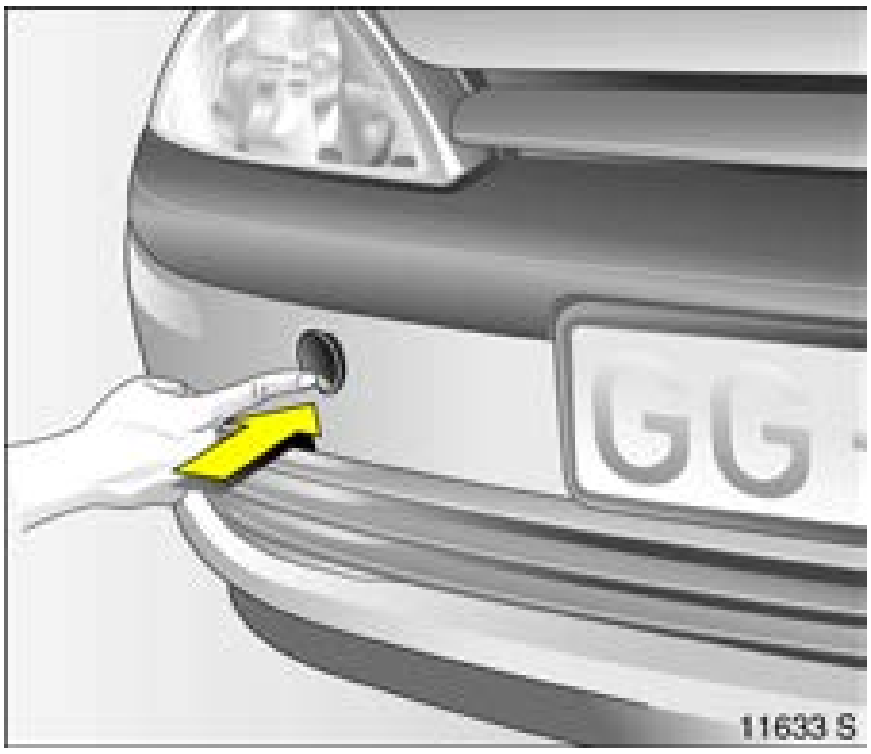

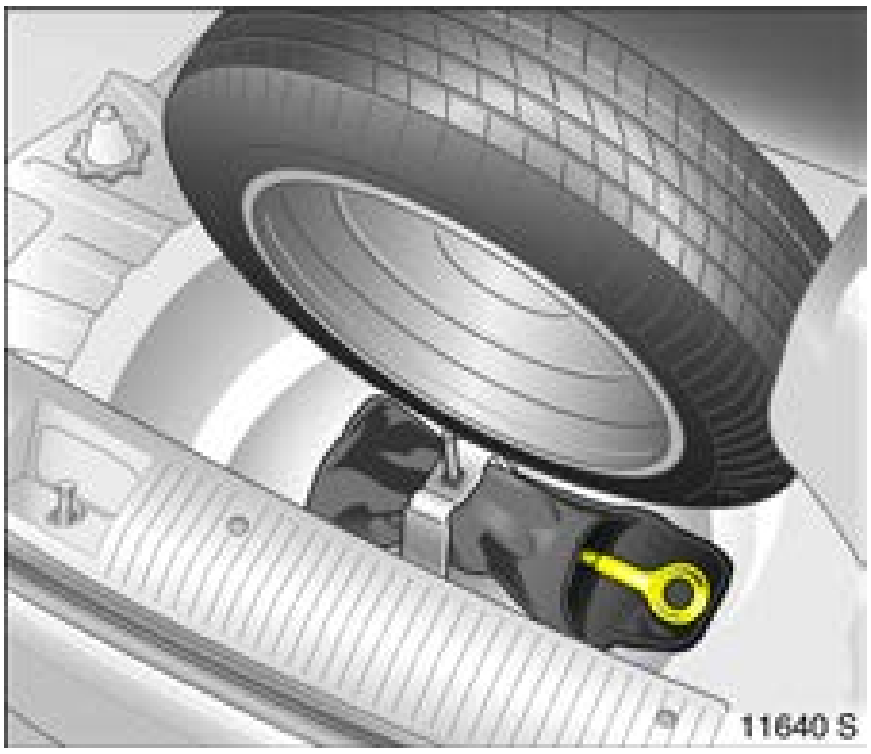

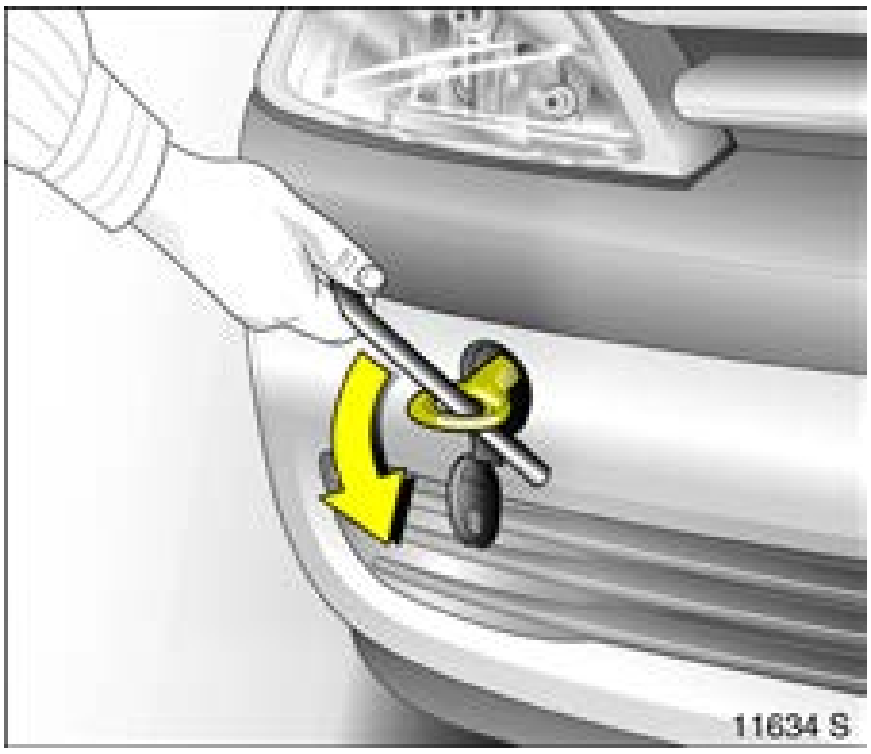

TOWING YOUR VEHICLE cont.

Models with automatic transmission

For safety reasons, the transmission has an electric park (P) lock so that the key must be in the ignition (in the ON position) before the T-bar can be moved away from the 'P' position.

If the vehicle's battery is flat the T-bar cannot be moved as required for towing. Therefore, to move the T-bar:

1. Apply the park brake.
2. Disengage T-bar trim from console and rotate it anticlockwise.
3. Push catch forward and move T-bar handle out of 'P' position, as per the illustration.
4. Install T-bar trim on centre console.
5. Install cover on console.

Moving the T-bar back to the 'P' position again will re-lock the lever.

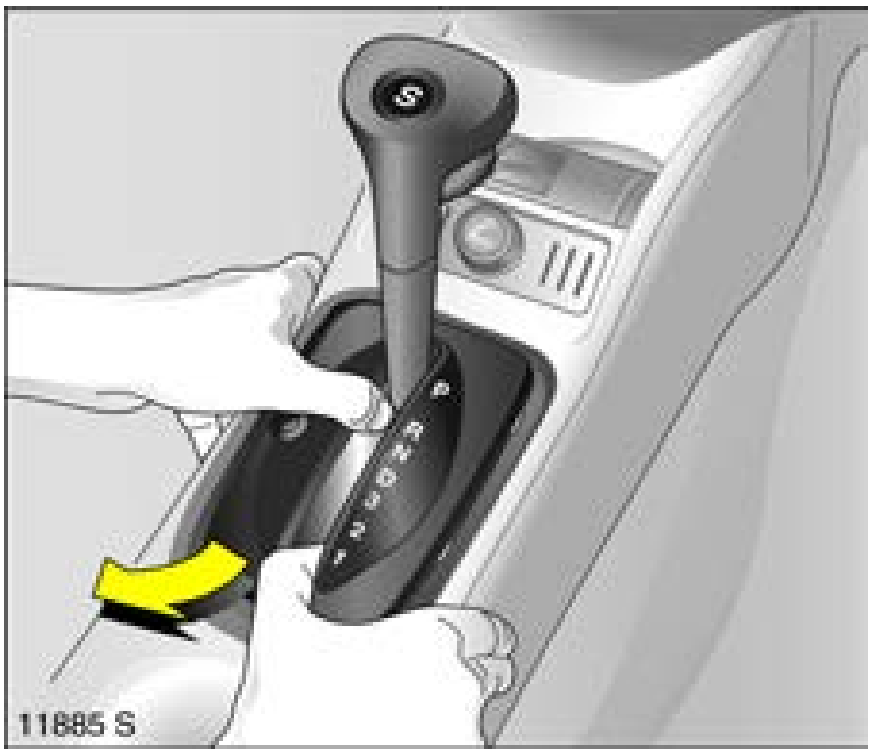

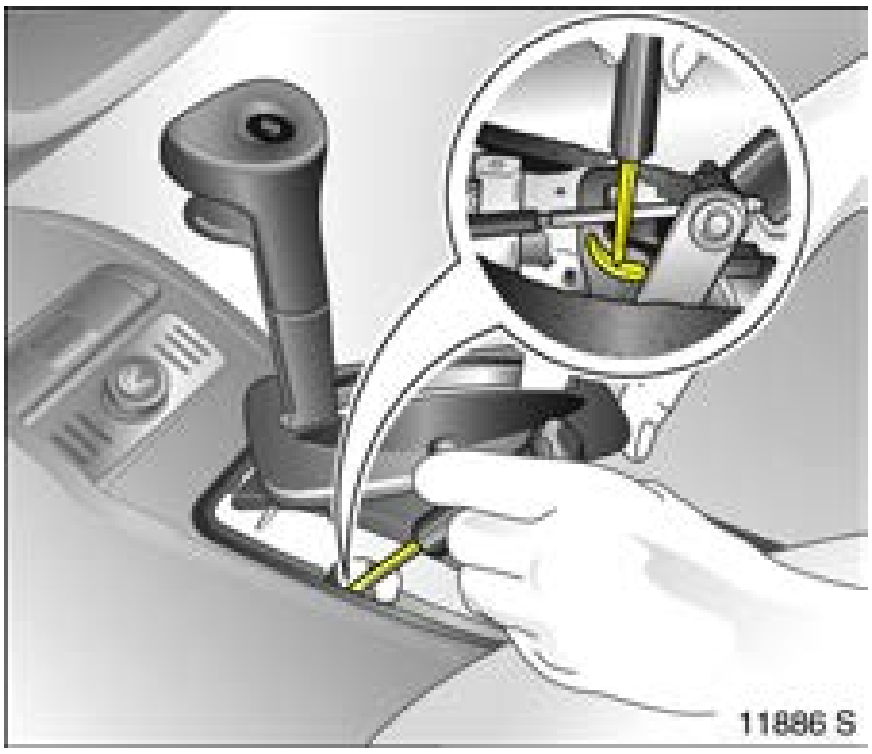

Towing another vehicle with your vehicle

The rear towing eye is located under the rear, right-hand side of the vehicle.

1. Attach a tow rope to the rear towing eye, never to the rear axle.
2. Drive off slowly and avoid jerky movements.

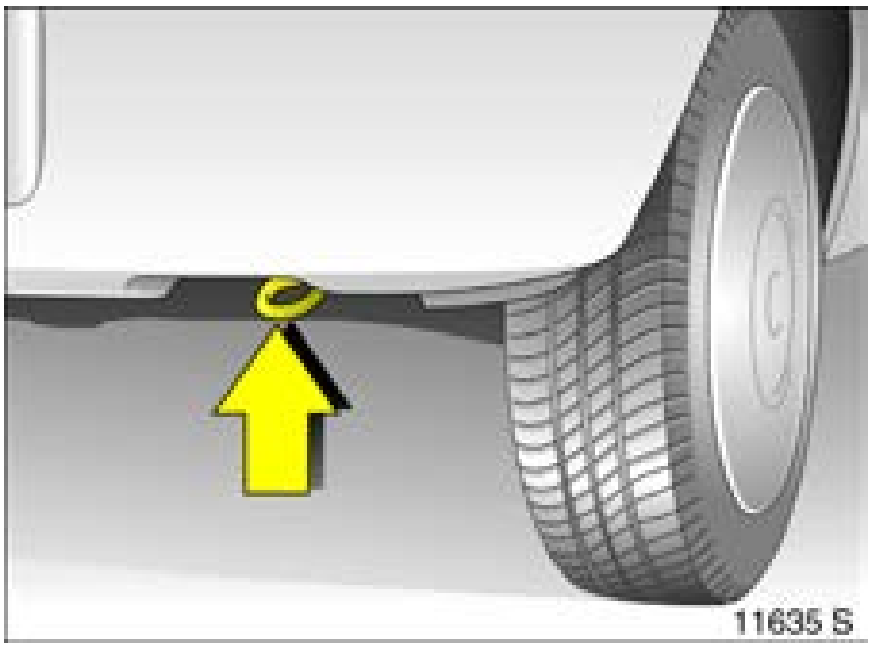

ENGINE OVERHEATING

WARNING:

Immediate action is required if the engine overheats. This can be indicated by the temperature gauge needle moving to the red zone, by steam escaping from under the bonnet, a loss of power or a loud knocking or pinging noise.

Continued driving EVEN FOR A SHORT TIME could cause a fire or vehicle damage.

Pull out of the traffic as soon as possible and stop the vehicle. Leave the engine idling and the park brake applied while you get out and check that the cooling fan is working.

WARNING:

Do not open the bonnet if you can see or hear steam or coolant escaping from the engine compartment. Wait until no steam or coolant can be seen or heard before opening the bonnet.

If the fan is working and the temperature gauge needle has not returned to its normal position within a few minutes STOP the engine and remove the ignition key.

Look for leaks at the radiator hoses and connections, heater hoses and connections, radiator and water pump.

Take care when checking all these areas as they will probably still be hot.

IF YOU FIND A MAJOR LEAK OR OTHER PROBLEMS THAT MAY HAVE CAUSED THE ENGINE TO OVERHEAT, DO NOT RUN THE ENGINE UNTIL THESE PROBLEMS HAVE BEEN CORRECTED.

If you do not find anything wrong then you should check the engine coolant level in the surge tank.

The coolant level in the surge tank should be slightly above the KALT / COLD mark, indicated by the arrow symbol ⇩ visible on the surge tank, when the system is cold. The level rises with the engine operating temperature and drops again when the engine cools down. If the level falls below the mark, the coolant should be replenished to a little over the mark.

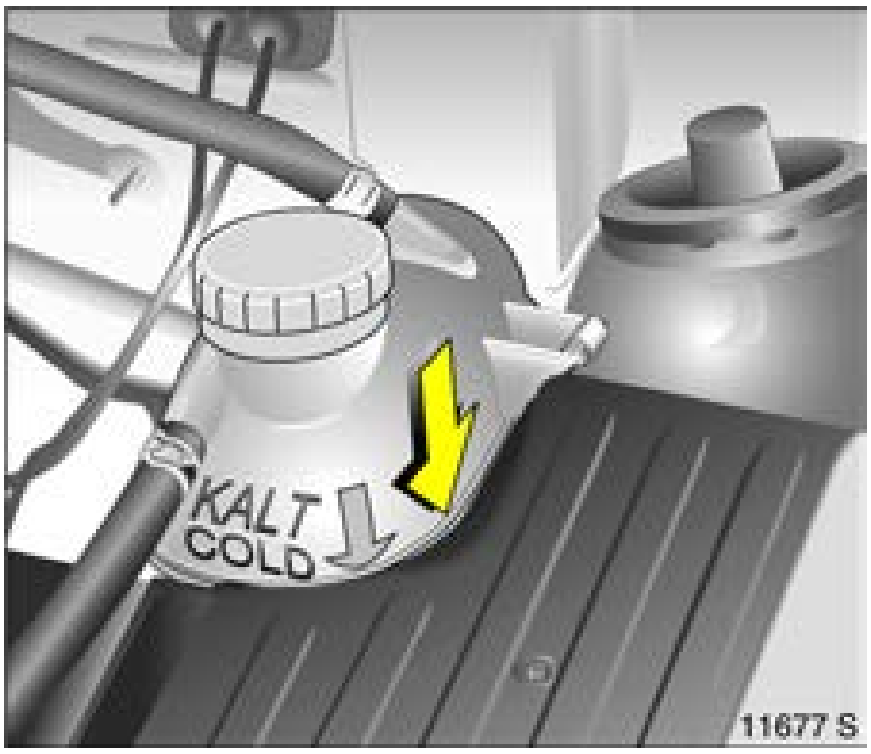

WARNING:

Do not remove the cooling system cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

ENGINE OVERHEATING cont.

If the level is low, remove the surge tank cap as follows:

Cover the surge tank cap with a thick cloth. Turn the cap slowly anticlockwise and remove.

Top up the surge tank with clean water to a little over the KALT / COLD level, indicated by the arrow symbol ⇩visible on the surge tank, WHEN THE ENGINE IS IDLING.

Install the cap and leave the engine idling for a few minutes.

If, after taking one or more of the above actions the temperature gauge no longer signals an overheat condition you can resume driving at a reduced speed. Return to normal driving after 10 minutes if the temperature gauge does not again show an overheat condition.

If overheating occurs again you should have the vehicle attended to, as soon as possible, by a qualified mechanic.

Note: With this type of sealed, pressurised cooling system, there should be very little loss of coolant. If the surge tank is low, a leak is indicated. Therefore you should see your Holden Retailer as soon as possible to fix the leak.

The engine may temporarily operate at high temperatures during more demanding operating conditions, especially on very hot days. These conditions include:

- climbing a long hill
- stopping immediately after high speed driving
- idling for long periods in traffic
- towing a heavily laden trailer or caravan.

You should avoid operating your vehicle for prolonged periods in any of the above circumstances if the temperature gauge indicates a high engine coolant temperature.

Refer to Chapter 7 for maintenance instructions to help protect your cooling system from overheating.

FLAT BATTERY

WARNING:

DO NOT attempt to 'push start' this vehicle, as it is fitted with a catalytic converter and if uncombusted fuel were to reach the catalytic converter and ignite, the converter could overheat or be destroyed by backfire.

If your vehicle will not start due to a flat battery, it can often be started by using energy from a battery in another vehicle – a procedure called 'jump starting'.

Please read the following procedure in full before attempting to jump start your vehicle.

However, if after reading the following procedure you are still unsure about jump starting we strongly recommend for your safety and that of your vehicle that you leave the starting to a competent mechanic. If the battery repeatedly discharges, consult your Holden Retailer.

Jump starting

WARNING:

Batteries produce explosive gases, contain corrosive acids and supply levels of electrical current high enough to cause burns. Therefore, to lessen the chance of personal injury when working near a battery:

- **Do not expose the battery to open flames or sparks. Battery action generates hydrogen gas which is flammable and explosive.**
- **Do not smoke near a battery.**
- **Wear eye protection such as industrial safety glasses.**
- **Do not allow battery acid to contact eyes or skin. Flush any contacted area with water immediately. In case of eye contact you should get medical help. Battery acid also damages paint and fabrics. To minimise damage, wash off immediately.**
- **Be sure any batteries that have filler caps are properly filled with fluid.**
- **Remove rings, metal watch bands and other metal jewellery before working around the battery.**
- **Carefully follow each step in the jump starting process.**
- **Never use a quick charger to start your engine.**
- **Do not lean over the battery during jump starting.**
- **The battery of your vehicle has a negative earth and a 12 volt rating. The battery in the other vehicle must be the same voltage and also have a negative earth. The battery capacity of the charged battery must not be substantially lower than that of the discharged battery. So, check the specifications in the other vehicle's owner manual to see if it complies. Serious injury or damage may result if the wrong type of battery is used.**

FLAT BATTERY cont.

- **Position the two vehicles so that they are NOT touching and apply the park brakes. Automatic transmissions are to be placed in PARK and manual transmissions placed in NEUTRAL. Turn off ignition, all lights and accessories in both vehicles, except the hazard warning flasher or any lights needed for the work area.**

Connect the leads in the order shown in the picture

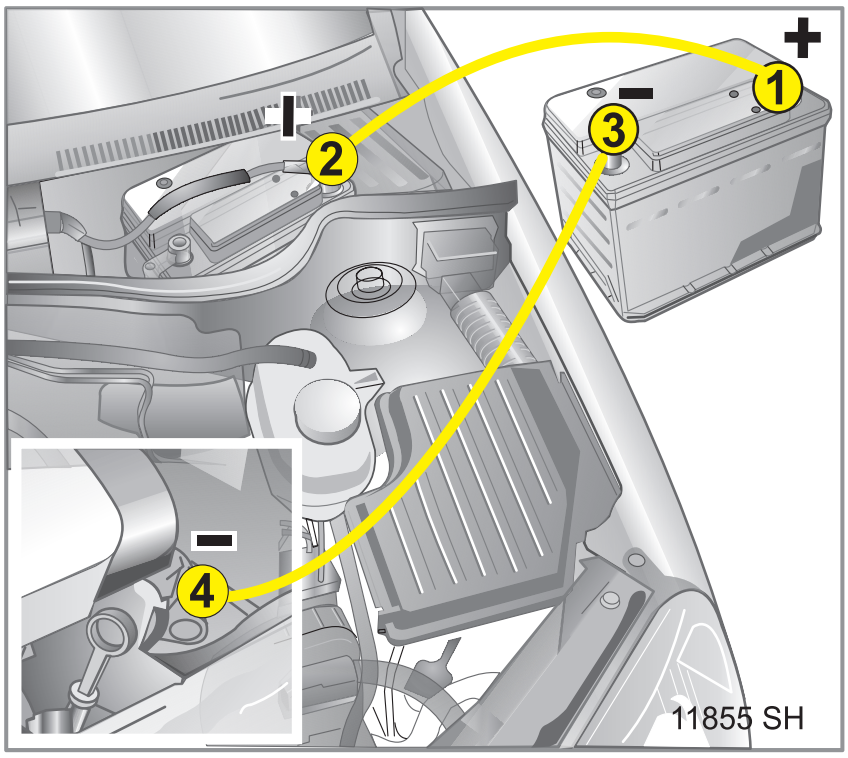

1. Attach one end of the first jumper cable to the positive terminal of the charged battery (identified by '+' or 'P' on the battery case, post or clamp).
2. Connect the other end of the same cable to the positive terminal of the flat battery.
3. Attach one end of the second jumper cable to the negative terminal of the charged battery (identified by '–' or 'N' on the battery case, post or clamp).
4. Connect the other end to a solid stationary, metallic point on the engine that has the flat battery.

   DO NOT CONNECT DIRECTLY TO THE NEGATIVE POST OF THE BATTERY.

The connection should be as far away from the flat battery as possible.

Note:

- When making all connections take care that the clamps from one cable do not inadvertently touch the clamps on the other cable. Also, ensure that the jumper cables are not on or near pulleys, fans or other points that will move when the engine is started.
- Start the engine in the vehicle with the charged battery and run the engine at a moderate speed. Then start the engine in the vehicle with the flat battery. Attempts to start the engine with the flat battery should be made at intervals of one minute and should last no longer than 15 seconds.
- After starting, allow both engines to idle for approximately 3 minutes with the leads still connected.
- Leave the engine running as you remove the jumper cables by reversing the above sequence exactly. While removing each clamp, take care that it does not touch any other metal while the other end remains attached.

AIR BAGS

Air bags are fitted for the driver and front passenger, identified by the word AIRBAG on the steering wheel and above the glovebox.

The air bags operate as a pair – they are triggered simultaneously.

If your vehicle is involved in a severe front end collision, the air bags will inflate, assisting the seat belts to restrain forward body movement.

An operating noise may be heard and a small amount of smoke-like gas will be released. The gas is harmless and does not indicate malfunction or fire.

The air bags will then deflate – the whole process *only taking a moment*.

The air bags assist, but do not replace the seat belts. The air bags are not designed to inflate if the vehicle is hit from the rear or side or the vehicle overturns. *Seat belts (by law) must be worn by all passengers whenever the vehicle is moving.*

Air bags inflate with great force. If you are too close to an inflating air bag it could seriously injure you. Seat belts help keep you in position for air bag inflation in a crash.

The air bags inflates with extreme rapidity. It is therefore important that seats are correctly adjusted. Adjust the driver's seat to suit the driver's height so that the driver is sitting upright with slightly bent arms when holding the upper spokes area of the steering wheel. The passenger seat should be as far back as possible, with the back rest upright.

The light on the instrument panel will glow for a few seconds when the ignition is switched ON. This is to indicate that the air bags are operational. If the light *does not* show when the ignition is switched to ON, or if it comes on when driving, you should contact your Holden Retailer, as they may not function correctly, especially in an accident.

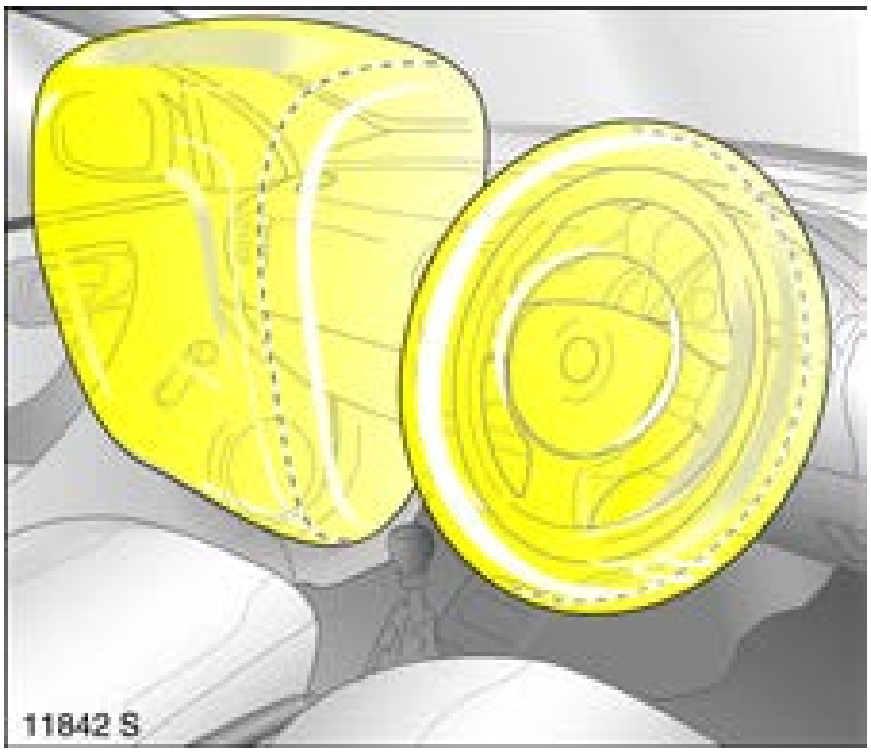

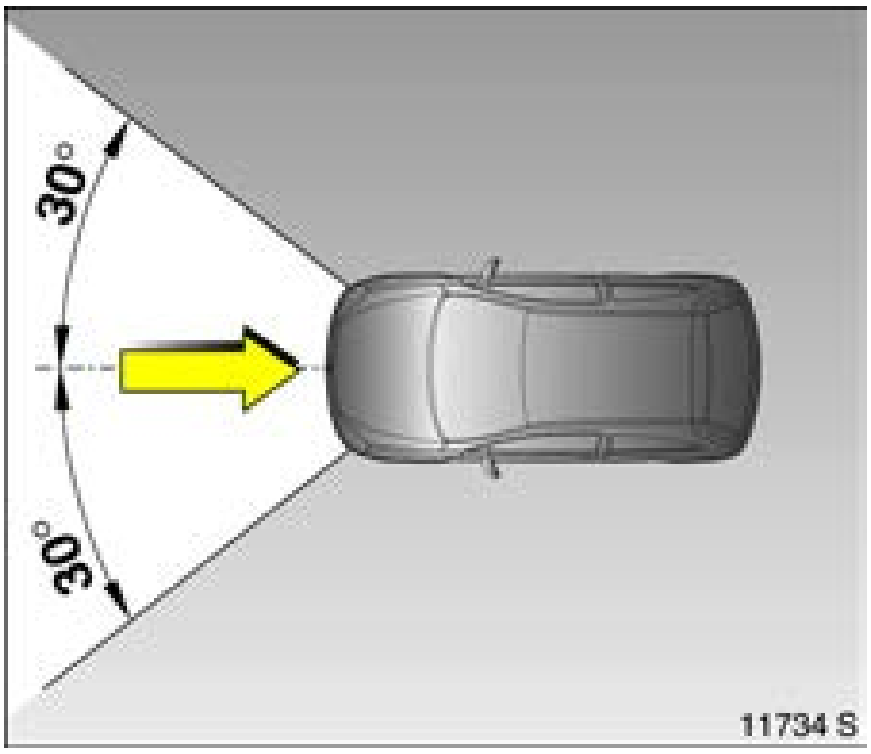

Air bags will inflate if the vehicle is struck hard within the non-shaded section. Air bags will not inflate if the vehicle is struck from the side, rear, or in some rollovers... always wear a seat belt.

AIR BAGS cont.

After use the whole air bag system will have to be replaced. It is recommended that the work be done by your Holden Retailer.

The system should also be inspected by a Holden Retailer if the steering wheel or dashboard area is scratched, cracked or damaged. Remember that the horn pad must not be covered with adhesive or any other material, as this may hinder air bag operation.

As a passenger-side air bag is fitted, the dashboard area must be kept clear, with nothing around this area or hanging from the sun visor.

The electronics controlling the air bag system and belt pretensioners are located in the centre console. To prevent malfunctions, don't place magnetic objects in the immediate vicinity of the console.

Extensive design and testing has gone into the air bag system. It should however, be treated with respect. Any careless or unskilled interference with the system could lead to its failure or to accidental inflation. Any work to the electrical system, steering column, dashboard area, steering wheel or air bag system should *only* be carried out by an authorised Holden Retailer.

BULL BAR NOTE: Fitting a bull bar, or making other modifications to the front of the vehicle, may change the impact speed which would normally cause the air bag to inflate, reducing its effectiveness. Bull bars should not be fitted to vehicles operating in suburban areas, as they increase the risk of injury to a pedestrian in the event of a collision. Bull bars are only recommended for country / outback areas, where additional protection from straying animals is required. Please remember that defensive driving and limiting driving speed to the road conditions is always the best approach, particularly where road side signs indicate wildlife is abundant.

Passenger-side air bag and child restraints

Extreme Hazard! Do not use a rearward facing child restraint on a seat protected by an airbag in front of it!

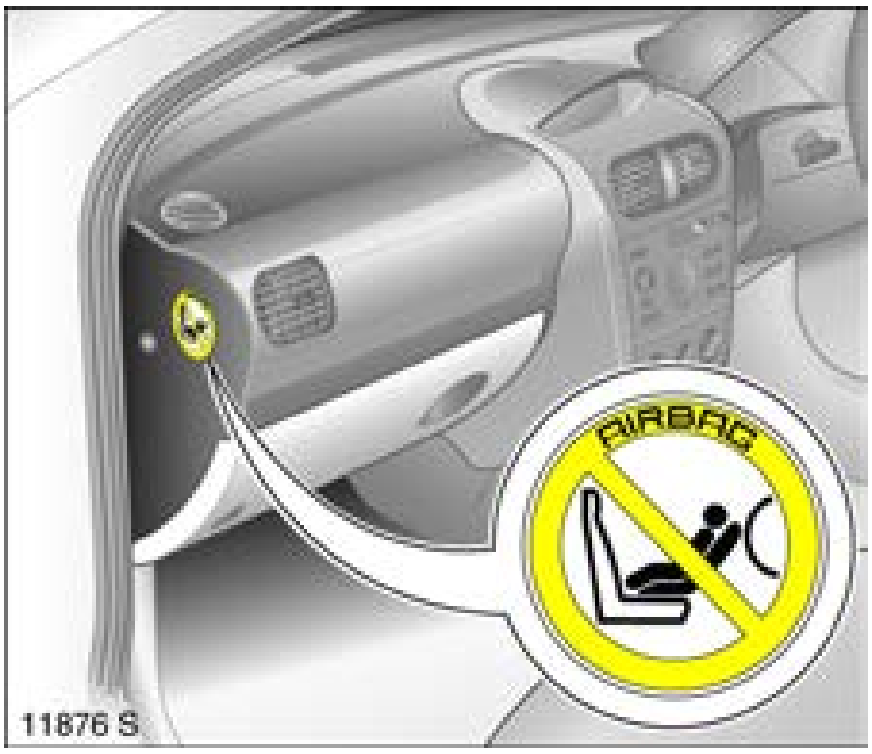

BULB REPLACEMENT

Bulb replacement notes

- When replacing a bulb, turn off the related switch.
- Do not touch new bulbs with bare hands. Grease from fingers causes stains which evaporate and result in a dull light. Grease spots on Halogen bulbs will, within a short time, lead to bulb failure. Inadvertently stained bulbs can be cleaned using tissue paper or a clean, non-fuzzy cloth, with alcohol or white spirits.
- When replacing bulbs do not exceed the wattage given on the defective bulb base.
- Detailed procedures for headlight aiming are given in the relevant service manual for your vehicle. However, because headlight aiming is a safety item, it is recommended that you have this carried out by your Holden Retailer.
- On vehicles fitted with headlight range adjustment, the headlight aiming must be carried out with the switch in position **0.**

Front parking lights

1. Open the bonnet and engage the support rod.
2. Rotate the headlight cap anticlockwise and remove it from the headlight housing.

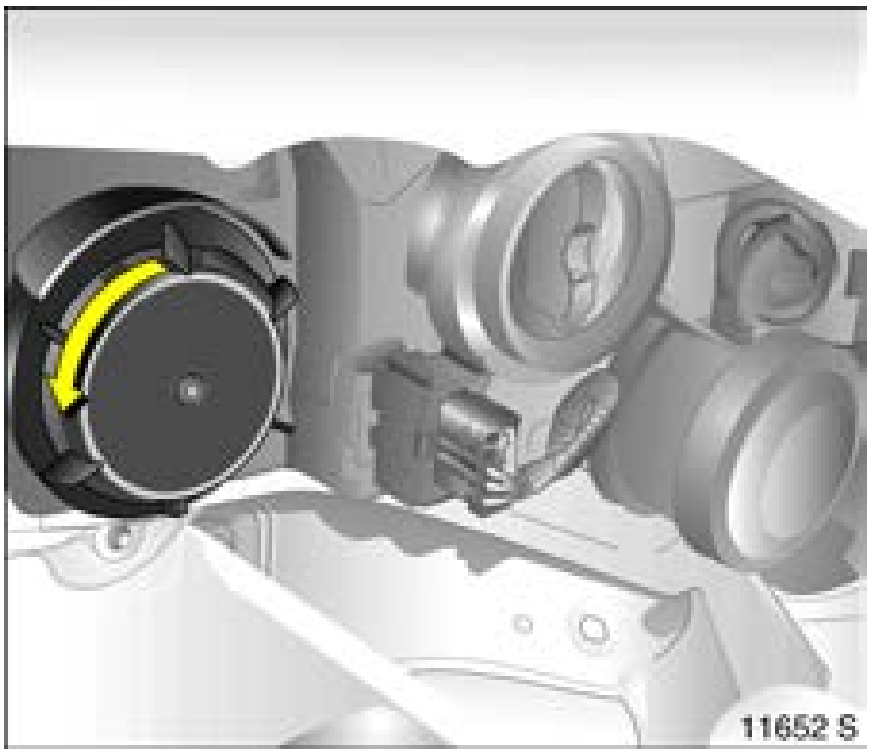

3. Press the lugs on the bulb holder together and remove the holder from the headlight reflector.
4. Remove the bulb from the holder.
5. Insert the new bulb.
6. Insert the holder in the reflector and install the cap into the headlight housing.

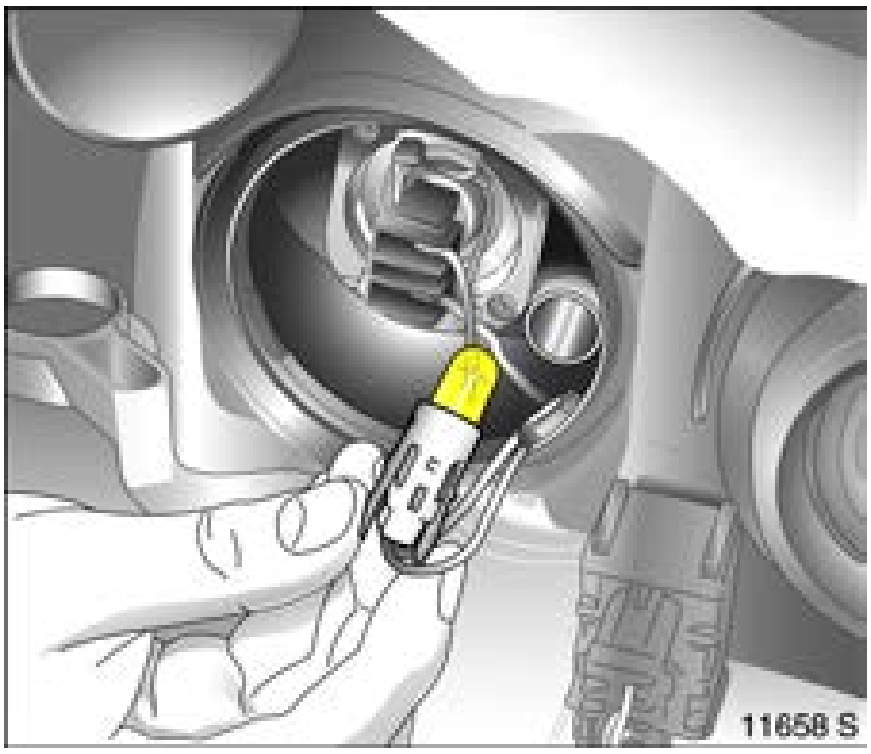

BULB REPLACEMENT cont.

Headlights, low beam

1. Open the bonnet and engage the support rod
2. Rotate the bulb holder anticlockwise and remove it from the reflector.

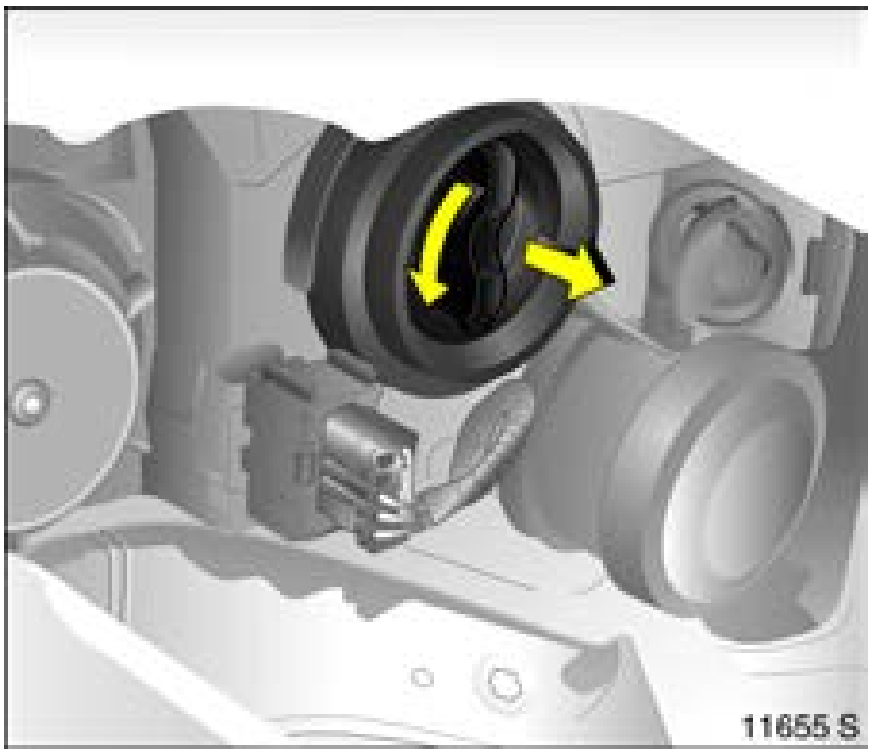

3. Detach the bulb from the bulb holder and install the new bulb without touching its glass.
4. Install the holder into the reflector ensuring that the two lugs on the holder engage in the recesses of the reflector.
5. Rotate the bulb holder clockwise as far as it will go.

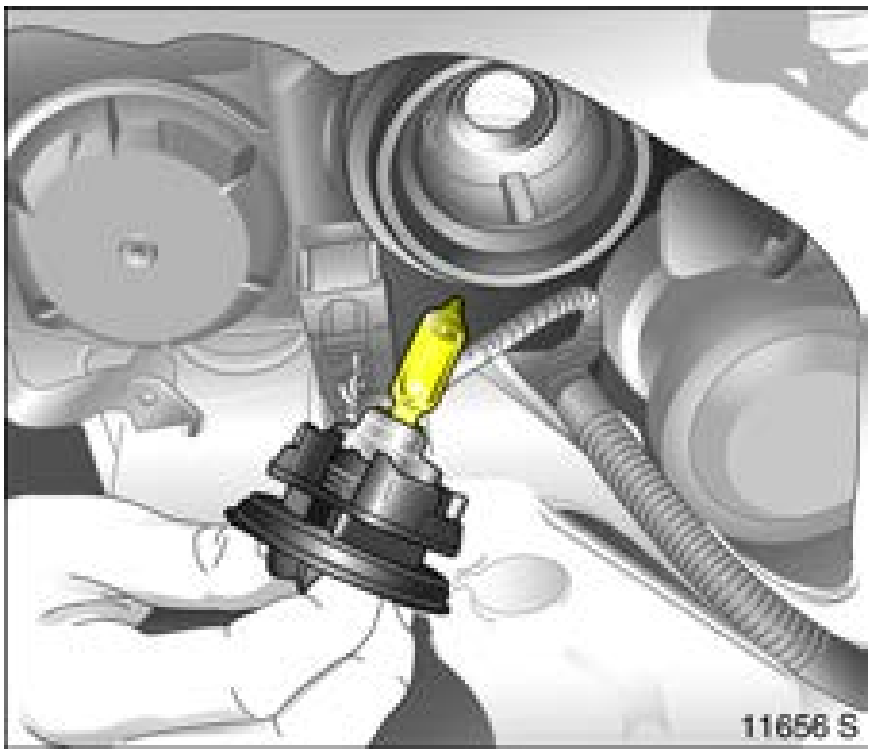

BULB REPLACEMENT cont.

Headlights, high beam

1. Open the bonnet and engage the support rod.
2. Rotate the headlight cap anticlockwise and remove it from the headlight housing.

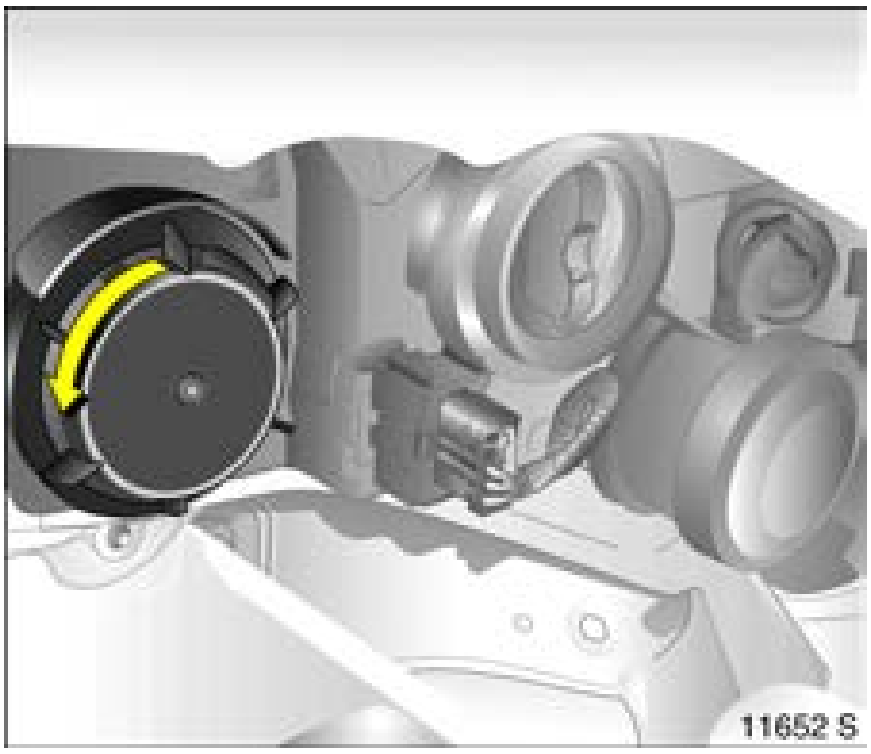

3. Remove the bulb connector from the bulb.
4. Disengage the spring-wire clip from its retaining lugs by pressing the top loop as illustrated and moving it sideways. The spring-wire clip will now swivel downwards.
5. Remove the bulb from reflector housing.

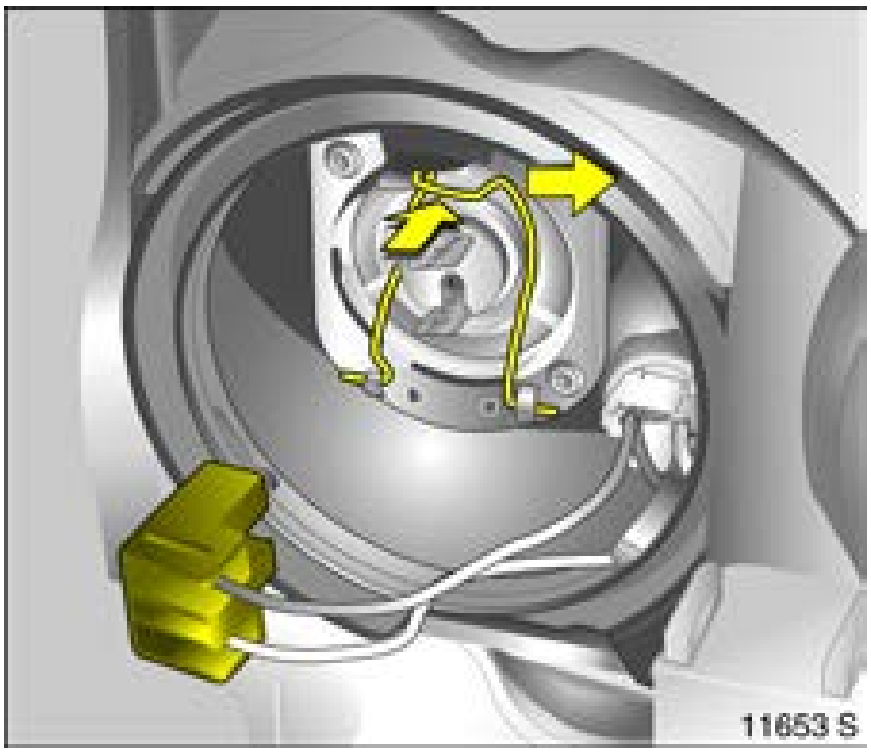

6. Install the new bulb without touching the glass and with the three bulb locating lugs correctly positioned in the reflector recesses.
7. Engage the spring-wire clip in the reflector retaining lugs.
8. Install the cap into the headlight housing and rotate it clockwise.

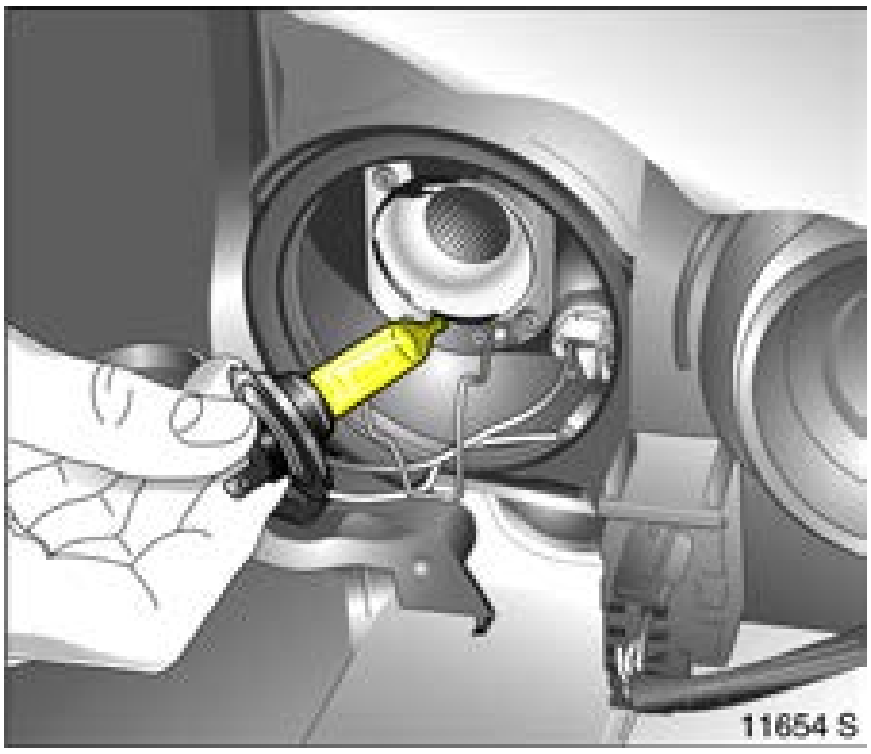

BULB REPLACEMENT cont.

Front turn signal lights

1. Open the bonnet and engage the support rod.
2. Rotate the bulb holder anticlockwise and disengage it.

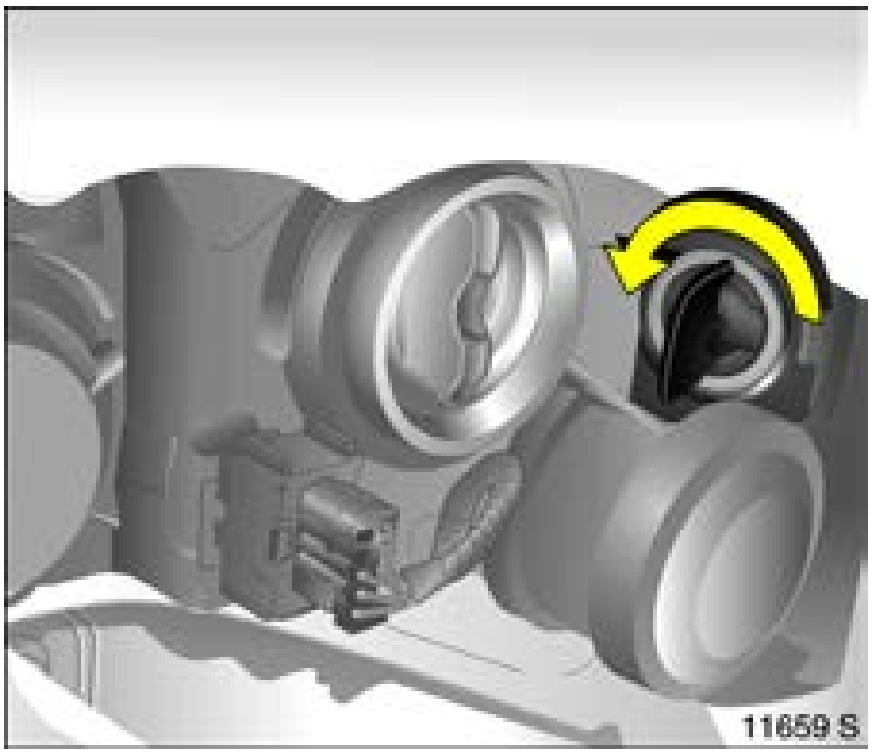

3. Press the bulb into the holder slightly, turn it anticlockwise and remove it.
4. Insert the new bulb and engage the older in the reflector by turning it.

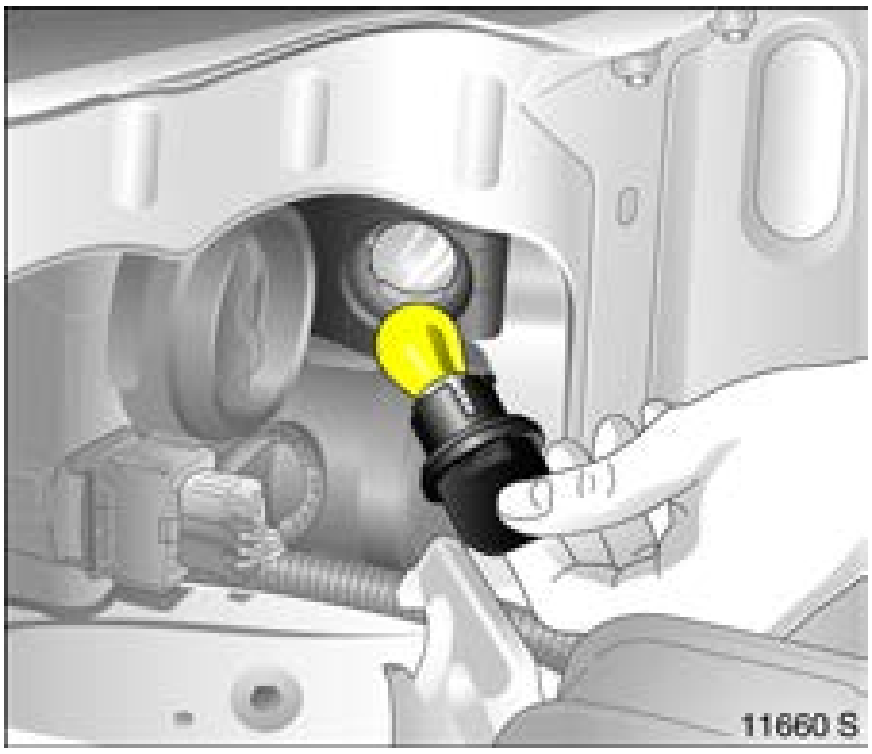

BULB REPLACEMENT cont.

Tail, brake, rear turn signal, reverse lights (Barina)

1. Remove the two screws from the rear lens assembly using a screwdriver.

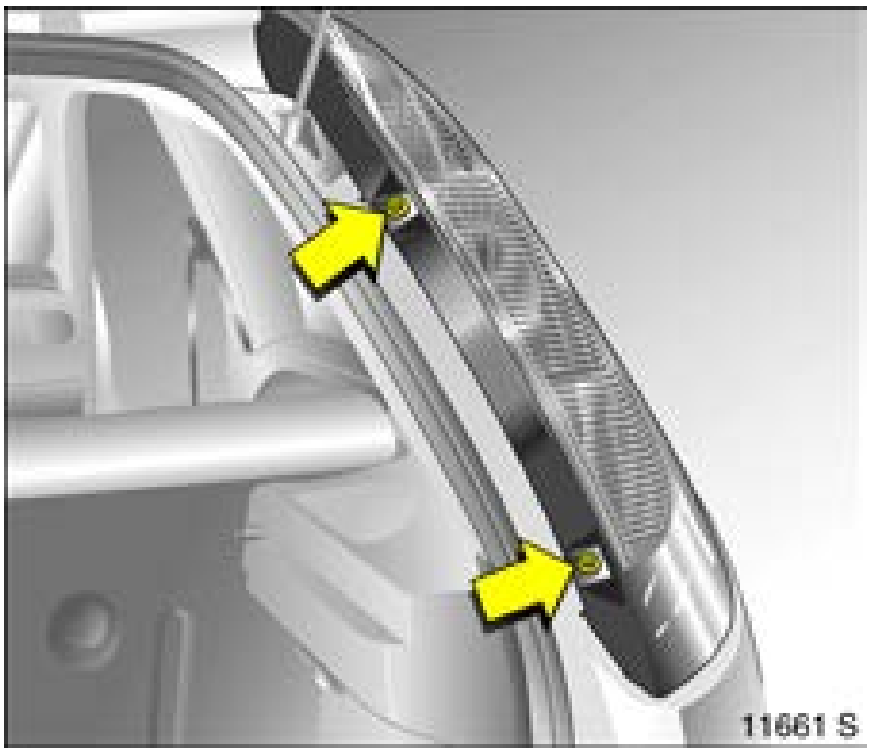

2. Pull the lens assembly rearward to disengage it from its locking elements.
3. Disengage the cable connector from the lens assembly using a screwdriver and remove it from the assembly.

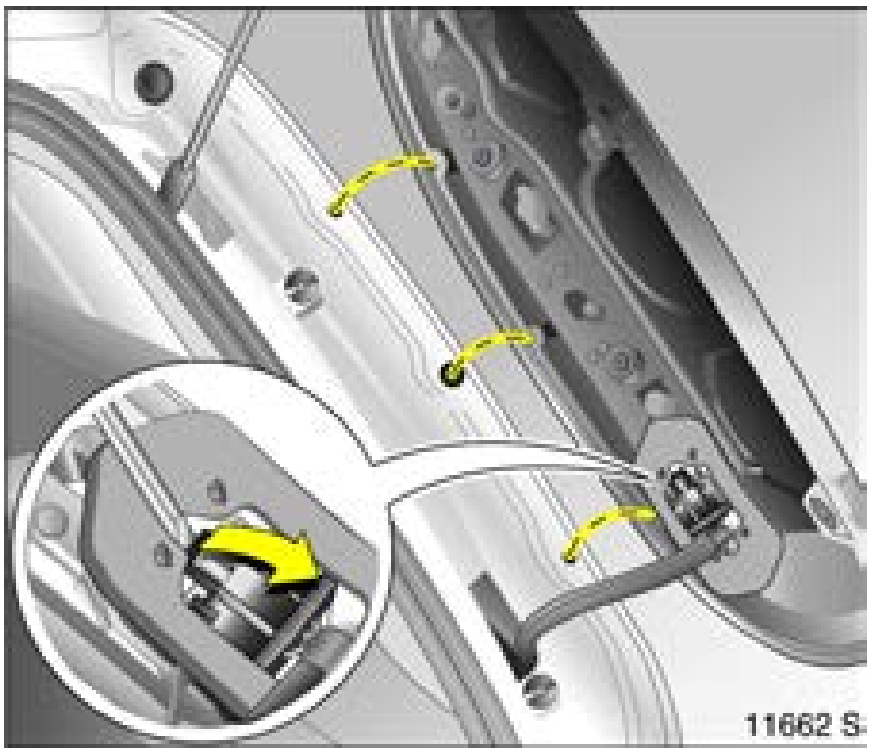

4. Remove the four screws from the bulb mounting, using a screwdriver, and remove the bulb mounting from the lens assembly.

   Bulb sequence, from top to bottom:
      Turn signal light
      Brake light / tail light (two filaments)
      Reverse light
5. Remove the bulb from the holder.
6. Insert the new bulb, engage the bulb holder into the lens and install the screws, as illustrated.
7. Engage the cable connector with the lens assembly.

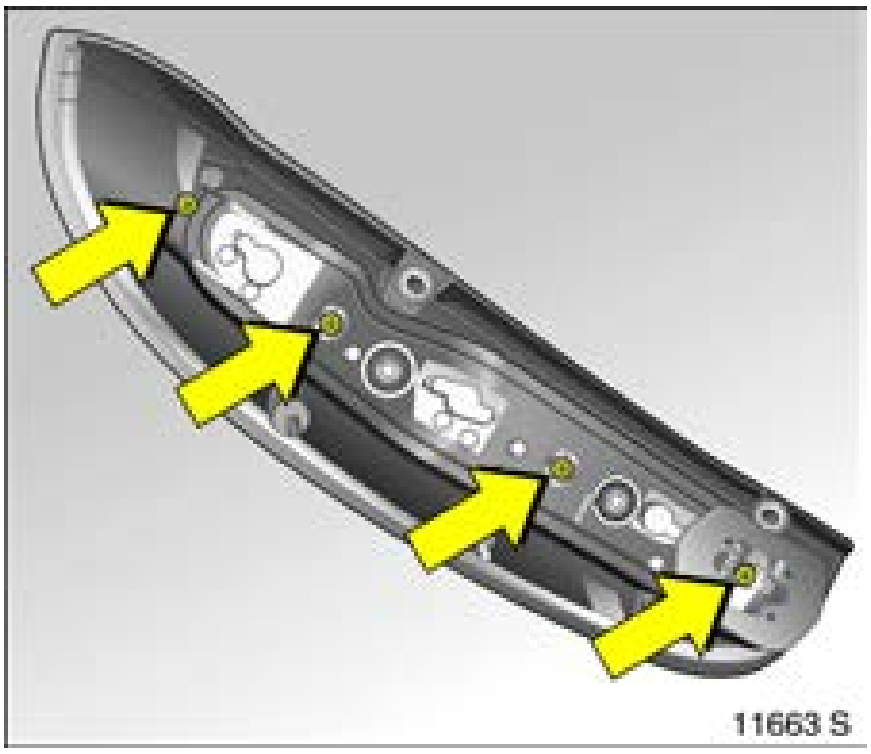

8. Align and insert the fixing pins of the lens assembly into the body holes and secure the assembly with the two screws.

BULB REPLACEMENT cont.

Tail, brake, rear turn signal, reverse and rear fog lights (Combo)

1. Open the rear door next to the rear light assembly to be accessed. Remove the rear light assembly dress cover by pushing back the two tabs, as illustrated.

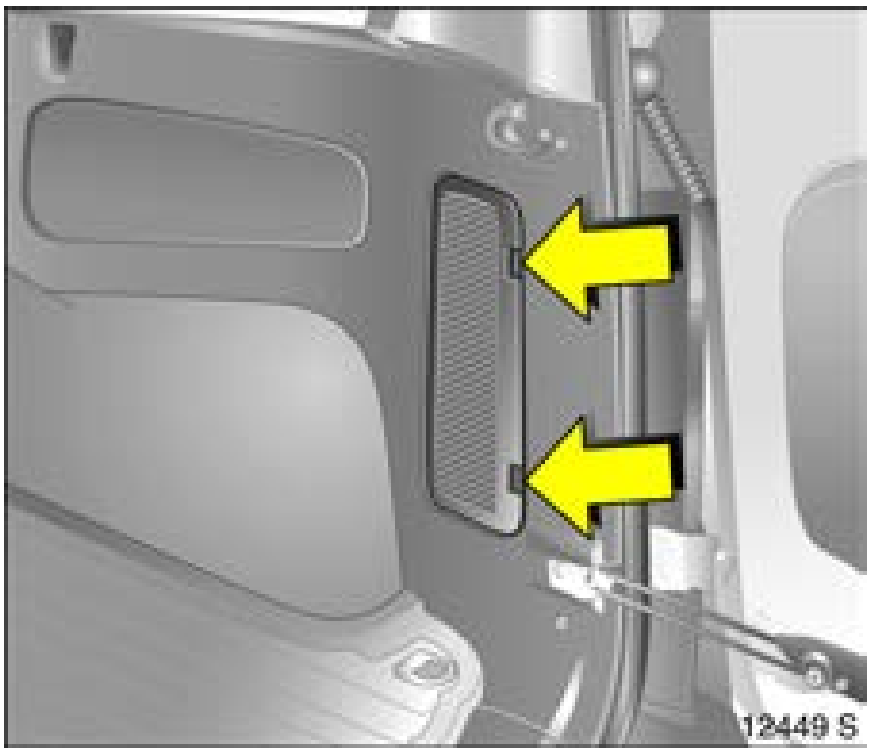

2. Remove the two large, white retaining screws and disengage the harness connector.

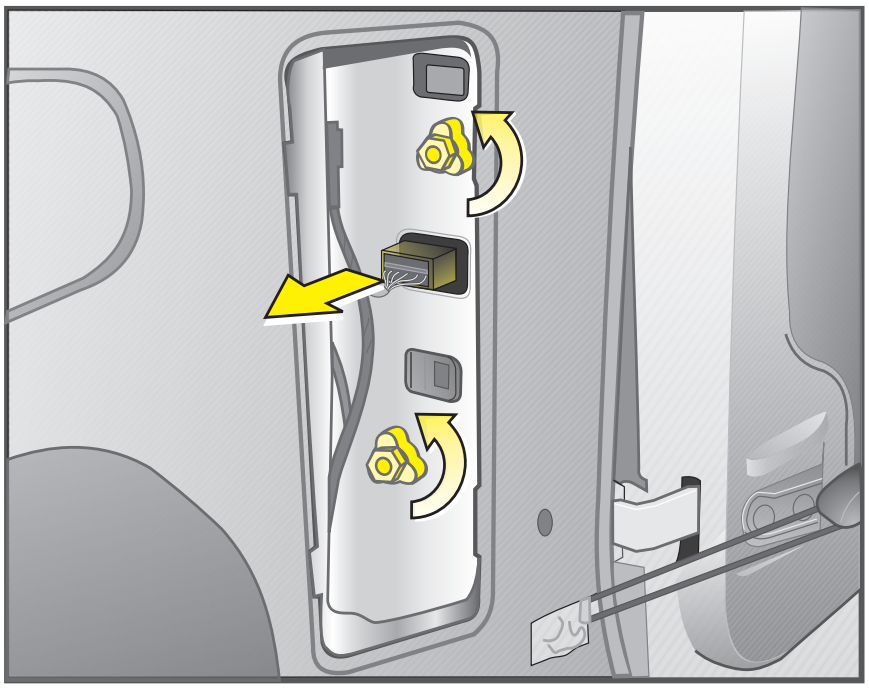

3. Partially close the rear door and lift out the rear light assembly.

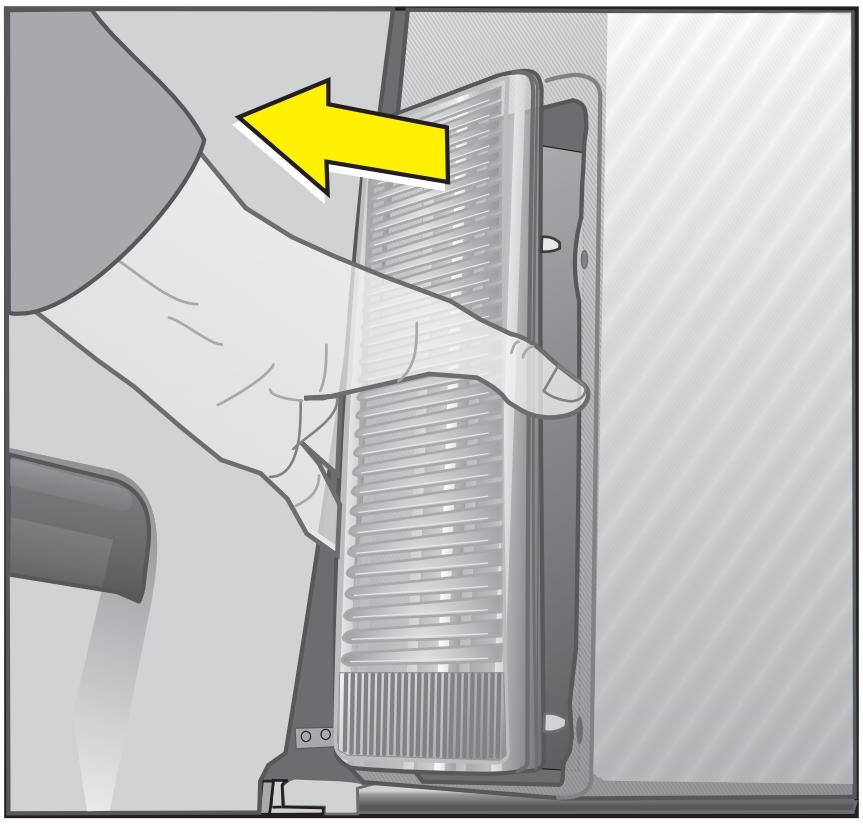

BULB REPLACEMENT cont.

4. Press the two bulb holder retaining tabs together and remove the bulb holder.

   Bulb sequence, from top to bottom:
   Brake / tail light (two filaments)
   Turn signal light (amber globe)
   Reverse light
   Fog light

5. Replace the faulty bulb and install the bulb holder into the lens assembly.

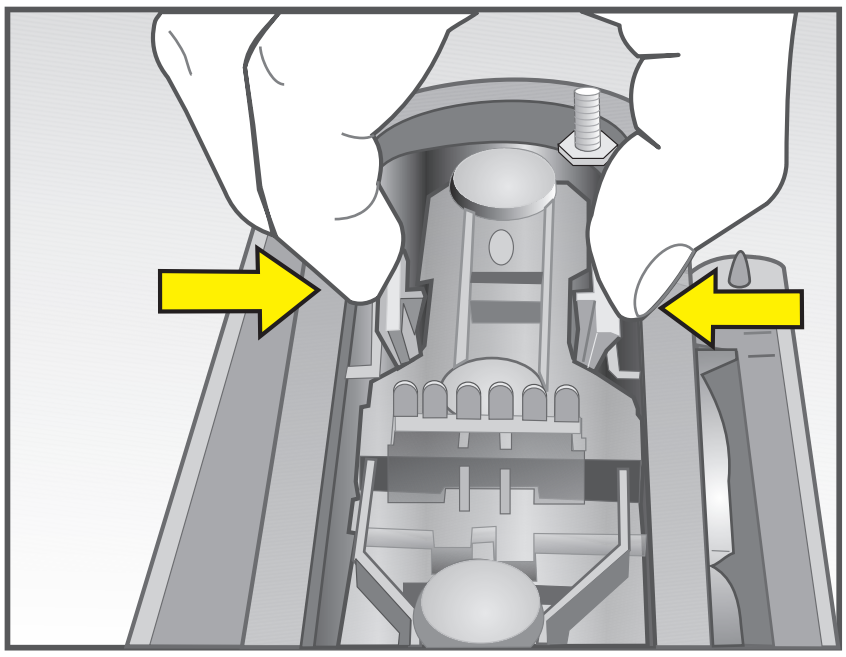

6. Align the rear light assembly locating lugs with the body holes and install the assembly.

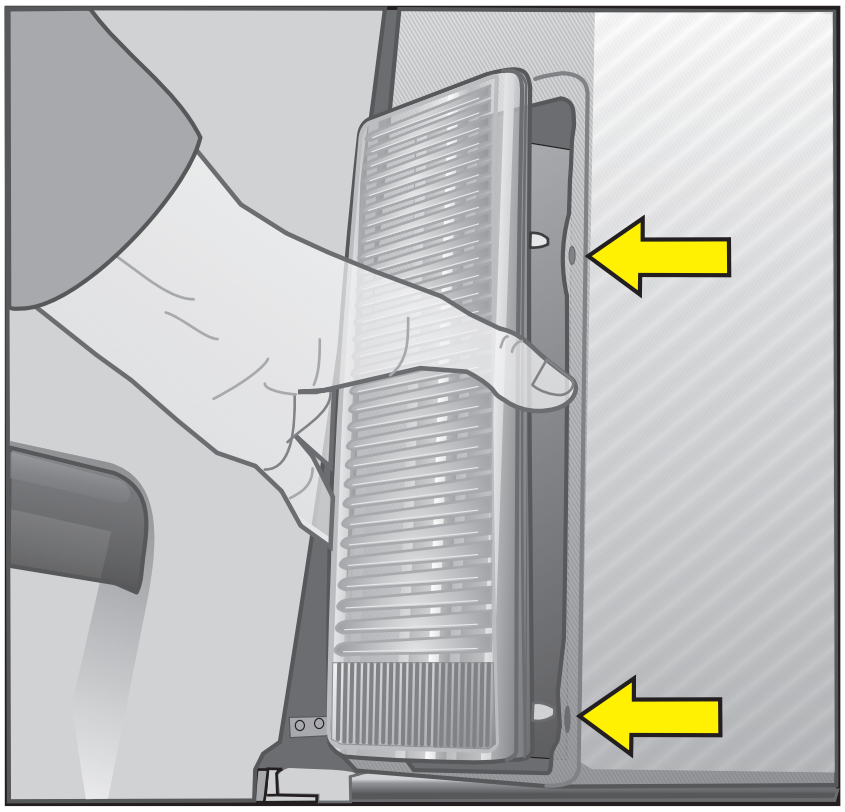

7. Install the large white retaining screws then the harness connector. Ensure that all lights operate correctly.
8. Fit the dress cover.

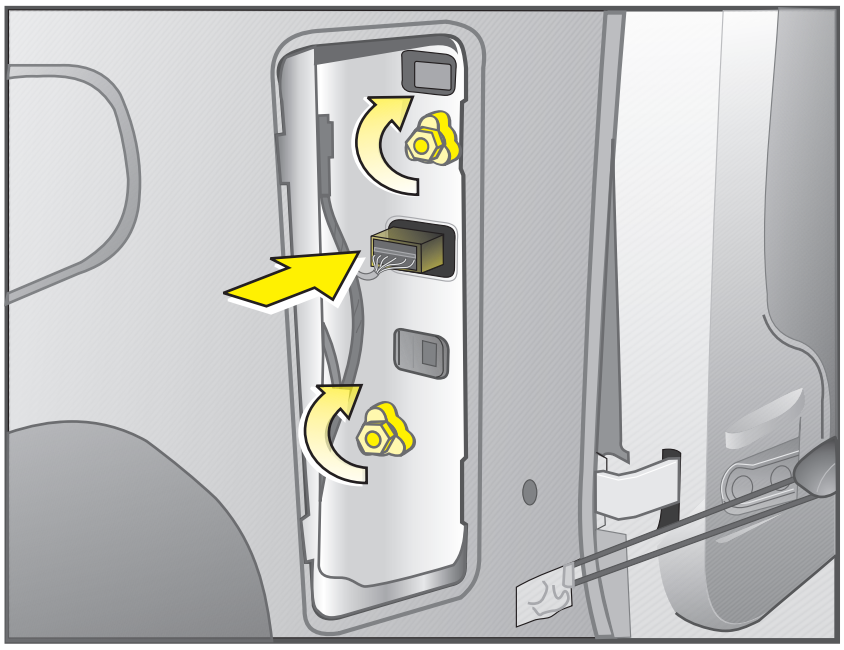

BULB REPLACEMENT cont.

Number plate light (Barina)

1. Insert a screwdriver vertically into the side of the lens on the right-hand side, press towards the right and disengage the spring.
2. Remove the number plate light downwards and clear of the rear bumper.

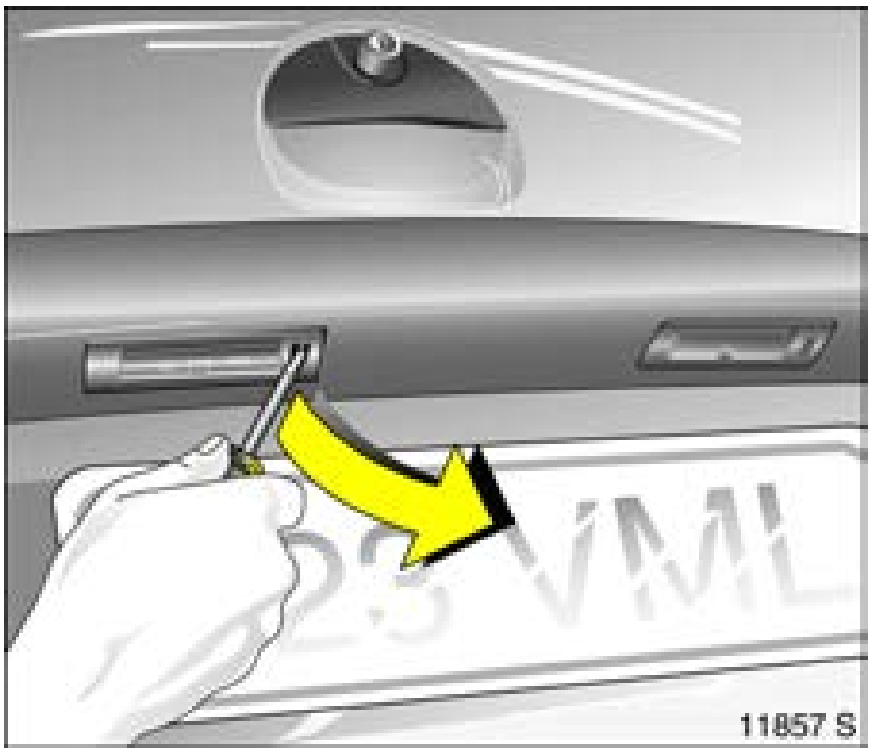

3. Rotate the bulb holder anticlockwise and remove it from the lens.

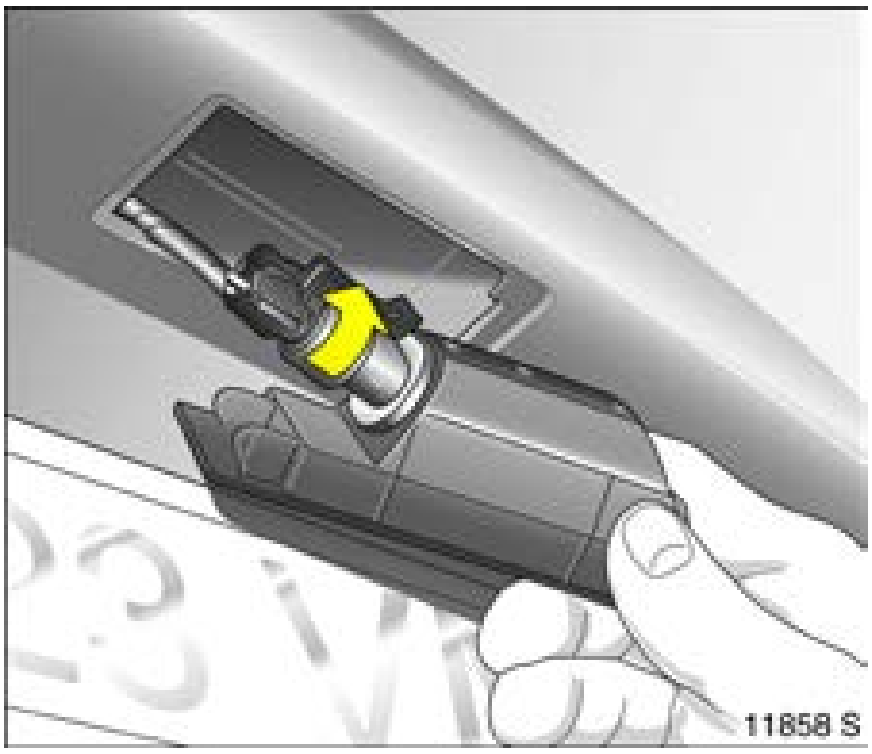

4. Remove the bulb from the holder.
5. Insert the new bulb.
6. Insert the holder into the lens and rotate it clockwise to lock it in place.
7. Insert the lens into the rear bumper.

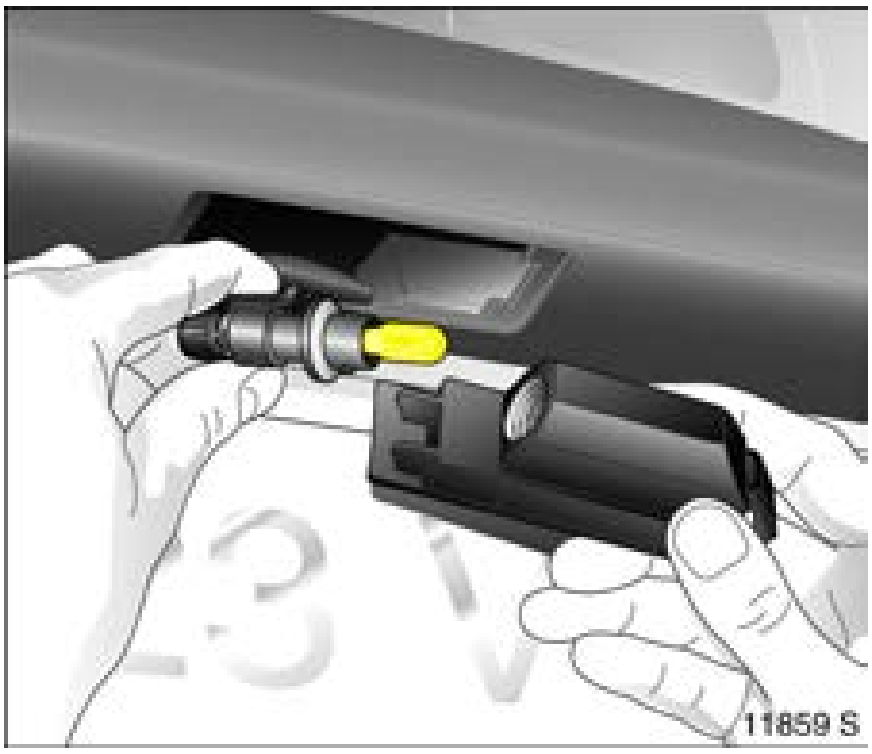

BULB REPLACEMENT cont.

Number plate light (Combo)

1. Use a screwdriver to remove the two number plate light assembly retaining screws.
2. Remove the assembly.

Note: There is no wiring harness to disconnect. This is due to spring contacts that connect when the light assembly is installed.

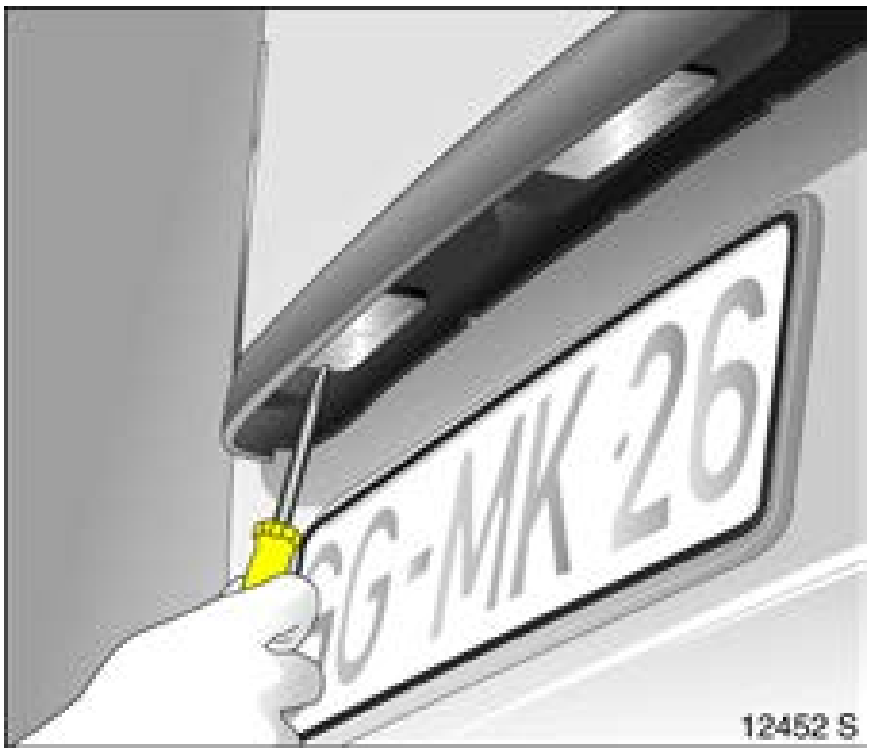

3. Replace the faulty bulb.
4. Align and install the assembly into the body and install the two retaining screws.

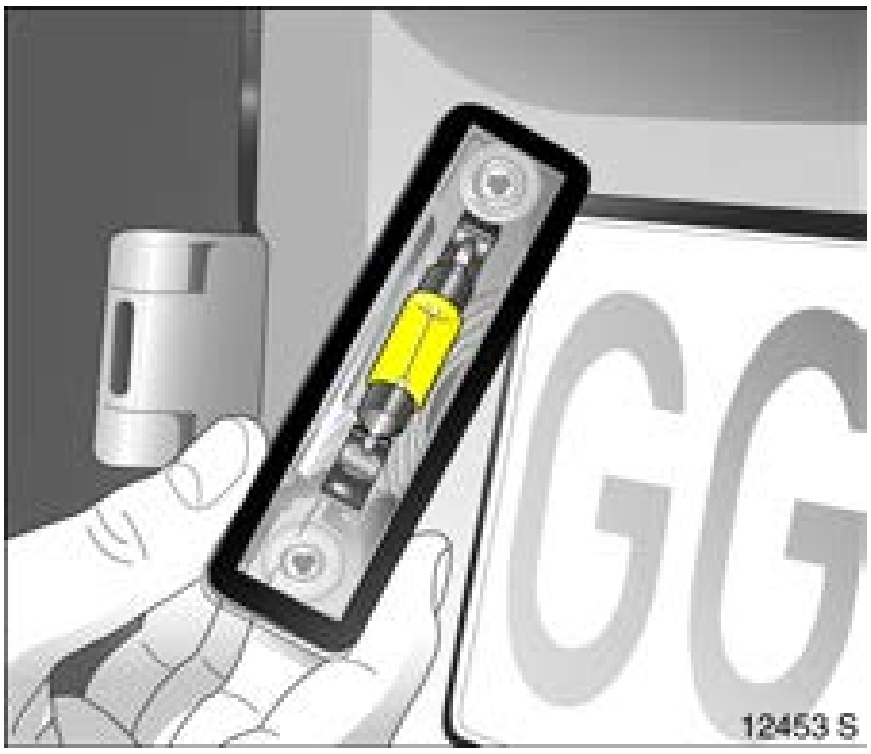

BULB REPLACEMENT cont.

Barina luggage compartment light and rear reading light

Before removal, close the doors or make sure that the contact switch is kept depressed so that the light is not live.

1. Carefully prise the light out of the trim using a screwdriver.

   For a rear interior light with a reading light, lever the lens out of the housing.

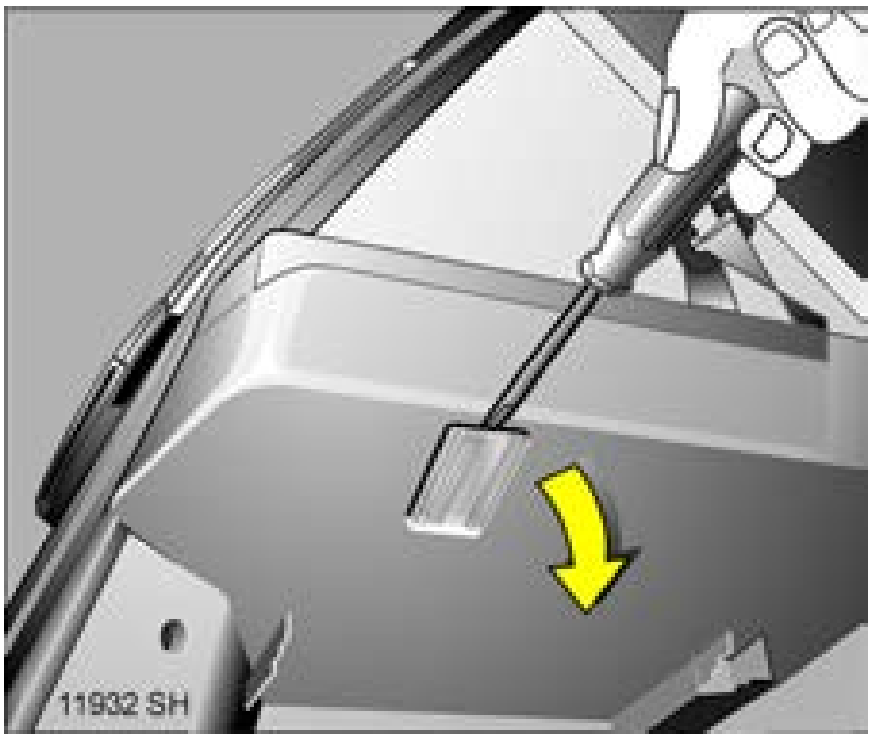

2. Press the bulb slightly towards the spring-clip and remove it.
3. Insert the new bulb.

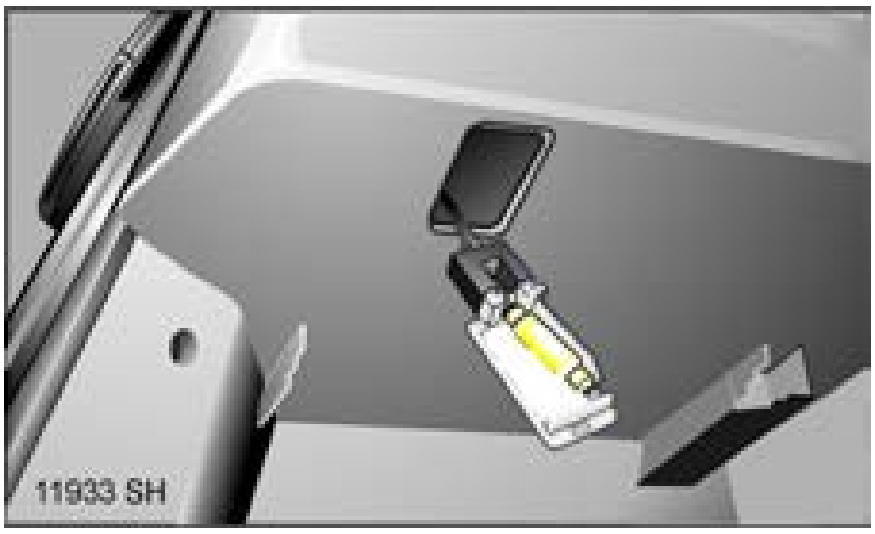

BULB REPLACEMENT cont.

Combo luggage compartment lights

Before removal, close the rear doors or make sure that the contact switch is kept pressed so that the lights are not live.

1. Insert a flat-bladed screwdriver into the slot at the top of the lens and carefully prise the rear compartment light out of the trim.
2. Disconnect the wiring harness connector.

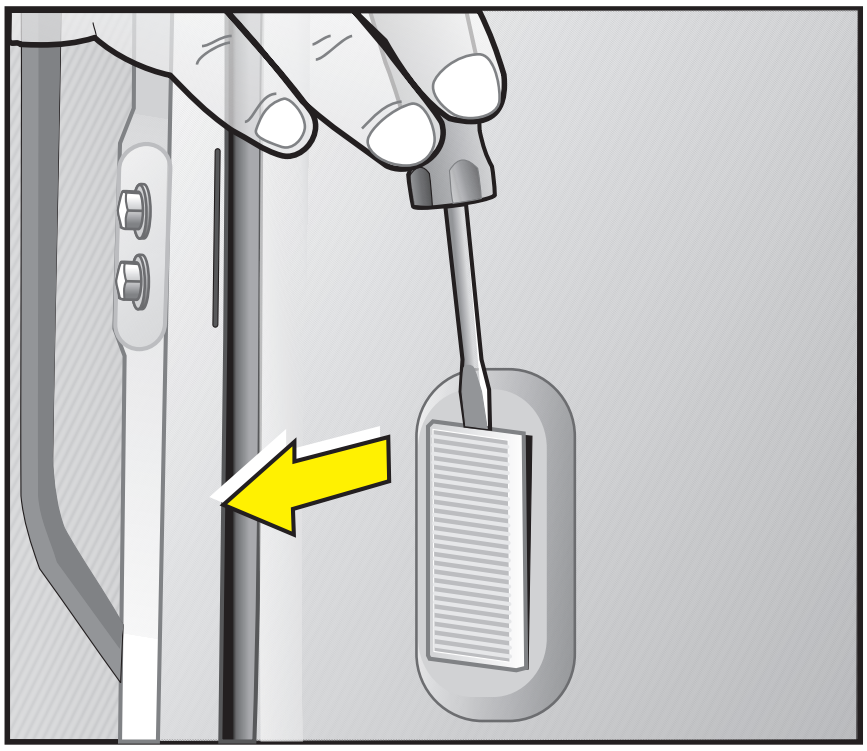

3. Remove the bulb by pressing against the top of the long contact, as illustrated.
4. Install a new bulb and then install the wiring harness connector.

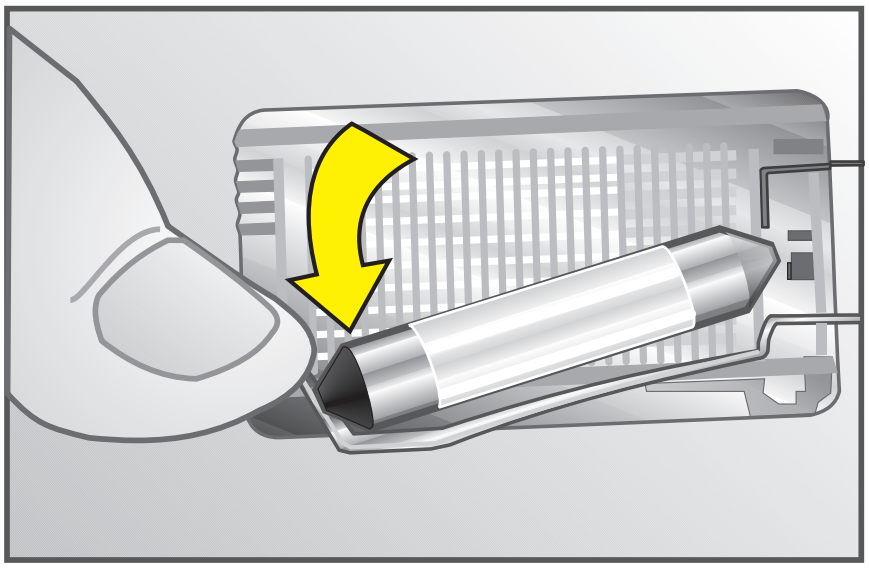

5. Align and install the light ensuring that it is fully housed into the body.

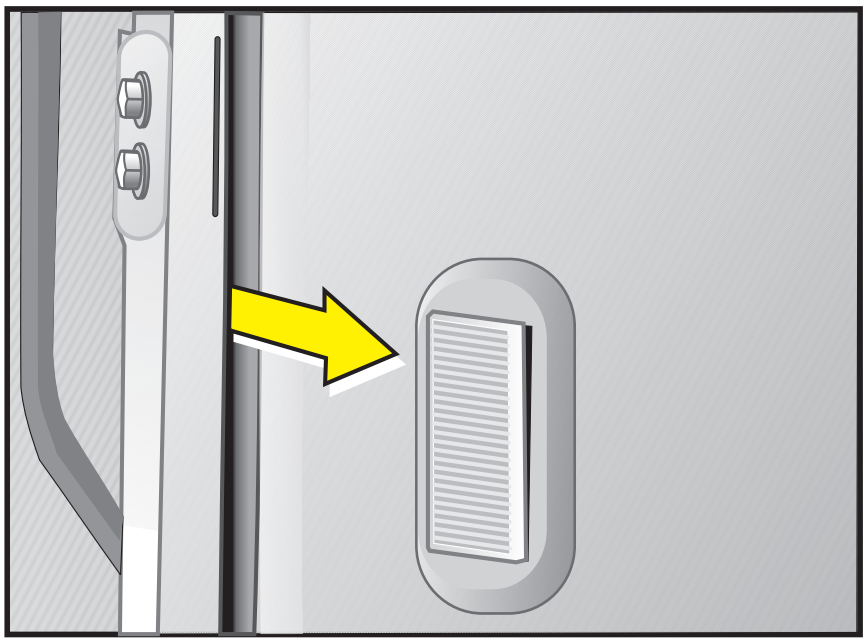

BULB REPLACEMENT cont.

Front courtesy light and front reading lights (if fitted)

Before removal, close the doors or make sure that the contact switch is kept depressed so that the light is not live.

1. Using a screwdriver, lever the lens out of the housing.

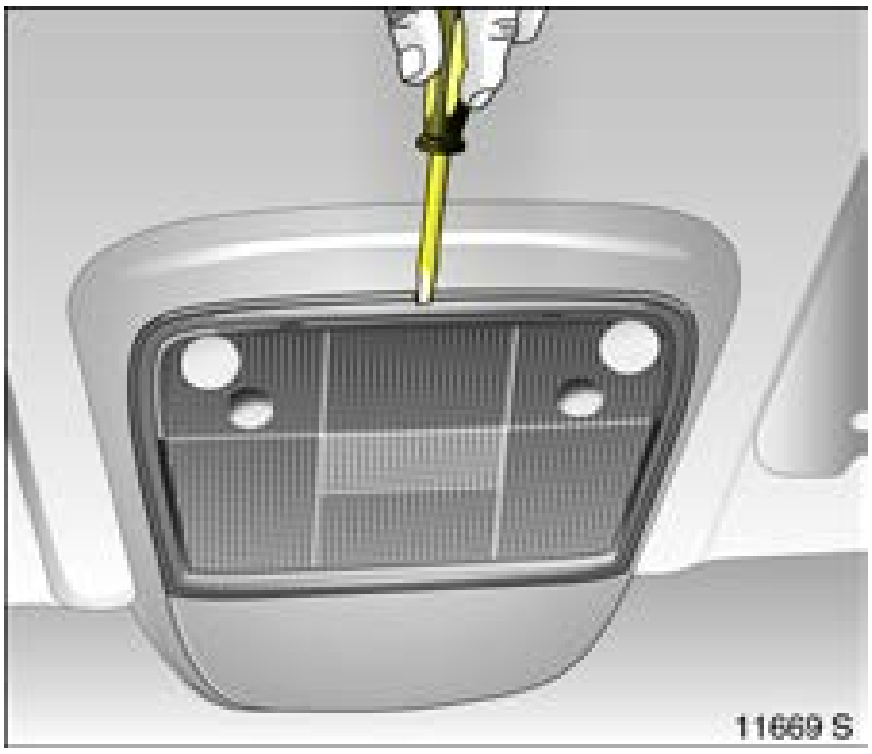

2. Remove the bulb from the socket.
3. Insert the new bulb.
4. Mount the lens and engage it in position.

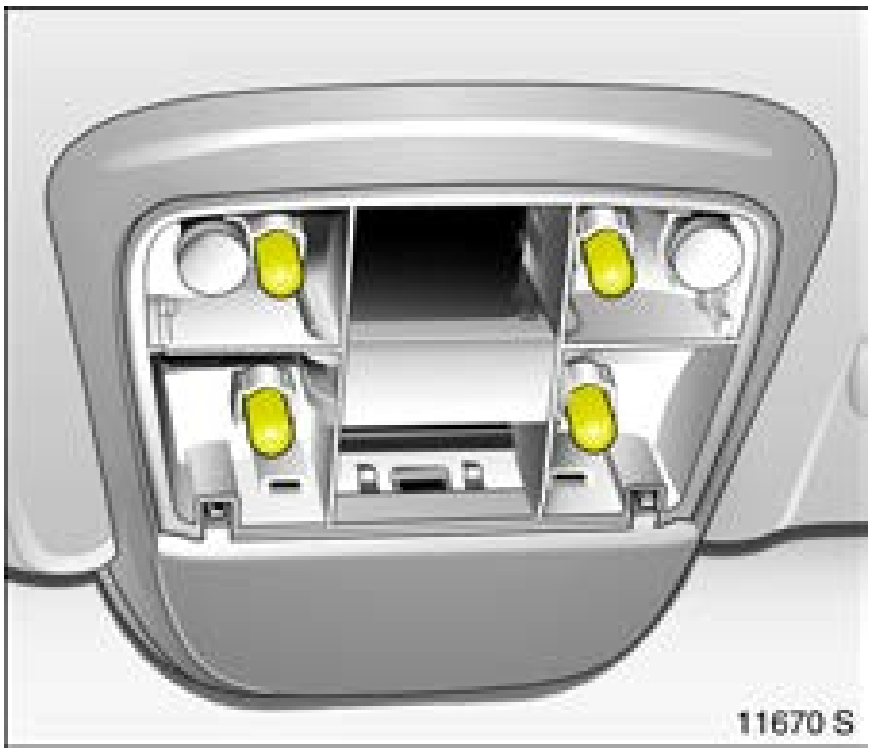

Bulb replacement procedures for the following lights should be carried out by your Holden Retailer:

- Centre high mounted stop light
- Fog lights
- Instrument lights
- Information display lights.

FUSES

The fuses are located between the passenger side headlight and the coolant surge tank. To open the fuse compartment, press the retaining clip towards the compartment lid and lift the lid upwards.

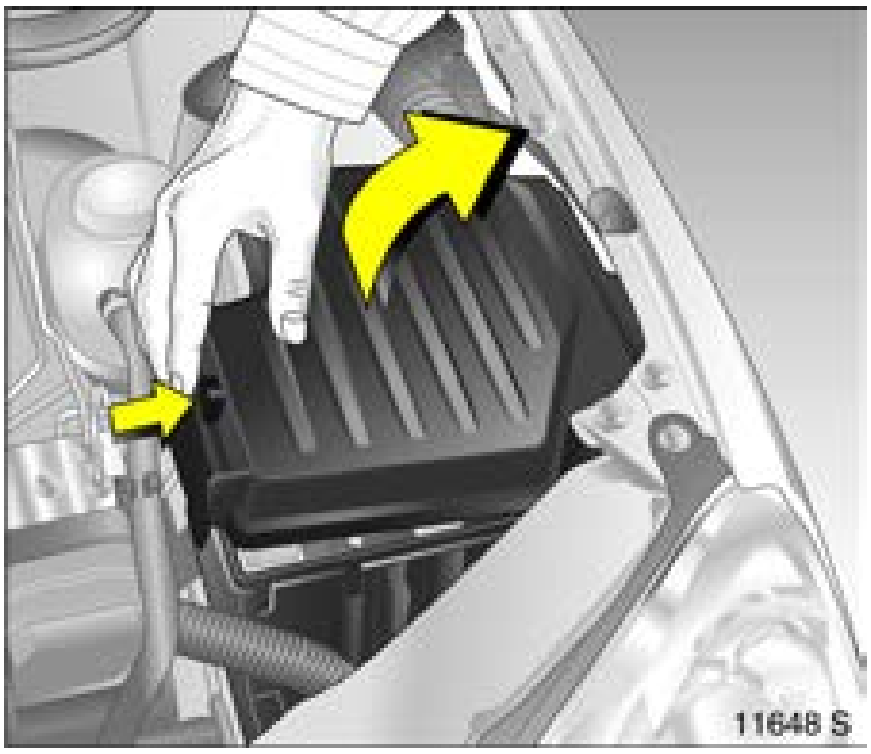

Remove the lid completely to access the fuses.

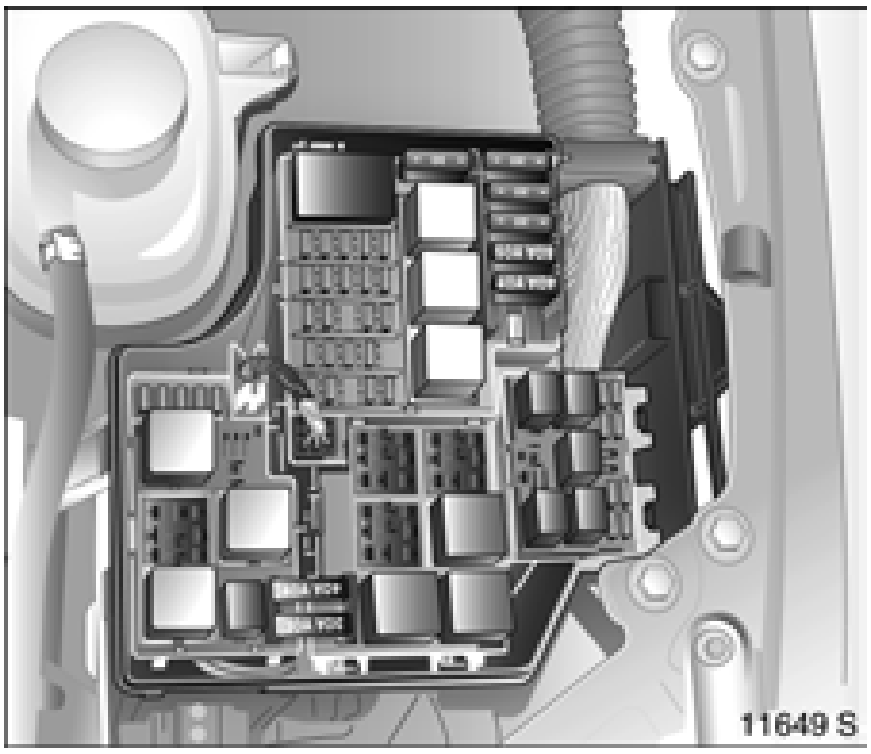

It is recommended that a complete spare set of fuses are carried. There is provision in the fuse box for the storing of spare fuses.

It should be noted that some circuits may be protected by more than one fuse.

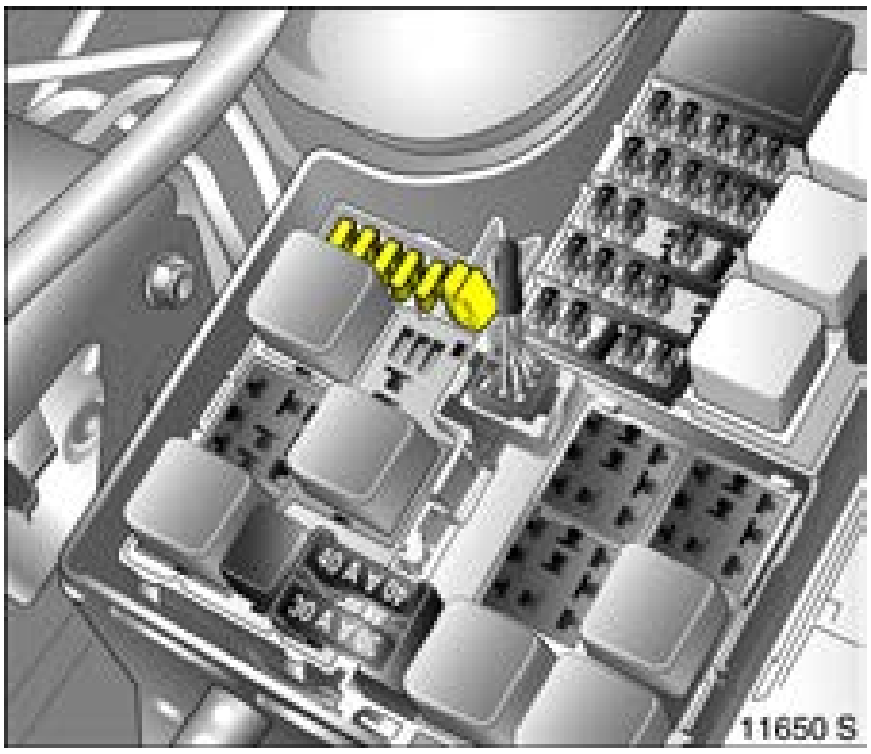

FUSES cont.

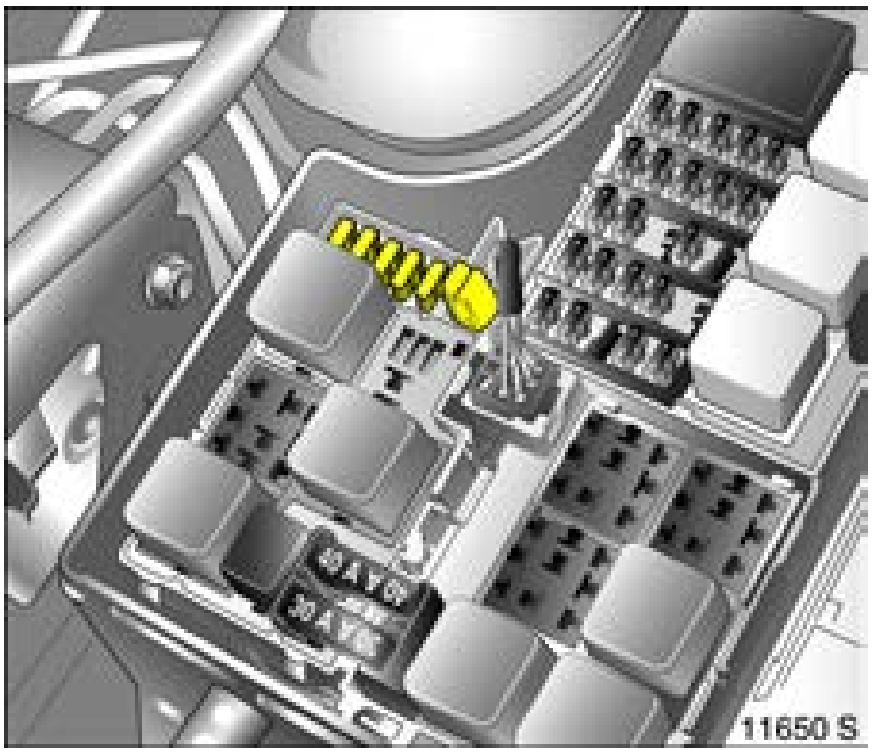

To help in replacing fuses, there is a special fuse gripping tool (white) located beside the spare fuses in the fuse box.

Before replacing a fuse, turn off the respective switch and remove the ignition key.

Slot the fuse gripping tool onto the fuse and withdraw.

A defective fuse can be recognised by its melted wire. A new fuse should only be installed after the cause of the trouble has been located and eliminated.

Only fuses of the specified rating should be installed. The rating is given on all fuses.

COLOUR	RATING
Light brown	5 A
Dark brown	7.5 A
Red	10 A
Blue	15 A
Yellow	20 A
Green	30 A
Pink (Maxi-fuse)	30 A
Orange	40 A
Red (Maxi-fuse)	50 A
Yellow (Maxi-fuse)	60 A
Black (Maxi-fuse)	80 A

WARNING:

When replacing a fuse be sure to use a fuse of the specified amperage. Never install a wire or similar device to replace a fuse, as it could damage electrical components and may cause a fire hazard to your vehicle.

FUSES cont.

1	Central control unit	7.5 A
2	Engine control unit	7.5 A
3	Instruments, horn, information display, hazard warning flashers	7.5 A
4	Number plate light	5 A
5	–	
6	Automatic transmission (if fitted)	10 A
7	–	
8	Starter	10 A
9	Fuel injection system, fuel pump	20 A
10	Horn	10 A
11	Central control unit	15 A
12	Information display, radio	15 A
13	–	
14	–	
15	Windscreen washer system	10 A
16	Courtesy lamp	5 A
17	Central control unit	20 A
18	–	
19	–	
20	–	
21	–	
22	Central control unit	20 A
23	Windscreen wipers	20 A
24	Radio, information display courtesy lamp, instruments, EPS, immobiliser	5 A
25	Brake lights	10 A
26	Cigarette lighter	10 A
27	–	
28	–	
29	Windscreen washer system	20 A
30	Engine control unit	15 A
31	Air conditioning system (if fitted)	15 A
32	Heated rear window (if fitted)	10 A
33	–	
34	–	
35	Radio	5 A
36	Dipped beam (left)	10 A
37	Dipped beam (right)	10 A
38	Park and tail lights (left)	5 A
39	Park and tail lights (right)	5 A
40	–	
41	–	
42	Fog lights	10 A
43	Headlights – high beam (left)	10 A
44	Headlights – high beam (right)	10 A
45	Air conditioning (if fitted)	30 A
46	Engine control unit	20 A
47	Heated rear window (if fitted)	30 A
48	Starter	30 A
49	EPS	50 A
50	–	
51	–	
52	Cooling fan (without air conditioning)	40 A
53	Air conditioning cooling fan (if fitted)	30 A

FUSES cont.

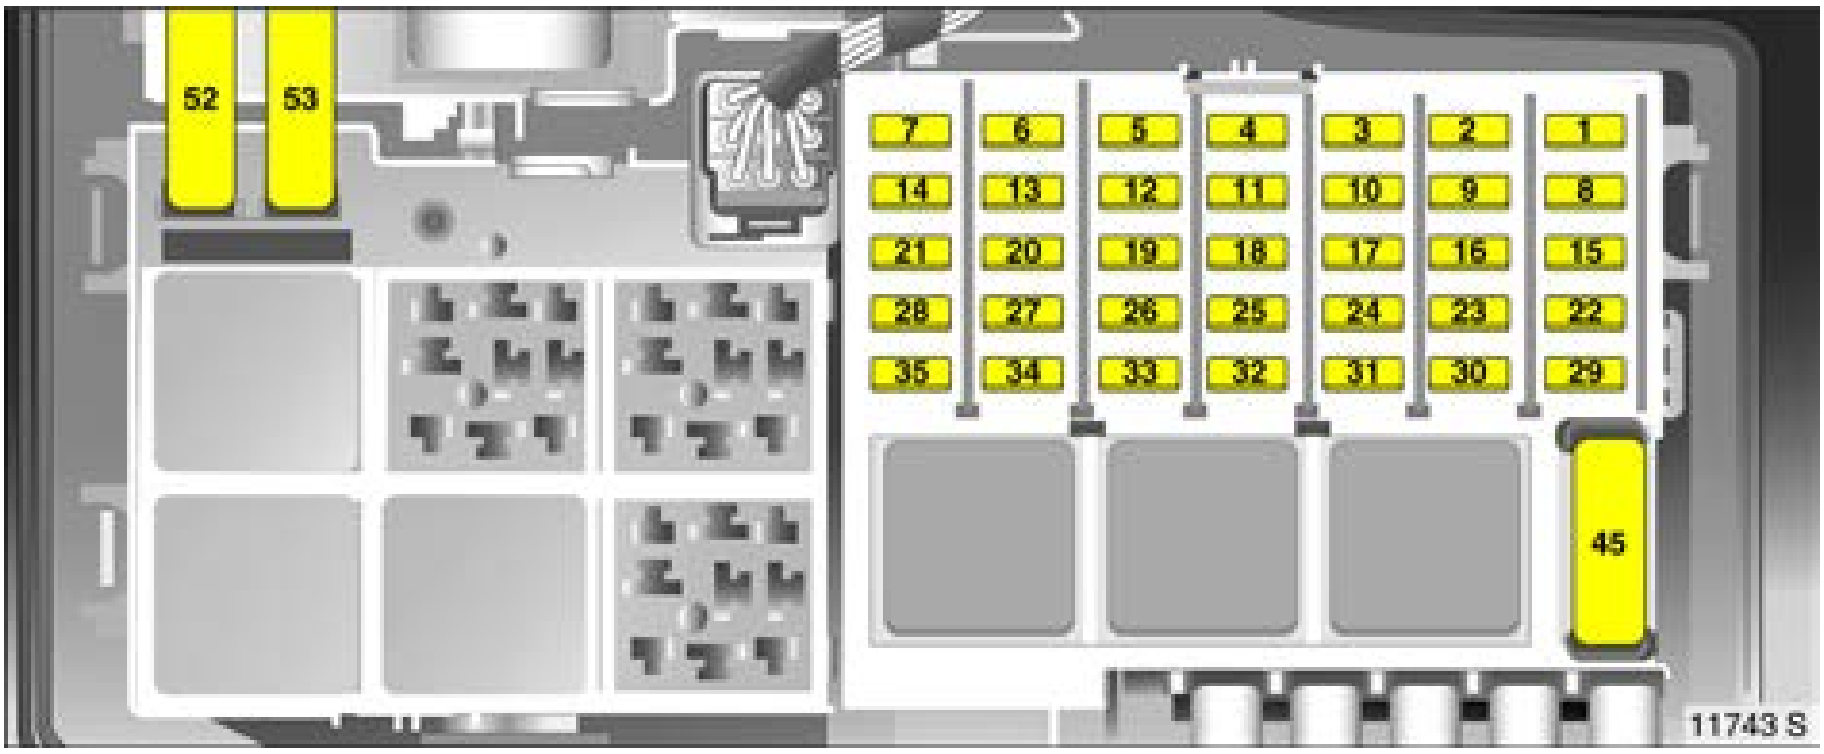
11743 S

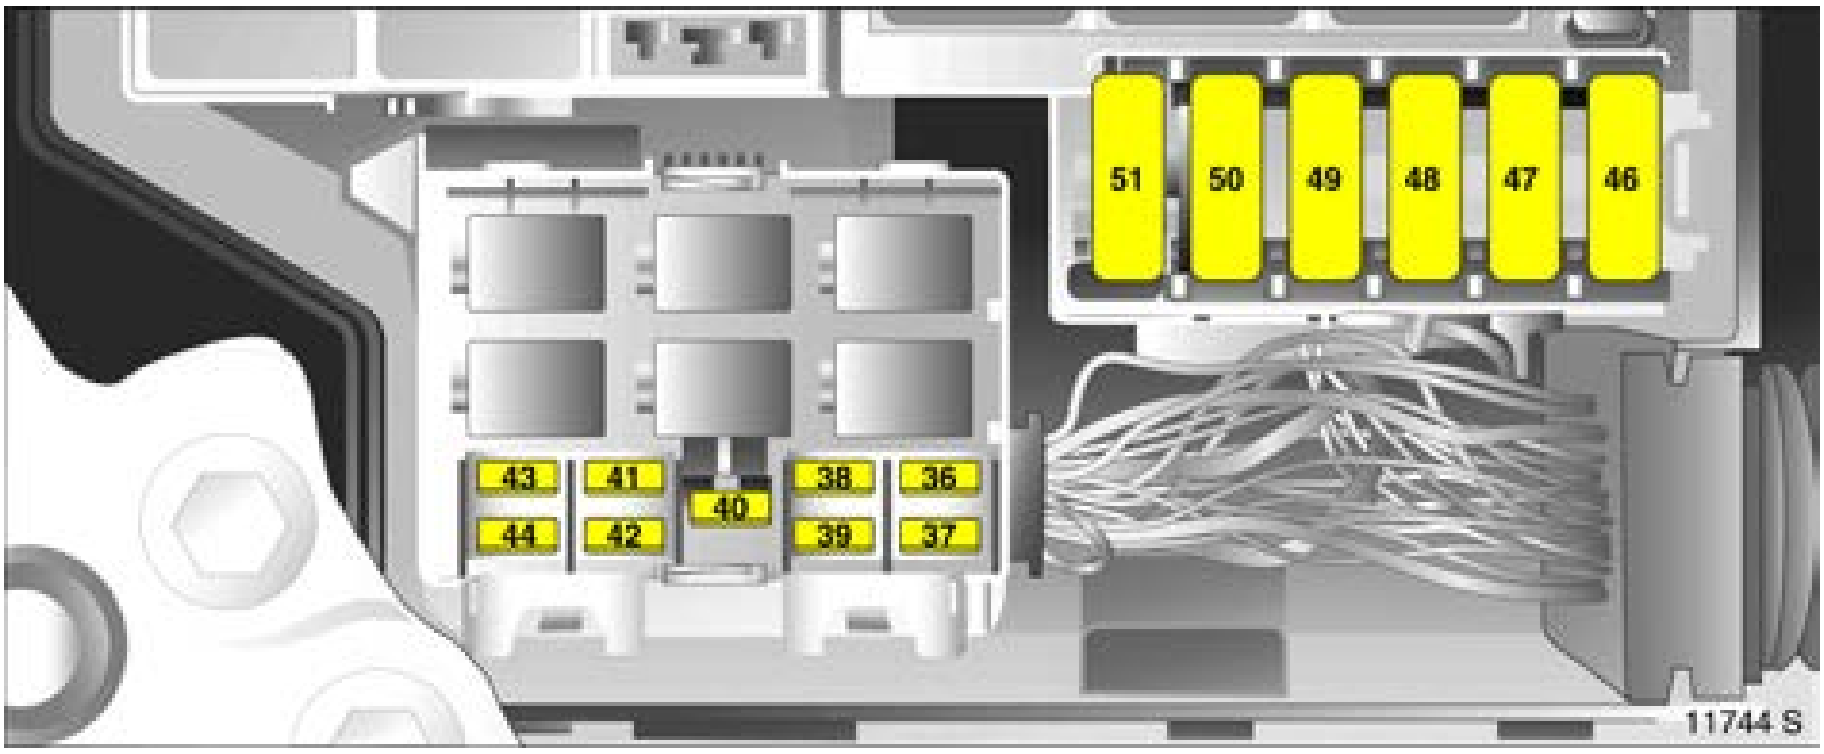
11744 S

CHAPTER 7

Weekly checks

Page

7-2 Miscellaneous checks
7-3 Engine oil level
7-4 Engine coolant level
7-5 Brake fluid level
7-5 Auto transmission fluid level
7-6 Washer fluid level
7-6 Battery
7-7 Tyres

MISCELLANEOUS CHECKS

As well as taking your vehicle to be serviced (refer to Chapter 12) there are a few simple, weekly checks that the owner / operator is recommended to make. These are shown on the following pages.

The following checks should also be regularly done to ensure proper safety and dependability of your vehicle.

WARNING:

The engine cooling fan can start working unexpectedly, even when the engine is not running. To avoid injury from the fan, make sure the ignition key is switched OFF, so that the fan cannot start operating.

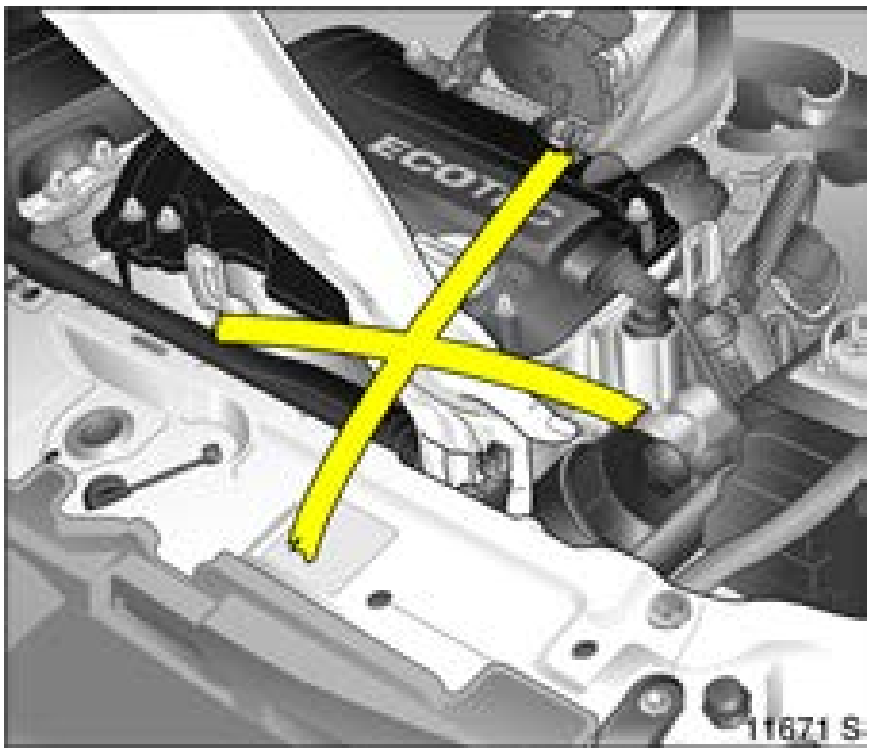

WARNING:

Electronic ignition systems have a high ignition power. Do not touch the ignition system; this could be highly dangerous.

Check the following:

- All exterior lights are working and that their appropriate interior indicators light up when in operation.
- Mirrors and glass are clean and not scratched.
- Automatic transmission (if fitted) T-bar indicator correctly lines up next to the gear selected.
- Correct aim of water on the windscreen or tailgate and condition of the wipers.
- Demister operates.
- Condition and operation of all seat belts (give a sharp tug to ensure that the ‘lock’ will function if necessary) and check that buckles are clean and operating correctly. Remember that seat belts must never be worn twisted.

ENGINE OIL LEVEL

It is normal for every engine to consume some oil. For this reason the engine oil level should be checked every 500 km or before starting a long trip.

The oil level must be checked with the vehicle parked on level ground and with the engine (which must be at normal operating temperature) switched off. Wait at least 5 minutes before checking the level to allow the oil to settle. If the engine is cold, the oil may take a lot longer to drain back.

To check the level, remove the oil dipstick, wipe it clean and re-insert it as far as it will go. Pause for a second then withdraw the dipstick and look at the oil level on it.

The oil level should be maintained between the low and full levels (Barina: **A** and **B**, Combo: **MIN** and **MAX**).

Refer to Chapter 8, Specifications for the engine oil details.

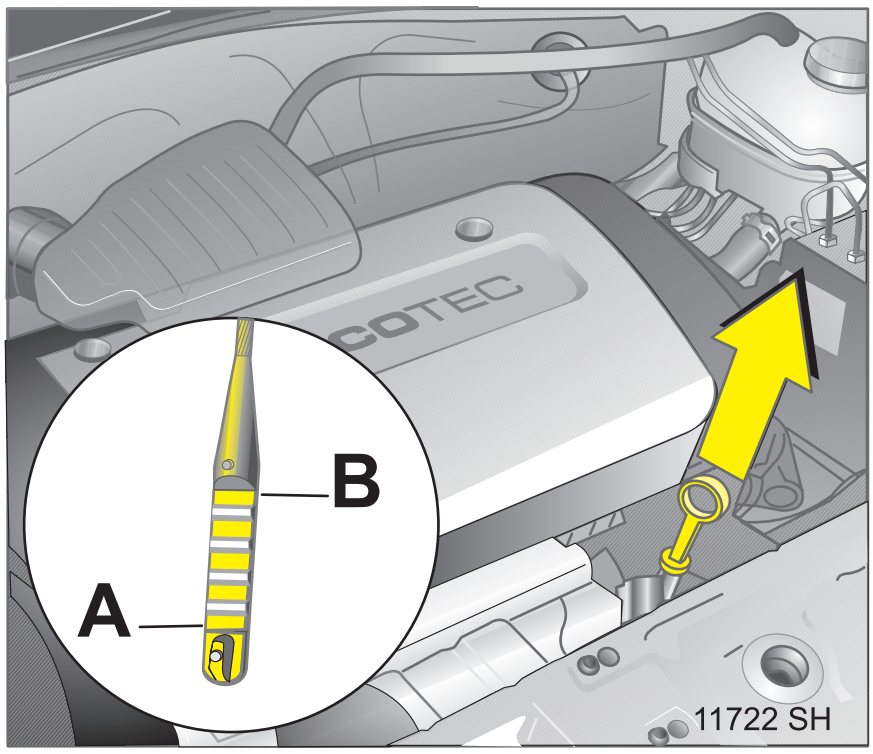

Add engine oil

To add oil, undo the cap on top of the engine. Add enough oil to bring the oil level to the full level. As a guide, the distance between the marks represents 1 litre of oil.

Wait a few minutes for the oil to settle then check the oil level again. When the level is correct, install the oil cap and the dipstick and clean up any spilt oil.

Note: Do not increase the oil level to above the *top* mark on the dipstick.

Oil consumption should not be judged until the vehicle has run several thousand kilometres. It may take this long for oil consumption to stabilise.

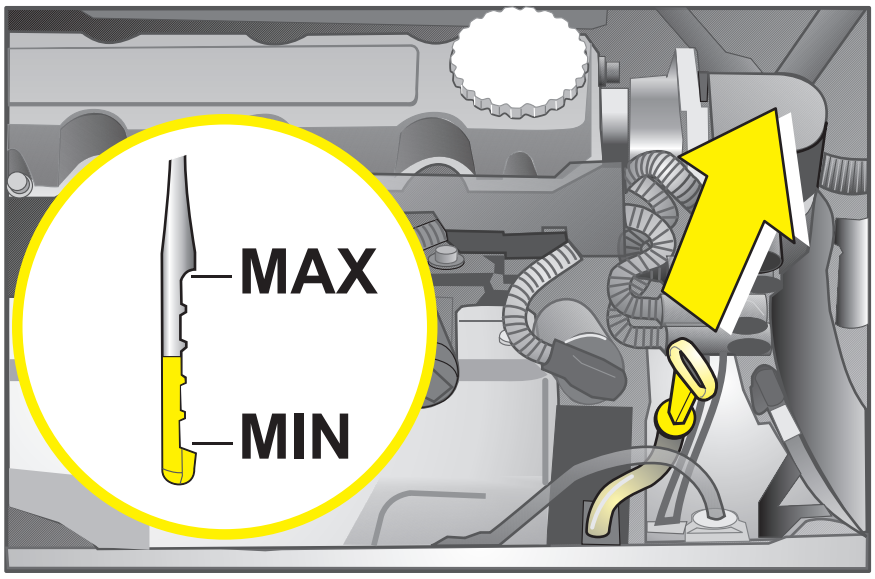

Oils not recommended

Note: Non-detergent and other low quality oils are specifically not recommended. The use of break-in oil, tune up compounds, friction reducing compounds and other supplemental additives are not recommended. Their use will increase costs, may be detrimental to the operation of your vehicle and may void your New Vehicle Warranty, to the extent that Holden considers the non-recommended fluid to have affected the specifications or quality of your Holden vehicle.

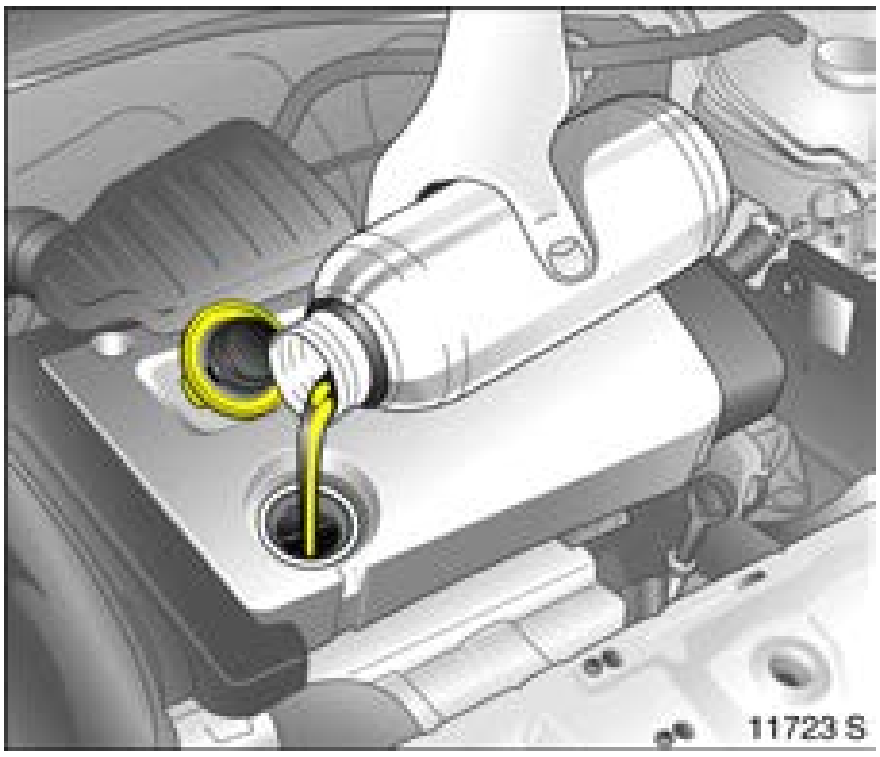

ENGINE COOLANT LEVEL

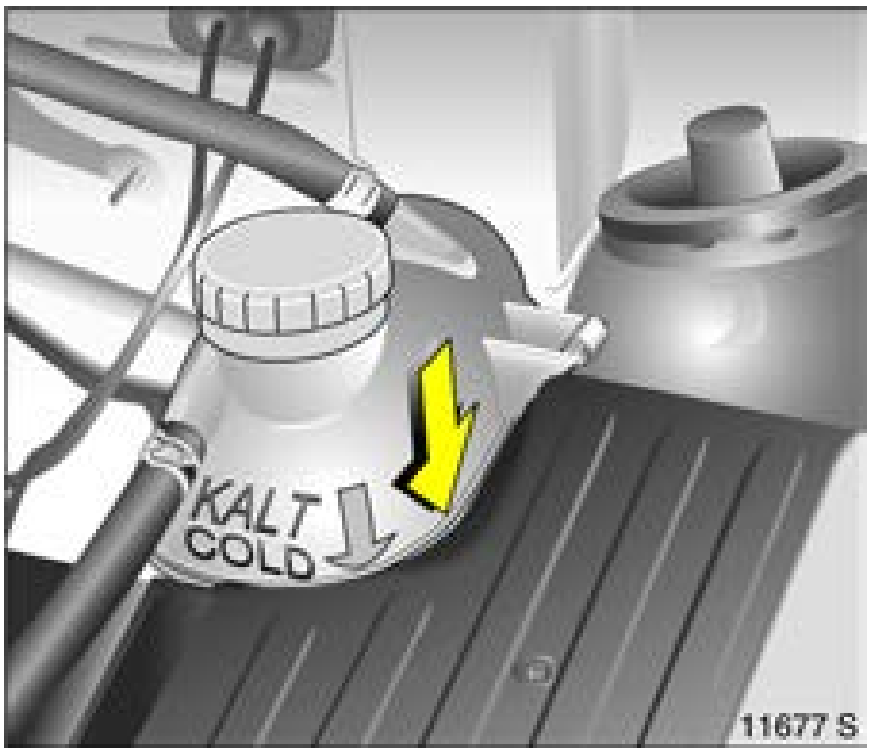

The engine coolant reservoir is located in the front, passenger side of the engine bay (yellow cap).

The level of coolant should be checked at least weekly. This is simply a matter of looking at the level in the plastic container when the engine is cold.

The level should be slightly above the KALT / COLD ⇩ mark when the engine is cold. The level rises when the engine is running and drops down again when the engine cools down. If the level falls below the KALT / COLD ⇩ mark, the coolant should be topped up to a little over the mark.

The coolant for your vehicle is specified in Chapter 8 Specifications.

If topping up, first mix a solution of 50% coolant and 50% water. Failure to use the coolant meeting the Holden specification or maintaining the specified concentration may result in voiding your warranty.

In an emergency, plain water may be used temporarily in the cooling system until the correct coolant is obtained as soon as possible from the nearest Holden Retailer.

Remember to install the coolant cap and tighten as far as it will go.

It should be noted that the specified coolant contains special corrosion inhibitors for the best corrosion protection of your engine and cooling system. This coolant also gives your cooling system greater hot weather protection by increasing the boiling point and in addition provides protection in cold weather conditions down to –30°C, provided the correct concentration is maintained.

If you regularly have to top up the cooling system, you should see your Holden Retailer.

WARNING:

Corrosion inhibitors and antifreeze fluids are poisonous. Use extreme care when handling. If swallowed seek medical attention. Do not remove the cooling system cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

Refer to Chapter 6 if the engine overheats.

BRAKE AND AUTO TRANSMISSION FLUID LEVELS

Brake fluid level

The brake fluid in the master cylinder should be checked weekly. The master cylinder is located in the engine bay, on the driver's side of the vehicle.

The fluid level, visible in the see-through master cylinder when standing at the driver's side of the vehicle, should be maintained between the MIN and MAX level markings shown on the side of the master cylinder.

If the fluid is between these levels do not remove the master cylinder cap. Remember that brake fluid exposed to the atmosphere will quickly absorb moisture, which in turn lowers the boiling point of the fluid as well as increasing risk of corrosion of brake components.

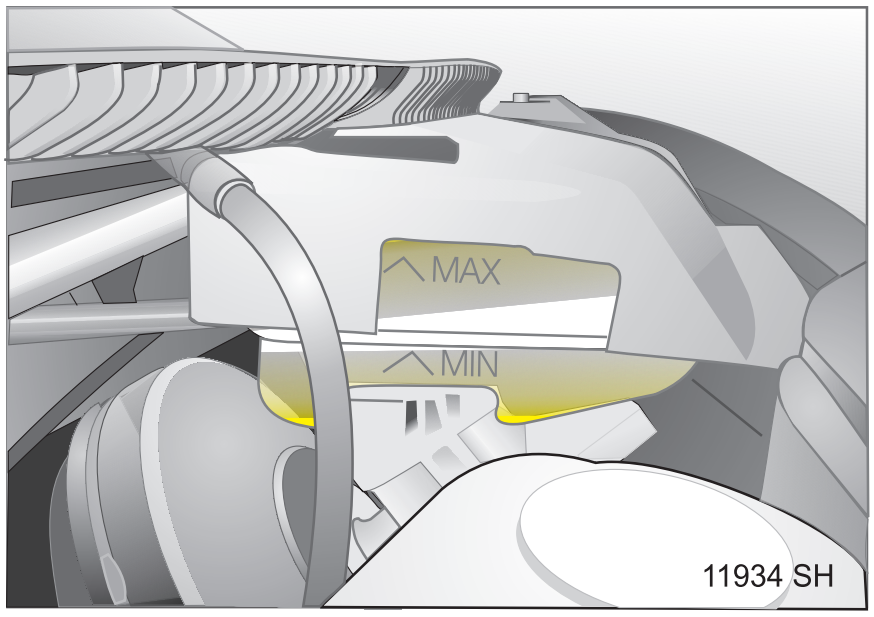

WARNING:

Brake fluid is poisonous and corrosive. It will damage the paint finish of your vehicle if spilt. If spillage occurs on vehicle body, remove by pouring water over affected area as soon as possible.

If fluid needs to be added, firstly, raise the plastic master cylinder cover (the engine compartment weather seal will have to be pulled towards the front of the vehicle to allow the cover to be raised). Secondly, clean around the filler cap. Finally, top up the master cylinder reservoir with heavy duty brake fluid which meets Holden specifications. Refer to Chapter 8 for brake fluid details.

Remember to secure the cap and clean up any spilt fluid.

Note: Use only new brake fluid. Use of old, used or inferior brake fluid may endanger the functioning of the brake system.

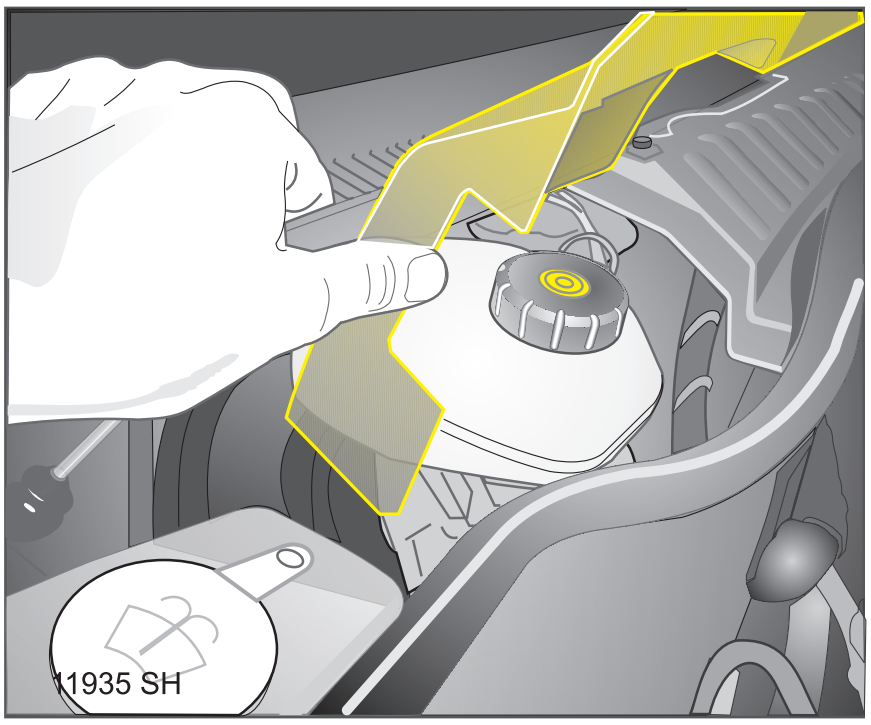

If the master cylinder requires constant topping up, it could indicate that a malfunction exists and you should immediately see your Holden Retailer.

Automatic transmission (if fitted) fluid level

The fluid level for automatic transmission will be checked for you when your vehicle is taken to your Holden Retailer for servicing, refer to Chapter 12. The automatic transmission fluid level does not require checking by the driver in between these scheduled services.

WASHER FLUID LEVEL AND BATTERY

Washer fluid level

As the washer fluid is constantly used the level should be checked weekly and topped up as required.

The washer container is for both the windscreen and tailgate washers (if fitted).

The washer container is located under the bonnet on the driver's side, beside the brake master cylinder.

To fill, open the flip top cap.

For a crystal clear windscreen, add a small amount of windscreen cleaner (refer to Chapter 8 for Holden's recommendation). Do not use ordinary soap or detergent. These not only froth up but will also damage the wiper rubbers and may also block the washer jets.

Remember to secure the cap after filling.

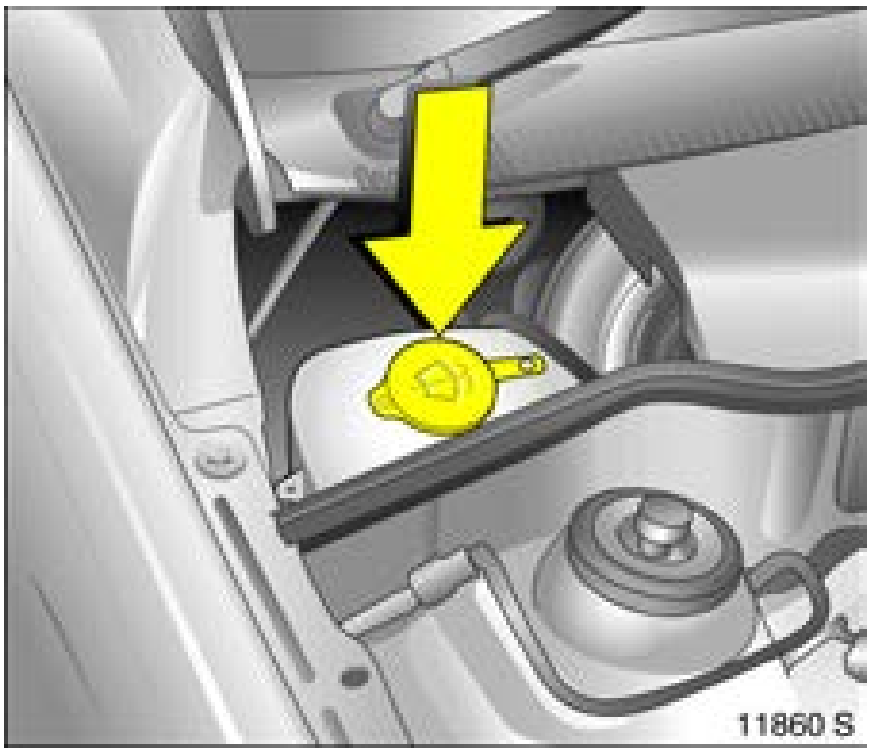

Battery

Your vehicle is fitted with a maintenance free battery, which means that the fluid level does not need to be checked.

Note: You should never disconnect the battery when the engine is running.

If removing the battery for recharging, first disconnect the negative cable, then the positive cable. Never charge the battery while still connected to the vehicle. When reconnecting, first connect the positive cable to the positive post of the battery, then the negative cable to the negative post of the battery.

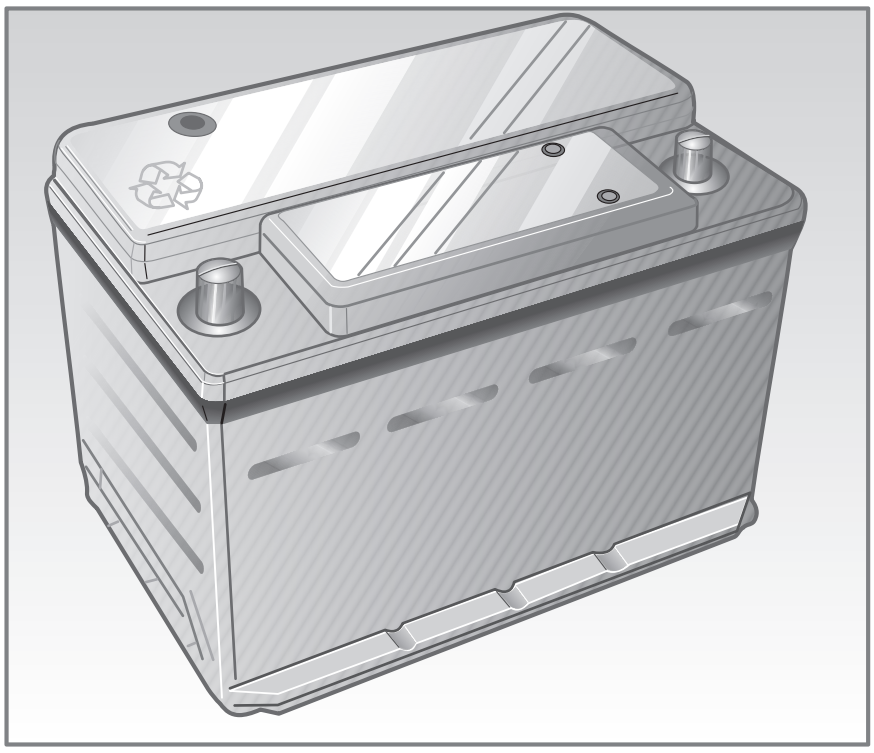

TYRES

Tyre air pressure

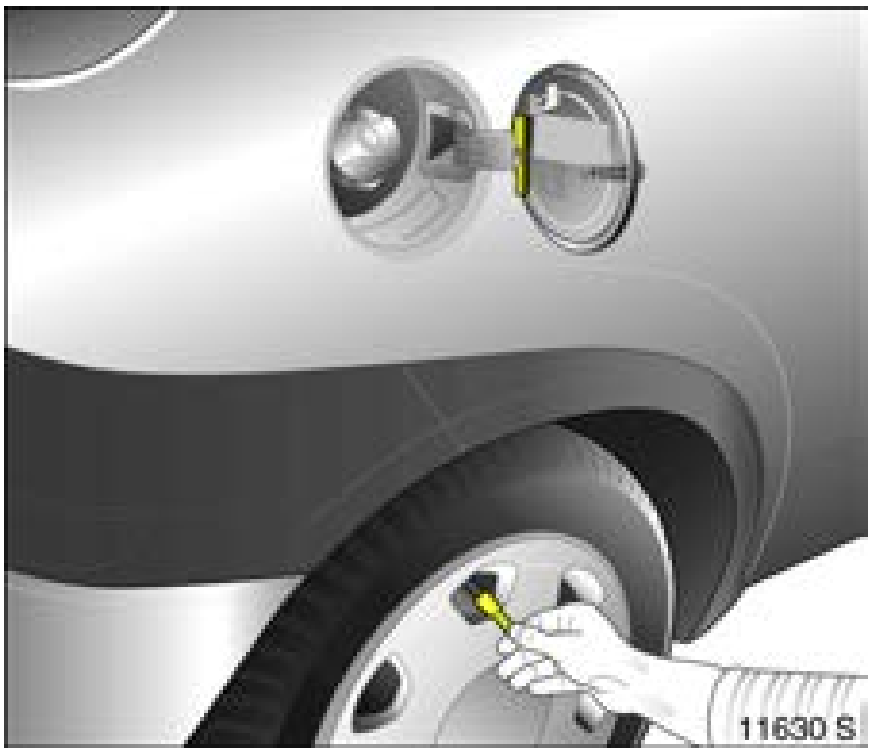

Checking the air pressure of your tyres (including the spare) ensures your safety, as well as reducing fuel consumption and increasing the life of your tyres.

To make sure your vehicle will handle at its best – check the pressures weekly. For constant long distance or rough road travelling, daily checking is recommended.

For correct pressure for your tyres, refer to the tyre placard, on the inside of the fuel filler flap.

Tyre inflation pressure increases when the tyres have been driven more than 2 km. The pressure should be checked when the tyres are cold (stationary for more than 3 hours). If they must be checked immediately after driving, increase the pressure shown on the placard by 10%.

Always use a tyre pressure gauge to check the tyres - simply looking at the tyres is not sufficient.

If the pressure is too low, this can result in considerable tyre warm-up and internal damage, leading to tread separation and even to tyre blowout at high speeds.

If the pressure is too high, this can result in reduced traction, increased risk of tyre blowout and poor tyre wear.

Remember to put back any valve dust caps or extensions, if so equipped. This stops dirt and moisture from fouling the valves.

Use the valve cap wrench to make unscrewing the valve caps easier. The wrench is located on the inside of the fuel filler flap.

When checking the tyre air pressure, take a look at the condition of the tyre tread and inspect for stones or abnormal wear.

Alignment and balance

Improper wheel alignment can cause the tyres to wear faster and unevenly. It can also cause the vehicle to 'pull' to the left or right.

Out-of-balance wheels and tyres can cause annoying vibration and uneven tyre wear such as cupping and flat spots.

If you have any reason to suspect that either of the above problems exist then have a wheel alignment and balance check done by your Holden Retailer.

TYRES cont.

Tyre inspection and rotation

Front and rear tyres perform different jobs and can wear differently depending on the types of roads driven, your driving habits, wheel alignment and balance, tyre pressures etc.

Tyre condition will be checked for you when you take your vehicle to be serviced by your Holden Retailer, who will be able to diagnose any unusual signs of wear. If the tyres are rotated it is recommended that the balance be checked at the same time.

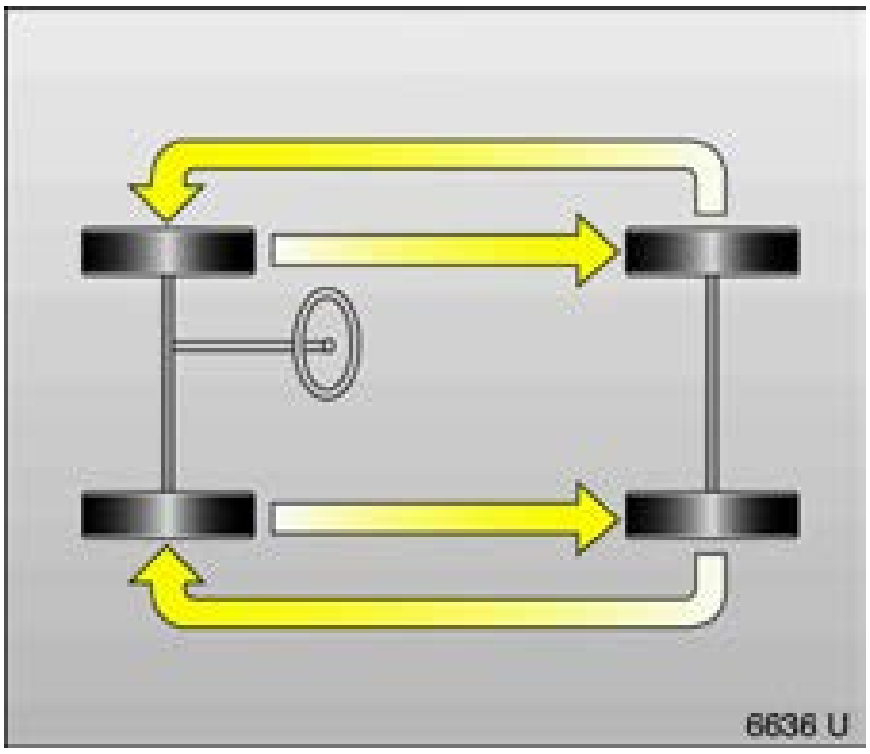

Heavy treads

Caution must be exercised when using tyres with heavy treads, including tyres designed to gain traction in bad weather conditions. At sustained high speeds, this type of tyre will run at higher temperatures than standard tyres and consequently should only be operated within the limits recommended by the manufacturer.

Any doubts concerning the fitness of the tyres on your vehicle for the purpose you require should be referred to your Holden Retailer.

Wheel replacement

When replacing wheels for any reason, ensure that the new wheels are equivalent in diameter, rim width, offset and mounting configuration to those originally installed in your vehicle.

Note: Replacing your factory fitted wheels and tyres with non specified wheels and tyres may affect your warranty as well as your motor vehicle insurance policy.

Tyre traction

WARNING:

A decrease in driving, cornering and braking traction occurs when water, snow, ice, gravel or other material is on the road surface. Driving practises and speed should be adjusted to the road conditions.

When driving on wet or slushy roads, it is possible for a wedge of water to build up between the tyre and road surface. This phenomenon, known as hydroplaning, may cause partial or complete loss of traction, which adversely affects control and stopping ability. To reduce the possibility of traction loss, the following precautions should be observed.

1. Reduce speeds during rainstorms, when roads are slushy or if the road has standing water or puddles.
2. Replace tyres when tread wear indicators are visible.
3. Check that tyres are properly inflated.

TYRES cont.

Tyre replacement and repair

WARNING:

Do not mix different tyre construction types, such as radial and cross ply, on your vehicle except in emergencies, because your vehicle's handling could be affected and may result in loss of control.

When replacing tyres you should use the same size, load rating and construction type as the original tyres on your vehicle. Refer to the tyre placard on your vehicle for tyre size and load rating. Using a different size or type of tyre may affect such things as ride, handling, speedometer / odometer calibration, ground clearance and tyre clearance to the body or the chassis.

Tyres with a higher speed rating and / or maximum load rating in excess of that listed are also acceptable as replacements provided they are fitted to a suitable rim size.

New tyres should be fitted in pairs to the front. If replacing only one tyre, it should be paired on the same axle with the least worn of the other three.

You should replace your tyres when:

1. The tyres are worn to the point where the tread wear indicators, as shown, appear or the cord or fabric is showing.
2. The tread or side wall is cut, split, or cracked deep enough to expose the cord or fabric.
3. The tyre has a bump or bulge in it, indicating some kind of internal damage.
4. The tyre has a puncture, cut or other damage which can't be repaired because of the size or location of the damage.

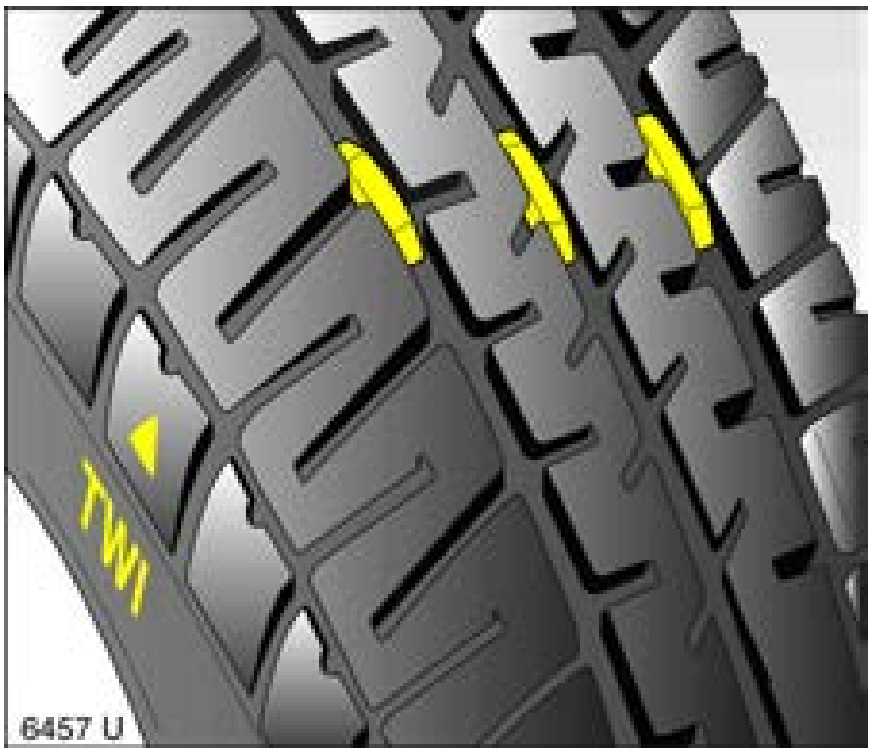

If in doubt about the extent of damage to the tyre, have it removed from the wheel and examined by a tyre specialist.

If a pressure loss occurs while driving, do not attempt to drive on the deflated tyre more than is necessary to stop safely. Driving even a short distance on a deflated tyre can damage it and the wheel beyond repair.

When an object which has punctured the tyre is removed, repairs are to be made in accordance with the tyre manufacturer's recommendations.

WARNING:

Tyres which have been retreaded or improperly repaired cannot be operated safely at high speeds. Therefore, their use is not recommended.

CHAPTER 8

Specifications

Page

8-2 Specifications
8-3 Dimensions
8-4 Identification labels

SPECIFICATIONS

Vehicle	BARINA	COMBO	BARINA SRi
Engine type	Z14XE, 16 valve DOHC 1,389 cc	Z16SE, 8 valve SOHC 1,598 cc	Z18XE, 16 valve DOHC 1,796 cc
Bore	77.6 mm	79.0 mm	80.5 mm
Stroke	73.4 mm	81.5 mm	88.2 mm
Comp. ratio	10.5:1	9.6:1	10.5:1
Engine oil spec.	ACEA service classification A2 or A3. Viscosity grade 15W–40 or 15W–50		
Refill oil capacity	Approx. 3.5 litres (including filter)	Approx. 3.5 litres (including filter)	Approx. 4.25 litres (including filter)
Engine power	66 kW @ 6,000 r.p.m. (91 or 95 R.O.N. fuel)	64 kW @ 5,400 r.p.m. (91 or 95 R.O.N. fuel)	90 kW @ 6,000 r.p.m. (91 R.O.N. fuel) 92 kW @ 6,000 r.p.m. (95 R.O.N. fuel)
Engine torque	120 Nm @ 4,000 r.p.m. (91 R.O.N. fuel) 125 Nm @ 4,000 r.p.m. (95 R.O.N. fuel)	133 Nm @ 3,000 r.p.m. (91 R.O.N. fuel) 138 Nm@ 3,000 r.p.m. (95 R.O.N. fuel)	160 Nm @ 4,600 r.p.m. (91 R.O.N. fuel) 165 @ 4,600 r.p.m. (95 R.O.N. fuel)
Coolant spec.	50% water and 50% Dex-Cool coolant conforming to GM6277M specification		
Coolant capacity	6.1 litres (manual) 6.5 litres (automatic without A/C) 6.7 litres (automatic with A/C)	6.1 litres (with or without A/C)	5.3 litres (without A/C) 5.4 litres (with A/C)
Trans. fluid	MANUAL: Gear oil meeting Holden specification No. HN2354 (Castrol SMX–0 or equivalent) AUTOMATIC: Automatic transmission fluid meeting Holden specification No. HN2287 (Esso JWS 3305G)		
Trans. refill capacity	MANUAL: 1.6 litres AUTOMATIC: 5 litres (total)		
Brake fluid	Heavy duty brake fluid meeting S.A.E. specification J1703, DOT 4		
Clutch fluid	Heavy duty brake fluid meeting S.A.E. specification J1703, DOT 4		
Fuel tank capacity	44 litres	50 litres	44 litres
Battery	12 volt, 66 amp / hour		
Washer fluid	Add a small amount of Optikleen (Holden part no. 92140005) to the washer bottle water		

SPECIFICATIONS

Vehicle identification number (I.S.O.V.I.N.)

A unique I.S.O.V.I.N. Number (example below) has been allocated to your car. This number can be used for model identification when purchasing parts. Refer to the following illustrations for the location of this label.

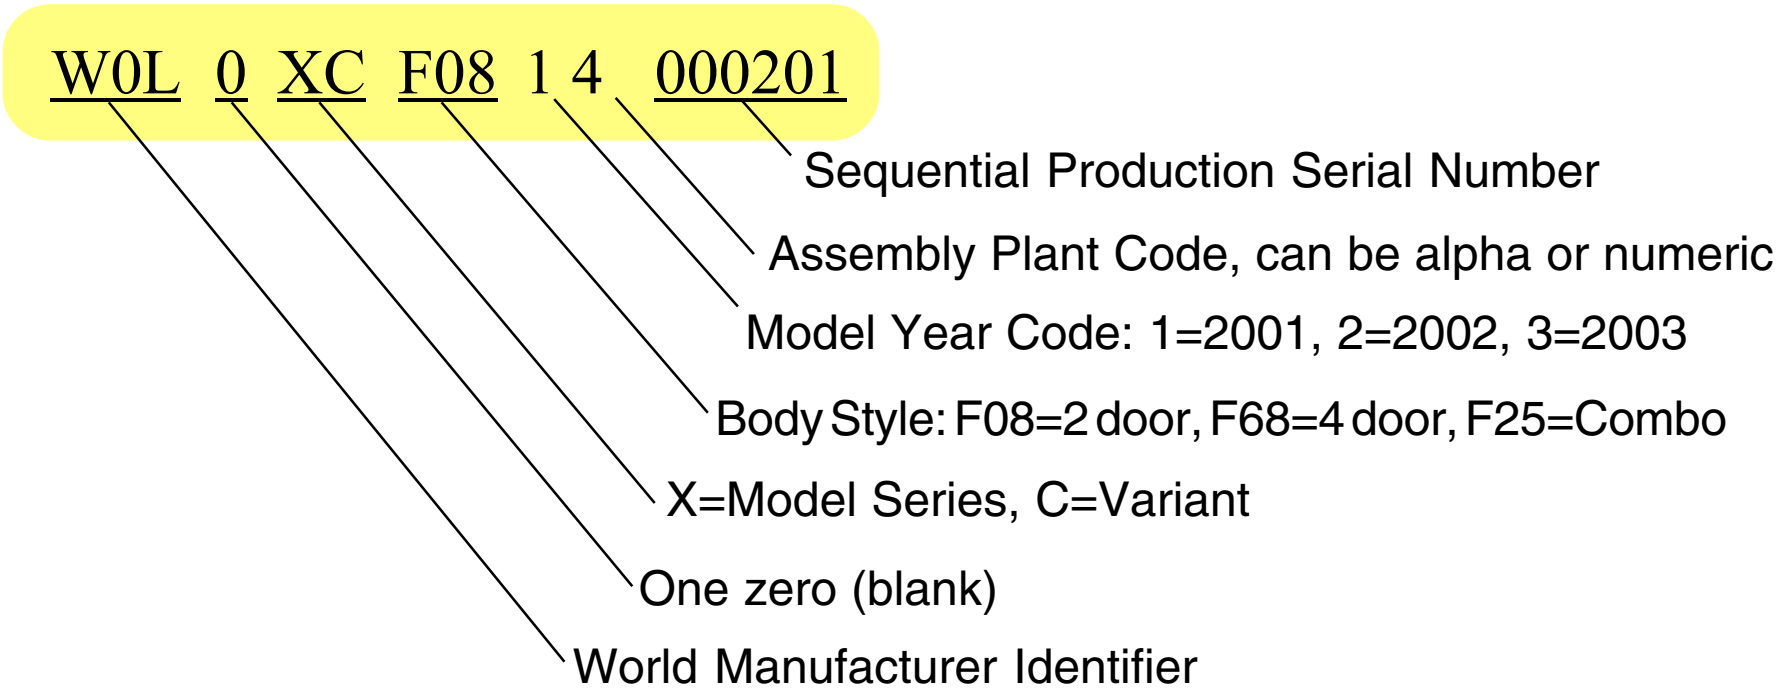
W0L 0 XC F08 1 4 000201
Sequential Production Serial Number
Assembly Plant Code, can be alpha or numeric
Model Year Code: 1=2001, 2=2002, 3=2003
Body Style: F08=2 door, F68=4 door, F25=Combo
X=Model Series, C=Variant
One zero (blank)
World Manufacturer Identifier

Engine number

Individual identification numbers are stamped onto the engine. This number is located on the front of the engine block adjacent to the oil filter.

Dimensions

		BARINA	COMBO
Overall length		3,817 mm	4,322 mm
Overall width including mirrors		1,955 mm	1,892 mm
Overall height at curb weight		1,440 mm	1,801 mm
Track	Front	1,417 mm	1,417 mm
	Rear	1,408 mm	1,440 mm
Wheel base		2,491 mm	2,716 mm

IDENTIFICATION LABELS cont.

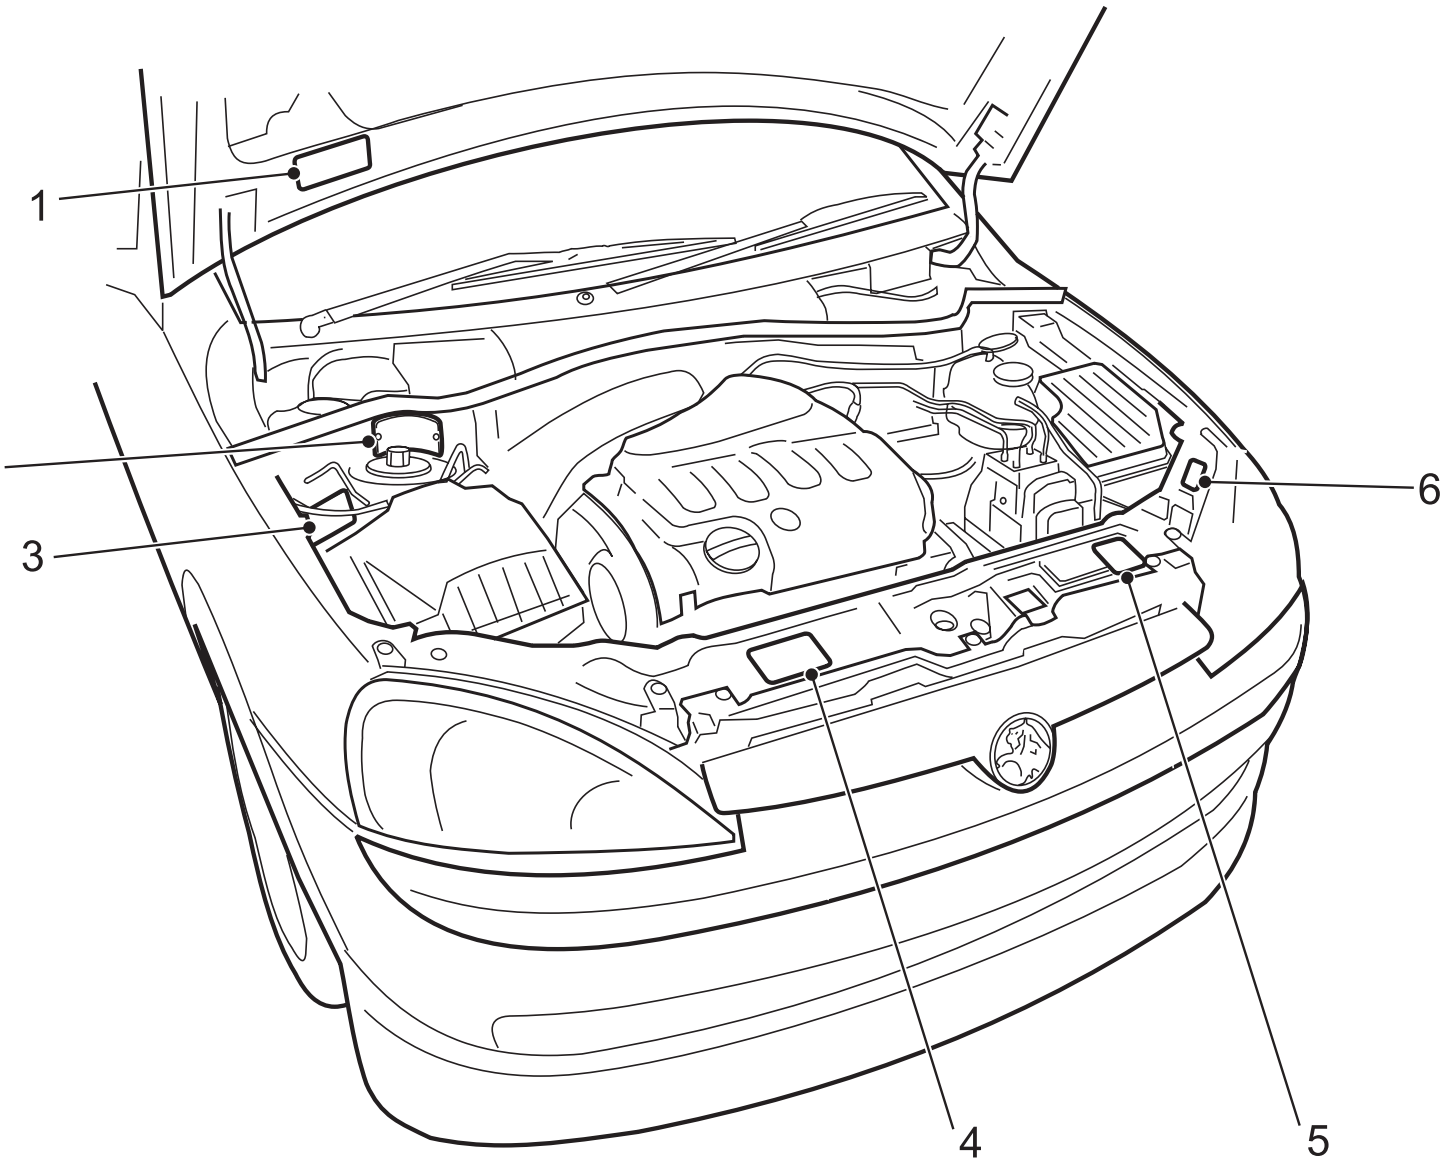

1. Emission label (Barina)

This label shows the relevant tune-up information required to maintain minimum exhaust emissions. It is located on the underside of the bonnet (driver's side).

2. Safety compliance plate

The compliance plate shows the vehicle approval number, category code, make, model and seating capacity. It also displays the ISOVIN number, which should be used when selecting spare parts. This plate is located on the engine bay partition (driver's side).

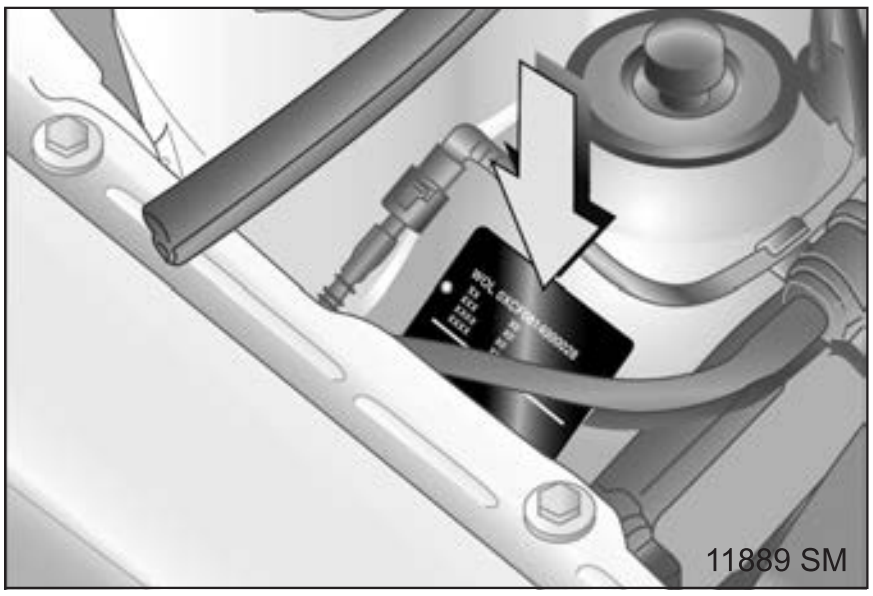

3. Vehicle identification number (I.S.O.V.I.N.) plate

The I.S.O.V.I.N. plate is located on the driver's side suspension tower, in the engine compartment.

4. A / C system plate (if fitted)

This label shows air conditioner system specifications.

5. Warning label

This label serves as a reminder of some hazards that can exist in the engine area.

6. Holden identification plate

The Holden number on the Holden identification plate is used for warranty identification and Roadside Assistance identification. This plate is located on the passenger side of the radiator support panel.

IDENTIFICATION LABELS cont.

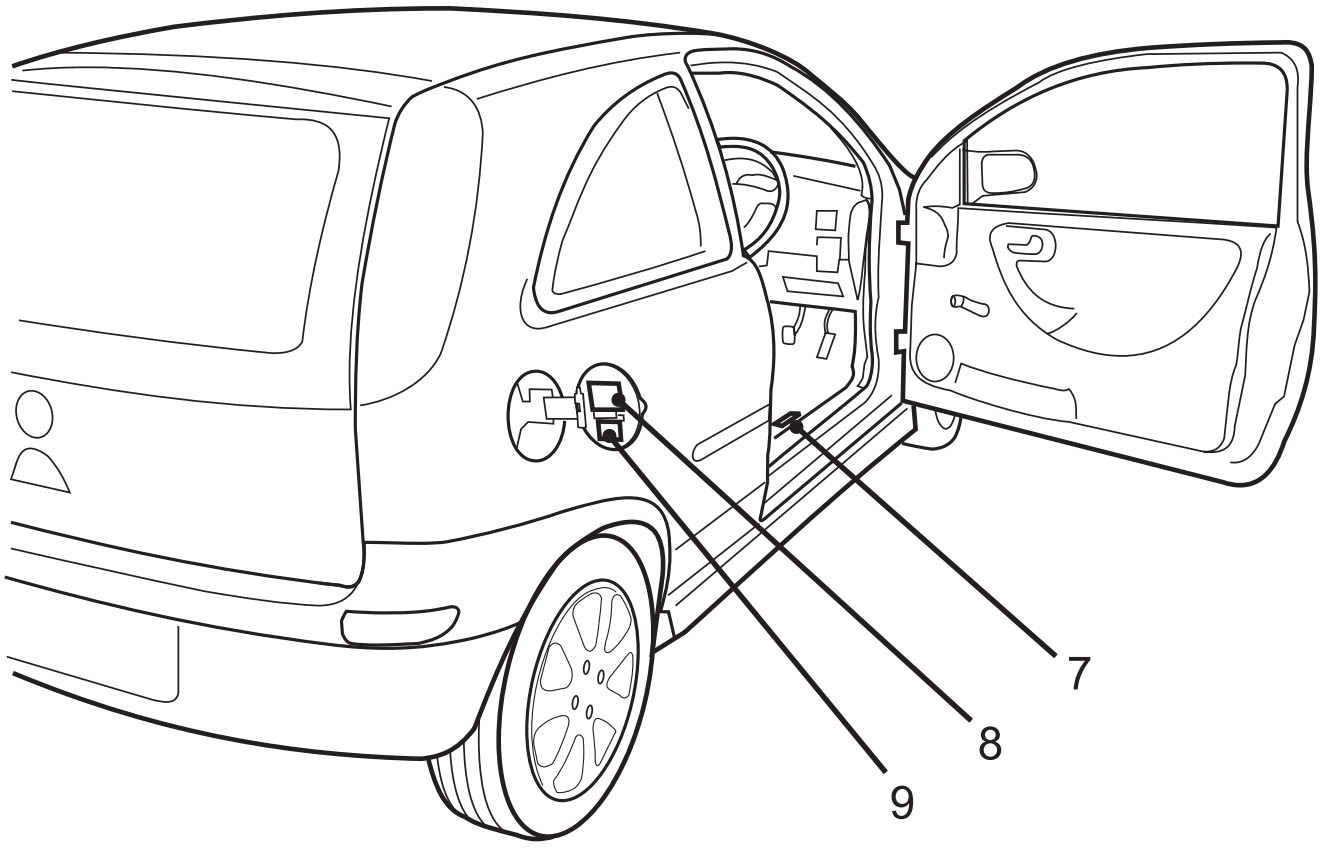

7. Vehicle identification stamp

This stamping shows the same number as displayed on the I.S.O.V.I.N. plate. It is stamped onto the body floor panel and is located under a hinged cover, at the right side of the driver's foot well.

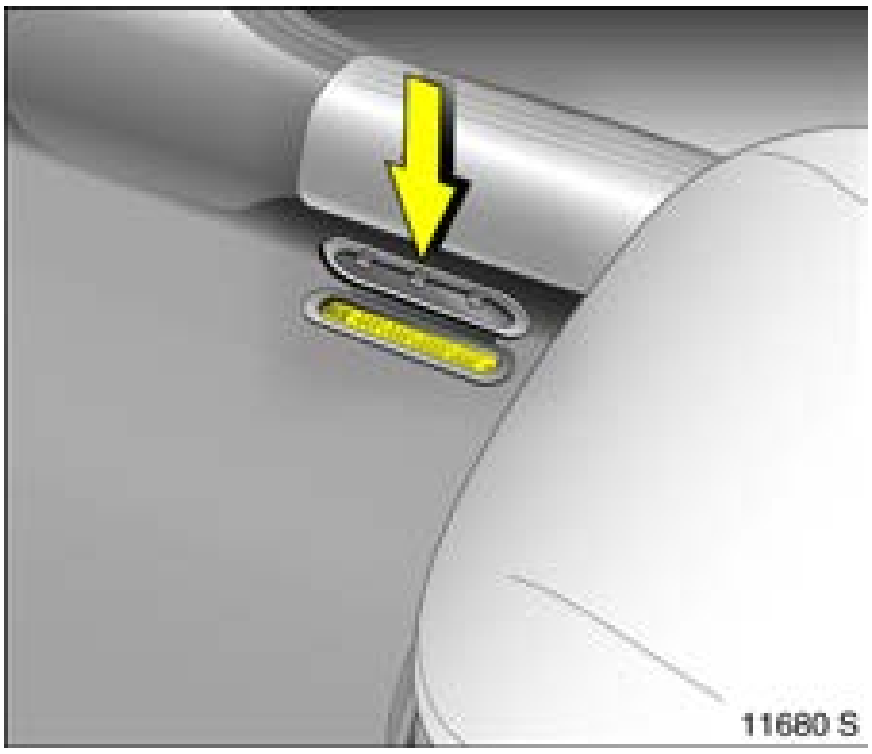

8. Tyre placard

The tyre placard is located on the inside of the fuel filler flap.

9. Fuel label (Barina)

The fuel label shows the recommended fuel for your vehicle. Refer also to Chapter 5, Petrol filling.

CHAPTER 9

After Sales

Page

9-2 New Vehicle Warranty

9-4 Parts and Accessories Warranty

9-5 Warranty Questions and Answers

9-8 Roadside Assistance

9-10 Customer Assistance

9-11 For New Zealand Holden Owners

9-12 Australian Holden Retailers

9-26 New Zealand Holden Retailers

Note: The names and details of Retail Premises may change after the printing of this Handbook. The list contains both Authorised Holden Retailers and Authorised Holden Service Operations.

NEW VEHICLE WARRANTY CERTIFICATE

New Vehicle Warranty application

This Warranty is given by Holden Ltd, ABN 84 006 893 232, ('Holden'). The Warranty applies to the vehicle identified on the inside front cover of this Owner's Handbook. It is provided to the original and subsequent owners / operators driving the vehicle within Australia during the Warranty Period.
This Warranty is given in addition to all rights conferred by law on that person.

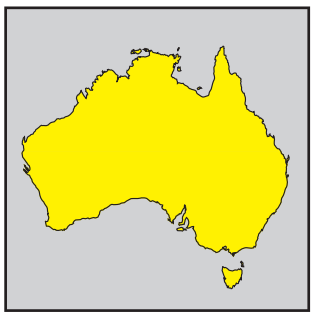

Australian vehicles

This Warranty is only applicable to vehicles purchased and operated in Australia.

Owners of vehicles purchased in Australia but operated overseas should consult the local retailer in the country of operation about any Warranty applicable to their vehicle. This Warranty does not apply for Holden vehicles exported overseas. Similarly, this Warranty is not provided for vehicles purchased overseas and imported into Australia.

Repairs covered

Subject to the exclusions shown on the following page, this Warranty covers the correction, during the Warranty Period, of any vehicle defect related to materials or workmanship and advised to a Holden Retailer or Authorised Service Outlet, by repair or at Holden's option by replacement.

100,000kms
3
years

Warranty Period

The coverage commences from the date of delivery (or in the case of a demonstrator vehicle the date when the vehicle was first placed into service by the Retailer). The coverage expires at the end of the period of 3 years after the commencement date or after the vehicle has travelled 100,000 kilometres, whichever occurs first.

No charge

Warranty work undertaken (including parts and labour) will be carried out at no cost to the vehicle owner. However, this work should not be confused with servicing specified in the Maintenance schedule in Chapter 12 of this Owner's Handbook for which a charge is payable.

NEW VEHICLE WARRANTY CERTIFICATE cont.

Warranty exclusions

- **Damage**

Your Warranty does not extend to the following damage: Damage caused by an accident, fire, theft or moving objects striking the vehicle.

Damage caused by industrial fallout, chemicals or sealants. Damage caused by atmospheric fallout or flood, hail, salt, etc.

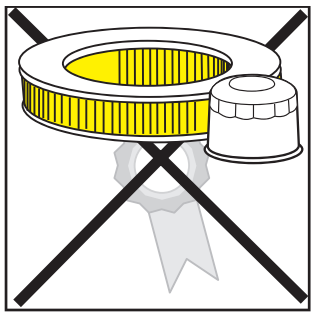

- **Maintenance items**

Services such as, brake adjustment, replacement of filters, wiper rubbers etc., which are required as part of normal vehicle maintenance, refer Chapter 12.

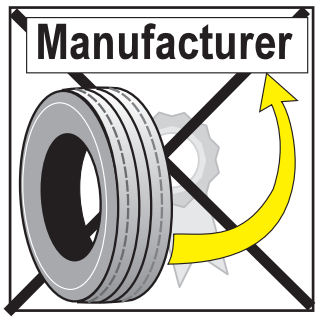

- **Tyres**

The tyres (and tubes where applicable) fitted to your vehicle are not covered by this Warranty. However, they may be covered by the tyre manufacturer.

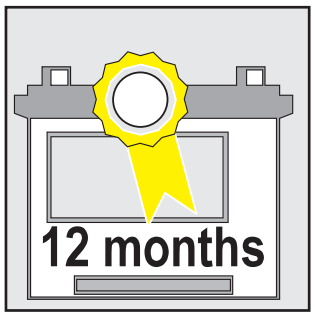

- **Batteries**

Batteries are warranted for 12 months.

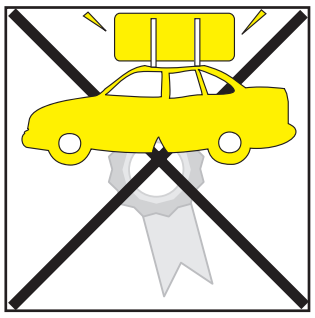

- **Misuse**

The warranty does not cover damage caused by:

(a) misuse or abuse of the vehicle such as by racing, rallying, overloading, etc., or neglect,

(b) operation of the vehicle after the defect is known,

(c) failure to carry out proper maintenance services,

(d) use of incorrect types and grades of fuel, oil or lubricants,

(e) alteration of the vehicle by anyone not authorised by Holden,

(f) fitting of parts or accessories not recommended by Holden,

(g) any work carried out on the vehicle by anyone except a Holden Retailer or authorised Service Outlet.

PARTS AND ACCESSORIES WARRANTY

Holden warrants Holden approved Parts and Accessories ('Parts' and 'Accessories') for the periods and on the conditions set out below. The Warranty covers the correction, during the relevant Warranty Period, of defects in any such Parts and Accessories, by repair or at Holden's option by replacement.

- **Accessories installed to the new vehicle**

  Holden approved Accessories installed by a Holden Retailer or authorised Service Outlet to the new vehicle at the time of purchase are covered together with the New Vehicle warranty for the period of 3 years or 100,000 km, whichever occurs first.

- **Parts and Accessories installed after new vehicle delivery by a Holden Retailer or authorised Service Outlet**

  Parts and Accessories are covered for 2 years or 50,000 km (whichever occurs first). If the vehicle is still within the New Vehicle Warranty the Parts and Accessories are covered by the longer of:

  2 years / 50,000 km (whichever occurs first)

  or

  the end of the New Vehicle Warranty.

  As an example, an Accessory installed in a 7 month old vehicle would be covered until the end of the New Vehicle Warranty; an Accessory installed in a 2½ year old vehicle would be covered until the end of 4½ years or a further 50,000 km from when the Accessory was installed.

- **Purchased at retail or trade**
  Parts and Accessories purchased at trade or retail and installed by other than a Holden Retailer or authorised Service Outlet are warranted for 1 year from the date of purchase. Please keep a receipt to support warranty claims.

  The Warranty does not cover the labour costs of removal / reinstallation of Parts and Accessories when installed or rectified by other than a Holden Retailer or authorised Service Outlet.

- **Parts and accessories warranty exclusions**

  The tyres (and tubes where applicable) are not covered by this warranty. However, they may be covered by the tyre manufacturer.

  Batteries are warranted for 12 months from date of purchase.

  Parts which are required as part of normal vehicle maintenance are warranted against manufacturing defect at the time of installation. Consult your Holden Retailer to confirm the period of this warranty.

WARRANTY QUESTIONS AND ANSWERS

This section is designed to assist you in understanding the Holden Warranty provided with your new vehicle.

The following are some of the most frequently asked questions, for which detailed answers are provided.

Q 1. How do I go about obtaining Holden Warranty service?

It is the responsibility of the Holden Selling Retailer to provide Holden Warranty service, therefore you should take your vehicle to the Holden Selling Retailer whenever Holden Warranty service is needed. However, if this is not possible, you may go to any other Authorised Holden Retailer. The details recorded inside the front cover of this handbook will be required by the Holden Retailer.

Q 2. What should I do if my vehicle becomes unsafe or inoperative as a result of a defect which is covered by the Holden New Vehicle Warranty?

You should contact the nearest Authorised Holden Retailer or Holden Customer Assistance Service (refer further in this chapter) as soon as possible, and arrange for that Retailer to carry out the required Holden Warranty Service.

Q 3. What should I do if, in an emergency, Holden Warranty service is required and an Authorised Holden Retailer is not available to provide such service at the time?

If, in an emergency, a repair, replacement or adjustment (covered by the Holden New Vehicle Warranty) is required to enable your vehicle to be operated safely and it is not practical for you to go to an Authorised Holden Retailer, the service (to the extent that it is necessary to enable your vehicle to be operated safely) may be performed by any other qualified mechanic or repairer. A claim for the reasonable cost may be made through the Authorised Holden Retailer who would normally provide you with Holden Warranty Service. You must also take your vehicle to the Authorised Holden Retailer for inspection of the service and / or completion of any required Holden Warranty service, as soon as possible.

Note: During normal business hours you should seek authorisation from your nearest Authorised Holden Retailer or Holden Customer Assistance Service, prior to repairs being commenced.

Q 4. Are damage or injury, loss of time, inconvenience, commercial or other direct or indirect loss covered by the Holden Warranty?

No, these items are not covered. Holden warranty only covers the repair, replacement or adjustment of those parts of your vehicle which are found to be defective in materials or workmanship. No other types of claim for compensation of any kind, even if the same resulted from a consequence of a defect in materials or workmanship in your vehicle, will be recognised under the Holden New Vehicle Warranty.

You may have rights under the law to claim compensation outside of the Holden New Vehicle Warranty, but any claim based on those rights should be separately pursued.

WARRANTY QUESTIONS AND ANSWERS cont.

Q 5. Will I have to pay for maintenance costs during the Warranty Period?

Maintenance costs are not covered by the Holden New Vehicle Warranty. The maintenance schedule in Chapter 12 specifies the *minimum* maintenance required for your vehicle operating under normal conditions.

The Maintenance items (except where they are required as a result of defects in materials or workmanship) for which you will have to pay include:

- Engine tune-up, including spark plugs replacement.
- Replacement of all filters, engine and other belts, hoses, wiper blades, clutch linings.
- Cleaning or flushing of fuel, coolant, brake, engine, transmission, differential, power steering etc., after 1,500 km.
- Carbon and sludge removal.
- Maintenance servicing of emission control system devices.
- Adding to (or replacing) lubricants.
- Adding to (or replacing) air conditioning refrigerant, after 1,500 km.
- Any necessary adjustments to drive belts, transmissions, clutch, park brake etc.
- Wheel balancing – after 5,000 km.
- Wheel alignment.
- De-dusting or de-glazing of brake linings or pads – after 1,500 km.
- Brake lining wear or damaged brake components due to lining wear.
- Clutch lining wear or damaged clutch components due to lining wear.
- Battery recharging.
- Paint, bright metal finish and trim, due to normal deterioration.
- Body panel adjustment – after 1,500 km.
- Door or bonnet lock adjustments.
- Glass or channel adjustments – after 1,500 km.
- Body rattle, squeaks and general tightening of bolts, fasteners and fittings – after 1,500 km.
- Chipped glass or breakage.
- Torn or damaged floor mats or carpets.
- Normal wear and tear to trim components.

Q 6. Are my tyres covered by the Holden New Vehicle Warranty?

No. The tyres fitted to your vehicle are covered by a separate warranty provided by the tyre manufacturer. Any Authorised Holden Retailer will assist you by discussing any queries which you might have with respect to the tyre manufacturer's warranty with the tyre manufacturer's representative.

WARRANTY QUESTIONS AND ANSWERS cont.

Q 7. Will I have to pay for any costs or expenses in connection with the provision of Holden Warranty service?

All parts and labour used in carrying out Holden Warranty service at the premises of the servicing Holden Retailer are free of charge. Whenever Holden Warranty service is to be carried out by the servicing Holden Retailer it is your responsibility to deliver your vehicle to the servicing Holden Retailer's premises.

If, as a result of a defect which is covered by the Holden New Vehicle Warranty, your vehicle cannot be driven safely and you arrange for the nearest Authorised Holden Retailer to carry out the required Holden Warranty service, Holden will accept reasonable towing costs to move your vehicle to the nearest Holden Retailer's premises. Before employing a towing company, contact the nearest Holden Retailer and / or Holden Customer Assistance Service (refer page 10 of this Chapter) to obtain guidance.

Q 8. Would my vehicle's engine benefit from fuel additives, oil additives or coolant additives not marketed by Holden?

The use of break-in oil, tune-up compounds, friction-reducing compounds and other supplemental additives is not recommended; their use will not only increase operating costs, but may also be detrimental to the operation of your vehicle and can affect the validity of your vehicle warranty.

Only the fluids and lubricants referred to in this handbook should be used.

UNAUTHORISED STATEMENTS IN RELATION TO HOLDEN PRODUCTS

No Holden Retailer or other person is authorised or permitted to give or make any statement, assertion or undertaking in relation to the quality, performance, characteristics, descriptions or fitness for any purpose of any Holden product or in connection with the supply of any Holden product, which is at variance with any written statement, assertion or undertaking on any of these subjects given or made by Holden in its published sales literature, and Holden does not accept responsibility for any such unauthorised action.

ROADSIDE ASSISTANCE

3 YEAR
24 HOUR ROADSIDE ASSISTANCE

Our commitment to your satisfaction

Holden's Roadside Assistance is part of the unequalled commitment by Holden to provide total motoring satisfaction.

From the moment delivery is made, our aim is to provide the finest possible ownership experience, from design through manufacturing to servicing and now beyond to the open road, Australia wide.

We hope the need never arises, but if it does, we'll be there to help through Holden Roadside Assistance.

How does Holden Roadside Assistance work?

Holden Roadside Assistance is provided by Holden Ltd. and delivered by the collective resources of the Australian Automobile Clubs and Associations including the constituents of Assist Australia (AA).

Which vehicles are covered by the service?

As of 1st November 1993 all new Holden passenger and light commercial vehicles are covered for 36 months from the date of first registration.

Holden Roadside Assistance is extended to private and business vehicles, taxis, rental companies, all government and fleet operators.

What will Holden Roadside Assistance do for me?

Holden Roadside Assistance is designed to get you mobile on any road that is trafficable to normal two wheel drive vehicles. In the event of the unexpected happening, from your keys being locked in your vehicle to mechanical and accident advice, help is readily available by simply calling the toll free number 1800 817 100.

All Holden luxury vehicles receive the added benefits of Holden Roadside **Ultra** Assist which includes accommodation, alternative transport, rental car, assistance in case of accident, theft and medical emergency and Australia-wide vehicle recovery.

Can I upgrade to Roadside Ultra Assistance?

Yes, owners can upgrade to Holden Roadside **Ultra** Assistance for a fee by dialling 1800 645 668. To request a copy of the Ultra terms and conditions, contact the toll free Customer Assistance Service Line on 1800 033 349.

ROADSIDE ASSISTANCE cont.

When do the benefits begin?

Cover begins from the date of first registration. An interim card entitles you to immediately receive all the benefits of Holden Roadside Assistance.

Where can I get Roadside Assistance?

Holden Roadside Assistance is available to you at home, or at the roadside, anywhere in Australia, should you need it. In remote or sparsely populated areas you may experience delays in obtaining Roadside Assistance due to your location, the availability of the service provider and accessibility.

Is there a membership or joining fee?

No, Holden Roadside Assistance is complimentary with every new Holden passenger vehicle and light commercial vehicle for 36 months from the date of first registration.

What will Holden Roadside Assistance cost me?

Materials, fuel and spare parts must be paid for at the time of service. The service personnel attending will issue a receipt for these expenses. Reimbursement of expenses covered by Holden's warranty can be claimed by contacting your local Holden Retailer.

What happens if I sell my vehicle?

Holden Roadside Assistance stays with the vehicle, so if you sell your vehicle during the 36 month period, it is still eligible for the balance of the Holden Roadside Assistance. The new owner simply registers for the service by using the change of ownership form supplied in the Roadside Assistance booklet.

How do I call for assistance?

Simply call Holden Roadside Assistance toll free on 1800 817 100 from anywhere in Australia. For further information regarding the service and full terms and conditions, refer to the Roadside Assistance Kit in the glovebox or call the toll free Customer Assistance Service Line on 1800 033 349.

CUSTOMER ASSISTANCE

We want you to be happy with your new vehicle, together with the people you deal with while you have the vehicle.

Normally, any problems with the sales, operation, servicing or the validity of original equipment supplied with your vehicle will be handled by your Holden Retailer's Sales and Service Department.

We realise however that, with the best intentions, misunderstandings do occur sometimes.

☞ Therefore, we suggest you discuss any concern with one of the Holden Retailer's management people. If you haven't received satisfaction from the Sales Manager or Service Manager – go to the General Manager or to the Dealer Principal.

By now you should have satisfaction. If not, the Holden Customer Assistance office is at your disposal.

☎ The Australian Holden Customer Assistance representatives can be telephoned from anywhere within Australia for only the cost of a local call. The Melbourne area number is **9646 5466**. Outside the Melbourne Metropolitan area, the number is **1800 03 3349**.

If your concern relates to parts / accessories and you have made contact with the Retailer or Distributor without satisfaction, you may contact Holden Service Parts Operations on (03) 9797 7341.

Naturally, telephoning is the quickest and the best way to contact. However, if you prefer to write, the address is:

✉ The Manager
Holden Customer Assistance Centre
GPO Box 1714
Melbourne 3001

Your letter should clearly outline your concern or query, and include the following:

✍
- Your name and address
- Telephone numbers, both private and business
- Servicing Retail Premise's name and address
- Vehicle model
- Vehicle identification number (I.S.O.V.I.N.), refer to the inside front cover of this Handbook
- Date of purchase
- Current odometer reading

Most of this information will be found on the Vehicle Identification Certificate, located inside the front cover of this handbook.

Before you write however, remember that the telephone is the quicker and more efficient means of communication.

FOR NEW ZEALAND HOLDEN OWNERS

The information in this Owner's Handbook applies primarily to Australian Holden vehicles and there may be some differences to the Warranty and Owner Assistance provisions for New Zealand. Applicable details for New Zealand are set out in the Holden Warranty and Owner Assistance Information booklet enclosed in the New Zealand glovebox wallet.

For your convenience, a list of New Zealand Retailers is provided at the end of this Chapter.

☎ New Zealand Assistance can be reached on:

0800 HOLDEN (0800 465336)

This number provides access to New Zealand Roadside Assistance as well as New Zealand Customer Assistance.

✉ If you prefer to write, the address is:

The Manager
Holden Customer Assistance Centre
GPO Box 1714
Melbourne
Australia 3001

AUSTRALIAN HOLDEN RETAILERS

N.S.W. Metropolitan

ARNCLIFFE
Suttons Motors Arncliffe P/L
93 Princes Highway
P: (02) 9335 9000 FAX: (02) 9335 9006

ASHFIELD
Muirs Holden
252 Parramatta Road
P: (02) 9798 8888 Fax: (02) 9799 7010

BALGOWLAH
Peninsula Holden Balgowlah
164 Condamine Street
P: (02) 9949 1888 FAX (02) 9949 7237

BANKSTOWN
Peninsula Holden Bankstown
466 Chapel Road
P: (02) 9790 1234 Fax: (02) 9790 0033

BLACKTOWN
Heartland Holden
120~128 Sunnyholt Road
P: (02) 9622 7333 Fax: (02) 9671 7394

CAMDEN
Camden Holden
33 Edward Street
P: (02) 4655 5000 Fax: (02) 4655 5001

CAMPBELLTOWN
Paul Wakeling Holden
Cnr Blaxland & Mill Roads
P: (02) 4628 1444 Fax: (02) 4628 3262

CASTLE HILL
Heartland Holden
Cnr Victoria Ave/Windsor Rd
P: (02) 9894 6666 Fax: (02) 9894 5600

CHULLORA
Suttons Motors (Chullora) P/L
Cnr Hume Hwy/Waterloo Rd
P: (02) 9642 0233 Fax: (02) 9642 7798

DEE WHY
Peninsula Holden Dee Why
Cnr May & Mooramba Roads
P: (02) 9982 1311 Fax: (02) 9982 3755

EAST SYDNEY
Suttons City Holden
137-157 Bourke Street
P: (02) 9357 4222 Fax: (02) 9358 5542

FAULCONBRIDGE, BLUE MOUNTAINS
Blue Mountains Holden
435~437 Great Western Hwy
P: (02) 4751 1911 Fax: (02) 4751 2481

GORDON
Sundell Holden
836 Pacific Highway
P: (02) 9498 7766 Fax: (02) 9498 2906

HOMEBUSH
Suttons Motors Homebush P/L
112 Parramatta Road
P: (02) 9746 4500 Fax: (02) 9746 7206

KATOOMBA, BLUE MOUNTAINS
Blue Mountains Holden
136 Bathurst Road
P: (02) 4782 2066 Fax: (02) 4782 5546

LAKEMBA
United Holden Lakemba
817 Canterbury Road
P: (02) 9740 5555 Fax: (02) 9740 5907

LANSVALE
Lansvale Holden
266~284 Hume Highway
P: (02) 9728 7333 Fax: (02) 9726 1085

LIVERPOOL
McGrath Holden
411~419 Hume Highway
P: (02) 9821 5000 Fax: (02) 9821 1993

PARRAMATTA
Heartland Holden
65 Church Street
P: (02) 9204 6666 Fax: (02) 9635 6346

PENNANT HILLS
Barry Smith Holden
343~355 Pennant Hills Road
P: (02) 9483 3333 Fax: (02) 9484 7475

PENRITH
Heartland Holden
Cnr Henry St & Evan Street
P: (02) 4732 1966 Fax: (02) 4721 5896

ROCKDALE
United Holden Rockdale
571 Princes Hwy
P: (02) 9567 0321 Fax: (02) 9597 7395

ROSEBERY
Suttons City Holden
Link Road
P: (02) 9931 3000 Fax: (02) 9931 3001

RYDE
Hunter Holden
603~619 Victoria Road
P: (02) 9808 9123 Fax: (02) 9809 6592

ST LEONARDS
Hunter Holden
4 Herbert Street
P: (02) 9906 4044 Fax: (02) 9439 4635

ST. MARY'S
Heartland Holden
Cnr Glossop & Harris Streets
P: (02) 9673 2111 Fax: (02) 9673 4932

AUSTRALIAN HOLDEN RETAILERS CONT.

SUTHERLAND
McGrath Holden Sutherland
499~505 Princes Highway
P: (02) 9545 4811 Fax: (02) 9545 2533

WAITARA
Suttons Motors Waitara P/L
90 Pacific Hwy
P: (02) 9487 2222 Fax: (02) 9489 0009

WINDSOR
Hawkesbury Valley Holden
18 Macquarie Street
P: (02) 4577 4077 Fax: (02) 4577 2592

N.S.W. Country

ARMIDALE
Graham Betts Holden
103 Rusden Street
P: (02) 6772 9444 Fax: (02) 6772 5836

BALLINA
Quayside Motors
Pacific Highway
P: (02) 6686 5111 Fax: (02) 6686 8574

BATEMANS BAY
Surfair Holden
30-32 Orient Street
P: (02) 4472 5111

BATHURST
Bathurst Holden
Mitchell Highway
P: (02) 6331 2077 Fax: (02) 6331 9177

BEGA
Bega Valley Holden
Cnr Upper and Gibbs Sts
P: (02) 6492 2333 Fax: (02) 6492 3105

BLAYNEY
Blayney Holden
98 Adelaide Street
P: (02) 6368 2745 Fax: (02) 6368 3257

BOMBALA
Delcott Engineering Pty Ltd
Maybe Street
P: (02) 6458 3341 Fax: (02) 6458 3940

BOOROWA
Boowowa Auto Repairs
40 Marsden Street
P: (02) 6385 3305

BROKEN HILL
Donlee Motors Pty Ltd
Cnr Galena & Rakow Streets
P: (08) 8087 2463 Fax: (08) 8087 7971

CARDIFF
Kelly Holden
35~39 MacQuarie Road
P: (02) 4954 7733 Fax: (02) 4954 9407

CASINO
Casino Holden
142 Barker Street
P: (02) 6662 2822 Fax: (02) 6662 2101

CESSNOCK
Geoff Boyd Holden
240~246 Maitland Road
P: (02) 4990 0555 Fax: (02) 4990 0575

COBAR
Cobar Holden
Cnr Lewis St & Louth Road
P: (02) 6836 4005 Fax: (02) 6836 3409

COFF'S HARBOUR
Geoff King Holden
Cnr Pacific Hwy and Thompson Road
P: (02) 6652 2288 Fax: (02) 6652 5360

COOMA
High Country Holden
66~70 Sharp Street
P: (02) 6452 1077 Fax: (02) 6452 1142

COONABARABRAN
Coonabarabran Holden
24 Charles Street
P: (02) 6842 1499 Fax: (02) 6842 2473

COONAMBLE
Moody's Motors
37 Aberford Street
P: (02) 6822 1161 Fax: (02) 6822 1624

COOTAMUNDRA
Jenkins Garage
111 Wallendoon Street
P: (02) 6942 2522 Fax: (02) 6942 1493

COWRA
Waugoola Motors Pty Ltd
Kendal Street
P: (02) 6342 1800 Fax: (02) 6342 3614

CROOKWELL
Crookwell Autos
114 Goulburn Street
P: (02) 4832 1433 Fax: (02) 4832 2157

DENILIQUIN
Burchfield Bros & Co
112~114 End Street
P: (03) 5881 2133 Fax: (03) 5881 3322

DORRIGO
Phil Noble Motors
46~48 Hickory Street
P: (02) 6657 2017 Fax: (02) 6657 2217

DUBBO
Golden West Holden
54 Bourke Street
P: (02) 6882 1011 Fax: (02) 6882 7102

DUNGOG
Turner Holden
248 Dowling Street
P: (02) 4992 1816 Fax: (02) 4992 1833

AUSTRALIAN HOLDEN RETAILERS cont.

EDEN
Ron Doyle
113 Princes Highway
P: (02) 6496 1420 Fax: (02) 6496 1467

FINLEY
Riverina Holden
104 Murray Street
P: (03) 5883 1211 Fax: (03) 5883 1638

FORBES
Frank Spice Holden
20~22 Dowling Street
P: (02) 6851 1755 Fax: (02) 6852 2825

GATESHEAD
Brian Kelly Holden
39 Pacific Highway
P: (02) 4920 7000 Fax: (02) 4920 8008

GILGANDRA
Gilgandra Holden
3 Morris Street
P: (02) 6847 1888 Fax: (02) 6847 1277

GLEN INNES
Glen Severn Holden
167 Grey Street
P: (02) 6732 2888 Fax: (02) 6732 3394

GOSFORD
Noble Holden
Pacific Highway
P: (02) 4325 0511 Fax: (02) 4324 1043

GOULBURN
Geissler Motors
279~298 Auburn Street
P: (02) 4821 3744 Fax: (02) 4821 9798

GRAFTON
Ken Casson Holden
37~39 Turf Street
P: (02) 6642 6666 Fax: (02) 6642 6737

GRENFELL
Peter Mellon Motors
40 Alexandra Street
P: (02) 6343 1522 Fax: (02) 6343 1347

GRIFFITH
Leo Franco Holden
164~166 Yambil Street
P: (02) 6964 2977 Fax: (02) 6962 4916

GUNNEDAH
Namoi Valley Motors
48 Barber Street
P: (02) 6742 0211 Fax: (02) 6742 3842

HARDEN
Ginty & O'Leary
Cnr Station & Albury Streets
P: (02) 6386 2320 Fax: (02) 6386 2722

HAY
Royce Curtis Motors
168 Lachlan Street
P: (02) 6993 1503 Fax: (02) 6993 2212

HOLBROOK
Lieschke Motors Pty Ltd
78 Albury Street
P: (02) 6036 2244 Fax: (02) 6036 2831

INVERELL
Gaukroger Sales Pty Ltd
Vivian Street
P: (02) 6722 2722 Fax: (02) 6722 1804

JERILDERIE
Jerilderie Motors
Jerilderie Street
P: (03) 5886 1302 Fax: (03) 5886 1734

KANDOS
Chrisfield Holden
11 Angus Street
P: (02) 6379 4204 Fax: (02) 6379 4606

KEMPSEY
Thoroughgood Holden
118~132 Belgrave Street
P: (02) 6562 1381 Fax: (02) 6562 1383

KIAMA
Glen Fulton Holden
35~41 Collins Street
P: (02) 4232 1888 Fax: (02) 4232 3062

KYOGLE
O & H Holden
128~134 Summerland Way
P: (02) 6632 1711 Fax: (02) 6632 2552

LEETON
John Ryan Holden
47~51 Pine Avenue
P: (02) 6953 2466 Fax: (02) 6953 6725

LISMORE
John Chant Motors Pty Ltd
Carrington Street
P: (02) 6621 2601 Fax: (02) 6622 4659

LITHGOW
Lithgow City Holden
255 Main Street
P: (02) 6351 4555 Fax: (02) 6351 4653

MACKSVILLE
Eastland Holden
18~22 Cooper Street
P: (02) 6568 1711 Fax: (02) 6568 1816

MACLEAN
O'Halloran Motors
175 River Street
P: (02) 6645 2844 Fax: (02) 6645 4003

MAITLAND
Heritage Holden
Cnr New England Hwy & Bungaree St
P: (02) 4932 0779 Fax: (02) 4932 0473

MOREE
Keith Haddad Holden
Cnr Boston & Heber Streets
P: (02) 6752 1855 Fax: (02) 6752 1298

AUSTRALIAN HOLDEN RETAILERS cont.

MORUYA
Surfair Holden
88 Vulcan Street
P: (02) 4474 2555 Fax: (02) 4474 2129

MOSS VALE
Moss Vale Holden
160~162 Argyle Street
P: (02) 4868 1055 Fax: (02) 4868 3330

MULLUMBIMBY
Tony Carsburg Holden
2 Argyle Street
P: (02) 6684 2066 Fax: (02) 6684 4593

MUDGEE
Ross Granata Motors
32 Sydney Road
P: (02) 6372 1766 Fax: (02) 6372 3735

MURWILLUMBAH
Tweed Motors
29 Prospero Street
P: (02) 6672 4444 Fax: (02) 6672 5811

MUSWELLBROOK
Upper Hunter Motors Pty Ltd
116 Bridge Street
P: (02) 6543 2577 Fax: (02) 6543 2565

NARRABRI
Allan Cooper Holden
181 Maitland Street
P: (02) 6792 3488 Fax: (02) 6792 4750

NEWCASTLE
Newcastle City Holden
King Street (Cnr Stewart Ave)
P: (02) 4961 5301 Fax: (02) 4961 6485

NOWRA
Glendon Motors Holden
301~313 Princes Highway
P: (02) 4421 0144 Fax: (02) 4423 0854

NYNGAN
New Bridge Service Centre
36 Numagee Street
P: (02) 6832 1761 Fax: (02) 6832 2760

ORANGE
Canobolas Holden
Cnr Summer St & Endsleigh Ave
P: (02) 6362 0155 Fax: (02) 6361 3702

PARKES
Broderick Motors Holden
Cnr Mitchell & Clarinda Sts
P: (02) 6862 2266 Fax: (02) 6862 1406

PEAK HILL
S. Leary & Sons Pty Ltd
Mingelo Street
P: (02) 6869 1459 Fax: (02) 6869 1999

PORT MACQUARIE
Bob Todd Motors Pty Ltd
115 Gordon Street
P: (02) 6583 1100 Fax: (02) 6584 9508

QUIRINDI
Browning Motors
82 Henry Street
P: (02) 6746 1666 Fax: (02) 6746 1422

SCONE
Upper Hunter Motors (Scone)
100 Liverpool Street
P: (02) 6545 1355

SINGLETON
Lancaster Holden
80 John Street
P: (02) 6578 8700 Fax: (02) 6578 8733

TAMWORTH
Kensell's Holden
Cnr Bourke St & Kable Ave
P: (02) 6766 6699 Fax: (02) 6766 7339

TAREE
Cullen Holden
21~25 Victoria Street
P: (02) 6552 2222 Fax: (02) 6552 1269

TEMORA
Rod Lovering Holden
607-608 Stockinbingal Road
P: (02) 6977 2255 Fax: (02) 6977 2033

TENTERFIELD
Sexton & Green (Sales & Service) P/L
148 Rouse Street
P: (02) 6736 1855 Fax: (02) 6736 1946

TUMUT
Harry Kell & Sons Pty. Ltd
Cnr. Merrivale & Russell Streets
P: (02) 6947 2293 Fax: (02) 6947 3763

TUNCURRY
Great Lakes Holden
144 Manning Street
P: (02) 6555 6644 Fax: (02) 6555 7433

TWEED HEADS
Tweed Motors
75~79 Pacific Highway
P: (07) 5536 3411 Fax: (07) 5536 4490

ULLADULLA
Alan May Holden
169 Princes Highway
P: (02) 4455 1166 Fax: (02) 4455 4122

WAGGA WAGGA
Wagga Motors Pty Ltd
32 Dobney Avenue
P: (02) 6925 3411 Fax: (02) 6925 3283

WALCHA
Bowdens Holden Walcha
18 Derby Street
P: (02) 6777 2226 Fax: (02) 6777 2319

WALGETT
Walgett Garage Pty Ltd
81 Wee Waa Street
P: (02) 6828 1088 Fax: (02) 6828 1198

AUSTRALIAN HOLDEN RETAILERS cont.

WALLA WALLA
D.E. Lieschke & Son Pty Ltd
63 Commercial Road
P: (02) 6029 2202 Fax: (02) 6029 2134

WARIALDA
Roger Moore
Hope Street
P: (02) 6729 1570 Fax: (02) 6729 1104

WARILLA
Wilson's Holden
29 Shellharbour Road
P: (02) 4295 1223 Fax: (02) 4296 1007

WARREN
Fuller Bros
Dubbo Street
P: (02) 6847 4978 Fax: (02) 6847 4477

WELLINGTON
Gersbach's Garage Pty Ltd
92 Lee Street
P: (02) 6845 2733 Fax: (02) 6845 3236

WEST WYALONG
West Wyalong Motors
183 Main Street
P: (02) 6972 2388 Fax: (02) 6972 2570

WOLLONGONG
Dwyers City Holden
31~33 Crown Street
P: (02) 4229 9222 Fax: (02) 4229 5105

WYONG
Barry Robertson Holden
172 Pacific Highway
P: (02) 4351 2588 Fax: (02) 4352 1759

YOUNG
Harden & Geelan Holden
30 Boorowa Street
P: (02) 6382 1155 Fax: (02) 6382 4673

A.C.T.

BELCONNEN
Gerald Slaven Holden
2 Josephson Street
P: (02) 6251 5111 Fax: (02) 6253 1298

BRADDON
Rolfe Holden
44 Mort Street
P: (02) 6248 7888 Fax: (02) 6257 1328

PHILLIP
Commonwealth Motors Pty Ltd
158 Melrose Drive
P: (02) 6282 3522 Fax: (02) 6282 5214

Tas.

BURNIE
Motors Burnie
Marine Terrace
P: (03) 6431 1122 Fax: (03) 6431 3146

DEVONPORT
Motors Devonport
Victoria Parade
P: (03) 6424 4033 Fax: (03) 6424 5249

HOBART
Motors Pty Ltd
179 MacQuarie Street
P: (03) 6220 1171 Fax: (03) 6223 8117

LAUNCESTON
Motors Launceston
93~95 Elizabeth Street
P: (03) 6332 9101 Fax: (03) 6334 5245

Vic. Metropolitan

BACCHUS MARCH
Alan Mance Holden Bacchus March
4 Graham Street
P: (03) 5367 4300 Fax: (03) 53674299

BERWICK
Barry Bourke Holden
755 Princes Highway
P: (03) 9707 2222 Fax: (03) 9707 3091

BUNDOORA
Watson Holden
413 Grimshaw Street
P: (03) 9467 4677 Fax: (03) 9467 7661

BURWOOD
Penfold Holden
142 Burwood Highway
P: (03) 9268 1333 Fax: (03) 9268 1335

CHELSEA
Harrison Holden
370 Nepean Highway
P: (03) 9772 2233 Fax: (03) 9772 2190

CHELTENHAM
Booran Holden
1212 Nepean Highway
P: (03) 9584 3333 Fax: (03) 9584 4285

DANDENONG
Booran Holden
17 Lonsdale Street
P: (03) 9794 5455 Fax: (03) 9792 4871

DONCASTER
Doncaster Holden
636~640 Doncaster Road
P: (03) 9840 0188 Fax: (03) 9840 2587

ELSTERNWICK
Reg Hunt Holden
67 Nepean Highway
P: (03) 9528 2222 Fax: (03) 8545 7644

AUSTRALIAN HOLDEN RETAILERS cont.

ESSENDON
Preston Motors (Essendon) P/L
205~211 Keilor Road
P: (03) 9374 2888 Fax: (03) 9379 6754

FAWKNER
Mantello Holden
1263 Sydney Road
P: (03) 9359 1333 Fax: (03) 9359 9334

FERNTREE GULLY
Ferntree Gully Holden
980 Burwood Highway
P: (03) 9753 1222 Fax: (03) 9758 3435

FOOTSCRAY
Alan Mance Holden
435 Barkly Street
P: (03) 9396 8000 Fax: (03) 9396 8001

FRANKSTON
Bay City Holden
140 Dandenong Road
P: (03) 9784 4444 Fax: (03) 9784 4419

GEELONG
R & B Smith Holden
510 Moorabool Street
P: (03) 5222 2888 Fax: (03) 5221 3114

GEELONG
Winter & Taylor Holden
23 Cavendish Street
P: (03) 5222 1811 Fax: (03) 5221 1873

GLENHUNTLY
Booran Holden
1234 Glenhuntly Road
P: (03) 9571 9313 Fax: (03) 9571 8374

GLEN WAVERLEY
Geoff Brady Holden
565~577 Springvale Road
P: (03) 9550 5888 Fax: (03) 9550 5855

HASTINGS
John Collins Holden
2041 Frankston-Flinders Road
P: (03) 5979 4433 Fax: (03) 5975 4720

LILYDALE
Heritage Holden
344 Main Street
P: (03) 9735 5566 Fax: (03) 9735 1040

MELTON
Alan Mance Holden
1 Holland Drive
(03) 9746 9666 Fax: (03) 9746 9555

MORNINGTON
John Collins Holden
976 Nepean Highway
P: (03) 5975 4433 Fax: (03) 5975 4720

OAKLEIGH
Garry & Warren Smith
1575 Dandenong Road
P: (03) 9568 6333 Fax: (03) 9568 5691

PRESTON
Ralph D'Silva Holden
573~603 High Street
P: (03) 9471 0500 Fax: (03) 9478 4210

RINGWOOD
Patterson Cheney Holden
45~57 Maroondah Highway
P: (03) 9262 6666 Fax: (03) 9870 1113

SOUTH MELBOURNE
South City Holden
380 City Road
P: (03) 9627 3333 Fax: (03) 9682 6888

SOUTH YARRA
Penfold Holden
681 Chapel Street
P: (03) 9827 2272 Fax: (03) 9826 5328

SUNBURY
Sunbury Holden
93~95 Horne Street
P: (03) 9740 3000 Fax: (03) 9740 4777

SUNSHINE
Kevin Dennis Holden
272 Ballarat Road
P: (03) 9292 9292 Fax: (03) 9292 9200

WERRIBEE
Ballan Holden
56 Princes Highway
P: (03) 9741 2222 Fax: (03) 9742 3797

WEST MELBOURNE
Reg Hunt Holden
577 King Street
P: (03) 9329 6611 Fax: (03) 9329 1550

Vic. Country

ALEXANDRA
Alexandra Total Automotive Services
120 Grant Street
P: (03) 5772 1588 Fax: (03) 5772 1978

ARARAT
David Reid Motors
High Street
P: (03) 5352 4100 Fax: (03) 5352 4388

BAIRNSDALE
The Big Garage
628 Princes Highway
P: (03) 5152 4131 Fax: (03) 5152 5313

BALLARAT
Peter Amor Motors
211 Gillies Street
P: (03) 5339 9333 Fax: (03) 5339 9202

BENALLA
Arnott's Motors
88~90 Bridge Street
P: (03) 5762 2500 Fax: (03) 5762 1586

AUSTRALIAN HOLDEN RETAILERS cont.

BENDIGO
Ron Poyser Holden
Cnr High & Myrtle Streets
P: (03) 5442 3999 Fax: (03) 5442 7766

CAMPERDOWN
Camperdown Auto Parts
96 Manifold Street
P: (03) 5593 1983 Fax: (03) 5593 1979

CASTERTON
Coxons Holden
139 Henty Street
P: (03) 5581 1166 Fax: (03) 5581 2116

CHARLTON
Walsh Motors, Charlton
70~74 High Street
P: (03) 5491 1444 Fax: (03) 5491 1984

COBRAM
Neville Mustica Motors
Murray Valley Hwy
P: (03) 5872 1666 Fax: (03) 5872 1920

COHUNA
Hare Motors Holden
105~107 King George Street
P: (03) 5456 4488 Fax: (03) 5456 4448

COLAC
Parker Bros. Motor Co
224 Murray Street
P: (03) 5231 5533 Fax: (03) 5231 3853

DAYLESFORD
K.R. Little
Vincent Street
P: (03) 5348 2248

DONALD
O.A. Shilton & Sons Pty Ltd
5 Woods Street
P: (03) 5497 1400 Fax: (03) 5497 1505

ECHUCA
Echuca Motors
1 Nothern Highway
P: (03) 5482 1522 Fax: (03) 5480 6215

EUROA
Parker Bros Auto Co. Euroa
37~41 Clifton Street
P:(03) 5795 2702 Fax: (03) 5795 1288

HAMILTON
Bloods of Hamilton
210 Gray Street
P: (03) 5572 1433 Fax: (03) 5571 1182

HOPETOUN
Hopetoun Motors
78 Lascelles Street
P: (03) 5083 3143 Fax: (03) 5083 3290

HORSHAM
Ivan Morrow Motors Pty Ltd
22 O'Callaghans Parade
P: (03) 5382 0185 Fax: (03) 5382 0459

KANIVA
Kaniva Motors
82 Commercial Street
P: (03) 5392 2300 Fax: (03) 5392 2589

KOO WEE RUP
G & J Light Mechanical Repairs P/L
Station Road
P: (03) 5997 1325

KORUMBURRA
Peter Dunlevie Holden
42 Commercial Street
P: (03) 5655 1288 Fax: (03) 5655 1839

KYABRAM
D'Alberto Holden
60 McEwen Road
P: (03) 5852 1366 Fax: (03) 5852 1337

KYNETON
Mollison Motors Pty Ltd
167 Mollison Street
P: (03) 5422 3377 Fax: (03) 5422 3501

LEONGATHA
Gleeson Holden
37~43 Bair Street
P: (03) 5662 2361 Fax: (03) 5655 1839

MANSFIELD
Martin's Garage
52~54 Chenery Street
P: (03) 5775 2610 Fax: (03) 5775 1179

MARYBOROUGH
Graham Jacka Holden
35 Nolan Street
P: (03) 5461 1011 Fax: (03) 5461 4789

MILDURA
Stuart & Harrison (Sales) Pty Ltd
24~40A Deakin Avenue
P: (03) 5023 0051 Fax: (03) 5021 3076

MORTLAKE
W. Christian (Mortlake) Pty. Ltd.
107 Dunlop Street
P: (03) 5599 2301 Fax: (03) 5599 2567

MURRAYVILLE
Peers Motors
McKenzie Street
P: (03) 5095 2081 Fax: (03) 5095 2054

NHILL
Ivan Morrow Motors Pty Ltd
71~73 Nelson Street
P: (03) 5391 1333 Fax: (03) 5391 1228

ORBOST
Merlin Motors
Stanley Street
P: (03) 5154 1909

PORTLAND
Reynolds of Portland
Henty Highway
P: (03) 5523 1688 Fax: (03) 5523 6299

AUSTRALIAN HOLDEN RETAILERS cont.

QUAMBATOOK
Quambatook Auto Services
32 Gutherie Street
P: (03) 5457 1237 Fax: (03) 5457 1420

ROCHESTER
Bruce Hocking Motors Pty Ltd
85 Lowry Street
P: (03) 5484 1455 Fax: (03) 5484 1140

RUTHERGLEN
Jasper Bros Pty Ltd
62 Main Street
P: (02) 6032 8404 Fax: (02) 6032 8156

SALE
Sam Gould Holden
273 York Street
P: (03) 5144 3944 Fax: (03) 5144 6289

SEYMOUR
Neil Beer Holden
49 Emily Street
P: (03) 5792 2777 Fax: (03) 5792 4111

SHEPPARTON
Parker Bros. Auto Co.
Benalla Road
P: (03) 5822 2666 Fax: (03) 5831 2507

STAWELL
Howden Holden
72~74 Longfield Street
P: (03) 5358 1888 Fax: (03) 5358 3954

SWAN HILL
Swan Hill Holden
94~102 Campbell Street
P: (03) 5033 1800 Fax: (03) 5032 2468

TALLANGATTA
Crispin Motors
21 Towong Street
P: (02) 6071 2414 Fax: (02) 6071 2655

TERANG
W. Christian (Terang) Pty Ltd
6a Baynes Street
P: (03) 5592 1588 Fax: (03) 5592 1481

TIMBOON
Timboon Motors
56 Bailey Street
P: (03) 5598 3007 Fax: (03) 5598 3362

TRARALGON
Colin Watson Holden
Princes Highway
P: (03) 5174 8000 Fax: (03) 5175 0050

UNDERBOOL
A.J. Gloster & Sons
Cotter Street
P: (03) 5094 6291 Fax: (03) 5094 6297

WANGARATTA
Alan Capp (New Cars) Pty Ltd
29 Tone Road
P: (03) 5721 2133 Fax: (03) 5721 4626

WARRACKNABEAL
Amor Motors Aubrey Truck Sales
33 Woolcock Street
P: (03) 5394 1055 Fax: (03) 5398 1904

WARRAGUL
Barry Bourke Warragul
167 Queen Street
P: (03) 5622 0000 Fax: (03) 5622 0333

WARRNAMBOOL
Callaghan Motors Pty Ltd
133~137 Fairy Street
P: (03) 5562 3711 Fax: (03) 5562 7415

WODONGA
McRae White Motors
182 Melbourne Road
P: (02) 6056 2333 Fax: (02) 6024 7899

WONTHAGGI
Wonthaggi Holden
2 Murray Street
P: (03) 5672 1122 Fax: (03) 5672 4141

YARRAM
John Palmer Holden
150 Commercial Road
P: (03) 5182 5122 Fax: (03) 5182 6166

YARRAWONGA
Pigdons
155 Belmore Street
P: (03) 5743 1577 Fax: (03) 5744 1788

Qld. Metropolitan

ASPLEY
Zupps Aspley Pty Ltd
1454 Gympie Road
P: (07) 3246 8000 Fax: (07) 3246 8092

BROWNS PLAINS
Zupps Hillcrest
Cnr Anzac Ave & Corporate Place, Hillcrest,
P: (07) 3802 4000 Fax: (07) 3802 4099

CAPALABA
Oldfield Holden
103 Redland Bay Road
P: (07) 3245 2200 Fax: (07) 3245 2221

INDOOROOPILLY
Westpoint Holden
440 Moggill Road
P: (07) 3878 0440 Fax: (07) 3878 1340

IPSWICH
Ross Llewellyn Holden
246 Brisbane Road
P: (07) 3282 2922 Fax: (07) 3282 6359

LAIDLEY
Buhse's Garage
5 Spicer Street
P: (07) 5465 1406 Fax: (07) 5465 1706

AUSTRALIAN HOLDEN RETAILERS cont.

MOOROOKA
John Sivyer Holden
1060 Ipswich Road
P: (07) 3892 3344 Fax: (07) 3848 8866

MT. GRAVATT
Zupps Motors Pty Ltd
1310 Logan Road
P: (07) 3877 0000 Fax: (07) 3877 0063

NEWSTEAD
Eagers Holden
95 Breakfast Creek Road
P: (07) 3364 1199 Fax: (07) 3364 1060

PETRIE
Village Motors
1059 Gympie Road
P: (07) 3285 2244 Fax: (07) 3285 1975

REDCLIFFE
Village Holden
425 Elizabeth Avenue
P: (07) 3883 0900 Fax: (07) 3883 2711

SPRINGWOOD
Motorama Holden
3455 Pacific Highway
P: (07) 3804 4888 Fax: (07) 3208 7018

WINDSOR
Eagers Holden
143 Newmarket Road
P: (07) 3357 6711 Fax: (07) 3357 5403

WOOLLOONGABBA
Armstrong Holden
73 Ipswich Road
P: (07) 3891 5522 Fax: (07) 3891 5146

WYNNUM
Doug Barton Holden
200 Tingal Road
P: (07) 3396 7777 Fax: (07) 3393 3593

Qld. Country

ATHERTON
Redding Motors Pty Ltd
2 Cook Street
P: (07) 4091 1344 Fax: (07) 4091 2039

AYR
Honeycombes Sales & Service
213~217 Queen Street
P: (07) 4783 2344 Fax: (07) 4783 2079

BEAUDESERT
Zupps Beaudesert
57 Brisbane Street
P: (07) 5541 2000 Fax: (07) 5541 3368

BILOELA
Andersons Auto City
Dawson Highway
P: (07) 4992 2833 Fax: (07) 4992 3066

BOWEN
McDermott Holden
98 Herbert Street
P: (07) 4786 1430 Fax: (07) 4786 2903

BUNDABERG
Ross Gray Holden
Takalvan Street
P: (07) 4150 1333 Fax: (07) 4150 1318

CABOOLTURE
Beecham Holden
Bribie Island Road
P: (07) 5495 1477 Fax: (07) 5495 2839

CAIRNS
Ireland Holden
227~233 Mulgrave Road
P: (07) 4052 3666 Fax: (07) 4052 3606

CALOUNDRA
Caloundra City Holden
45 Caloundra Road
P: (07) 5491 5522 Fax: (07) 5491 8016

CHARTERS TOWERS
Peters Holden
57 Mosman Street
P: (07) 4787 1177 Fax: (07) 4787 4858

CHARLEVILLE
Alan Dobbin Holden
129 Alfred Street
P: (07) 4654 1737 Fax: (07) 4654 3254

CHINCHILLA
Ainsworth Motors & Machinery Pty Ltd
55 Chinchilla Street
P: (07) 4662 7286 Fax: (07) 4662 7197

CROWS NEST
Dennis Nissen Motors
14 William Street
P: (07) 4698 1300 Fax: (07) 4698 1495

DALBY
Johnson’s Holden
36 Drayton Street
P: (07) 4662 2422 Fax: (07) 4662 4311

EMERALD
Emerald Holden
Hospital Road
P: (07) 4983 9888 Fax: (07) 4983 9889

GATTON
Gatton Auto Centre
67 Railway Street
P: (07) 5462 1633 Fax: (07) 5462 1980

GLADSTONE
Andersons Auto City
56 Yarroon Street
P: (07) 4972 1177 Fax: (07) 4972 9141

AUSTRALIAN HOLDEN RETAILERS cont.

GOONDIWINDI
Carpro
Cnr Lagoon & West Streets
P: (07) 4671 2170 Fax: (07) 4671 2013

GYMPIE
Madills Holden
35 Mellor Street
P: (07) 5480 5500 Fax: (07) 5482 2672

HERVEY BAY
Whitaker Holden
96 Torquay Road
P: (07) 4128 1722

INGHAM
Devietti Holden
99 Lannercost Street
P: (07) 4776 1599 Fax: (07) 4776 3547

INNISFAIL
I.C. Taylor Pty Ltd
117 Edith Street
P: (07) 4061 1577 Fax: (07) 4061 3963

JULIA CREEK
Julia Creek Motors Pty Ltd
Burke Street
P: (07) 4746 7155 Fax: (07) 4746 7197

KILCOY
Hobart’s Garage
58 Mary Street
P: (07) 5497 1204 Fax: (07) 5497 1204

KINGAROY
John Dundas Pty Ltd
79 Kingaroy Street
P: (07) 4162 1722 Fax: (07) 4162 3756

LONGREACH
Longreach Motors
33 Swan Street
P: (07) 4658 1700 Fax: (07) 4658 1857

MACKAY
Pioneer Holden
Cnr Gordon & Wellington Streets
P: (07) 4969 4299 Fax: (07) 4969 4288

MAROOCHYDORE
Sunco Holden
Wises Road
P: (07) 5443 7644 Fax: (07) 5443 7645

MARYBOROUGH
Whitaker Holden
109~111 March Street
P: (07) 4122 2255 Fax: (07) 4122 6222

MOUNT ISA
Bruce Marles Motor City
Marian Street
P: (07) 4743 3044 Fax: (07) 4743 8466

MURGON
Clifton Motors
Macalister Street
P: (07) 4168 1066 Fax: (07) 4168 1947

NAMBOUR
Sunco
Bruce Highway
P: (07) 5451 2000 Fax: (07) 5451 2099

NANANGO
Nanango Motors Pty Ltd
102 Drayton Street
P: (07) 4163 1108 Fax: (07) 4163 1108

NOOSAVILLE
Madill's
Lot 1 Lionel Donovan Drive
P: (07) 5470 0700 Fax: (07) 5474 0073

PROSERPINE
Crossley Car Sales Whitsunday Pty Ltd
162~164 Main Street
P: (07) 4945 1822 Fax: (07) 4945 2022

ROBINA
Robina Holden
16 Brabham Circuit
P: (07) 5575 0500 Fax: (07) 5562 1072

ROCKHAMPTON
Lawrence’s
327 Richardson Road
P: (07) 4930 5111 Fax: (07) 4930 5112

ROMA
Maranoa Multi Agencies
Bowen Street
P: (07) 4622 2900 Fax: (07) 4622 1832

SOUTHPORT
Lockhart Holden
Cnr Nerang Road & Olsen Avenue
P: (07) 5597 2900 Fax: (07) 5597 2542

SPRINGSURE
Springsure Motors
Eclipse Street
P: (07) 4984 1177 Fax: (07) 4984 1361

ST. GEORGE
Halpin Motors
39~41 Grey Street
P: (07) 4625 5466 Fax: (07) 4625 5855

STANTHORPE
Central Motors
42 Maryland Street
P: (07) 4681 2200 Fax: (07) 4681 1479

TOOWOOMBA
Toowoomba Holden
Cnr James & Hume Streets
P: (07) 4690 0900 Fax: (07) 4690 0909

TOWNSVILLE
Tony Ireland Holden
87~91 Charters Towers Road
P: (07) 4726 7777 Fax: (07) 4721 1486

TULLY
Island Coast Holden
Bruce Highway
P: (07) 4068 1288 Fax: (07) 4068 2145

AUSTRALIAN HOLDEN RETAILERS cont.

WARWICK
Deighton Motors Pty Ltd
Grafton Street
P: (07) 4661 2266 Fax: (07) 4661 1275

N.T.

ALICE SPRINGS
Peter Kittle Holden
46 Stuart Highway
P: (08) 8952 5500 Fax: (08) 8953 0847

DARWIN
Kerry Holden
21~25 Stuart Highway
P: (08) 8980 8080 Fax: (08) 8980 8081

TENNANT CREEK
Kittles Holden
Paterson Street
P: (08) 8962 2251 Fax: (08) 8962 2527

S.A. Metropolitan

ADELAIDE
City Holden
223 Grenfell Street
P: (08) 8223 7666 Fax: (08) 8359 2588

ELIZABETH
Peter Page Holden
17 Elizabeth Way
P: (08) 8255 1288 Fax: (08) 8255 9260

HILLCREST
City Holden
327~329 Main North East Road
P: (08) 8261 5855 Fax: (08) 8369 0066

MALVERN
Claridge Holden
361~367 Unley Road
P: (08) 8272 1600 Fax: (08) 8373 0057

PORT ADELAIDE
Smiths of Port Adelaide
271 Commercial Road
P: (08) 8341 2255 Fax: (08) 8341 2233

PROSPECT
Metro Holden
84~88 Main North Road
P:(08) 8343 5000 Fax: (08) 8344 9670

REYNELLA
Southgate Holden
49~59 Main South Road
P: (08) 8381 9555 Fax: (08) 8381 6274

ROSE PARK
City Holden
14 Kensington Road
P: (08) 8334 4666 Fax: (08) 8334 4610

SOMERTON PARK
Hamilton Holden
278~288 Brighton Road
P: (08) 8296 4866 Fax: (08) 8358 3957

THEBARTON
Metro Holden
1 Port Road
P: (08) 8354 9555 Fax: (08) 8443 6855

VALLEY VIEW
Plaza Holden
817~839 North East Road
P: (08) 8263 4922 Fax: (08) 8265 5200

S.A. Country

BALAKLAVA
Balaklava Motors
4 Wallace Street
P: (08) 8862 1030 Fax: (08) 8862 2000

BERRI
Rosenthal Bros Pty Ltd
Vaughan Terrace
P: (08) 8582 3644 Fax: (08) 8582 3515

BORDERTOWN
Farmers Centre
South Terrace
P: (08) 8752 0266 Fax: (08) 8752 0233

CEDUNA
Beck Motors Pty Ltd
Poynton Street
P: (08) 8625 2616 Fax: (08) 8625 3201

CLARE
Mid North Motor Company
7 Old North Road
P: (08) 8842 2200 Fax: (08) 8842 2886

CLEVE
Pringles Ag. Plus
Rudall Road
P: (08) 8628 2150 Fax: (08) 8628 2537

CUMMINS
Trigg & Wedd
3 Umlauf Street
P: (08) 8676 2105 Fax: (08) 8676 2303

CRYSTAL BROOK
Crouch Rural Pty. Ltd
26 Brandis Street
P: (08) 8636 2257 Fax: (08) 8636 2088

GAWLER
Steinborner Holden
Cnr Murray & Bridge Sts
P: (08) 8522 4222 Fax: (08) 8522 4898

KADINA
J.H. Rosewarne Pty Ltd
Graves Street
P: (08) 8821 1111 Fax: (08) 8821 1686

AUSTRALIAN HOLDEN RETAILERS cont.

KEITH
Farmers Centre
McBain Street
P: (08) 8755 3222 Fax: (08) 8755 3211

KIMBA
R.J. Flavel Mechanical Repairs
30 High Street
P: (08) 8627 2555 Fax: (08) 8627 2044

KINGSTON
Lecornu's Service Garage
Agnes Street
P: (08) 8767 2424 Fax: (08) 8767 2533

LOXTON
Flight Motors Pty Ltd
Bookpurnong Terrace
P: (08) 8584 7277 Fax: (08) 8584 5937

MINLATON
Southway
9 Fifth Street
P: (08) 8853 2322 Fax: (08) 8853 2451

MENINGIE
Peter Hood Holden
Cnr Princes Highway & Coonalpyn Road
P: (08) 8575 1109 Fax: (08) 8575 1537

MT. BARKER
Gilbert Motors
57 Adelaide Road
P: (08) 8391 1500 Fax: (08) 8398 2124

MT. GAMBIER
O.G. Roberts & Co
Jubilee Highway West
P: (08) 8724 1111 Fax: (08) 8724 1100

MURRAY BRIDGE
Dutton Motors Pty Ltd
7 Adelaide Road
P: (08) 8532 1999 Fax: (08) 8531 0599

NARACOORTE
Kingcraig Motors Pty Ltd
158~164 Smith Street
P: (08) 8762 1555 Fax: (08) 8762 1806

PORT AUGUSTA
Augusta Motor Company Pty Ltd
38 Stirling Road
P: (08) 8641 0488 Fax: (08) 8642 4300

PORT LINCOLN
City Motors
King Street
P: (08) 8682 1100 Fax: (08) 8682 4734

PORT PIRIE
Spencer Holden
50 Ellen Street
P: (08) 8632 3888 Fax: (08) 8632 6405

RENMARK
Rosenthal Motors Pty Ltd
Ral Ral Avenue
P: (08) 8586 6626 Fax: (08) 8586 4040

STRATHALBYN
Gilbert Holden - Strathalbyn
High Street
P: (08) 8536 2066 Fax: (08) 8536 2672

TANUNDA
Hage & Co Pty Ltd
50 Murray Street
P: (08) 8563 2123 Fax: (08) 8563 3488

VICTOR HARBOR
Southern Motors Holden
5 Victoria Street
P: (08) 8552 1255 Fax: (08) 8552 2788

WAIKERIE
Riverside Holden
6 Crush Terrace
P: (08) 8541 2900 Fax: (08) 8541 3325

WHYALLA
McLeods Whyalla Motor Company
64 Essington Lewis Avenue
P: (08) 8645 7388 Fax: (08) 8645 5512

YANKALILLA
Martin Motors Pty Ltd
Main Street
P: (08) 8558 2052 Fax: (08) 8558 2911

YORKETOWN
Southway Holden
7 Minalaton Road
P: (08) 8852 1322 Fax: (08) 8852 1271

W.A. Metropolitan

CANNINGTON
Brian Gardner Holden
1308~1324 Albany Hwy
P: (08) 9356 9000 Fax: (08) 9458 9144

FREMANTLE
Shacks Holden
64 Queen Victoria Street
P: (08) 9432 9432 Fax: (08) 9432 9456

GOSNELLS
Gibbons Holden
2325 Albany Highway
P: (08) 9398 2211 Fax: (08) 9398 5683

MELVILLE
Melville Holden
532~540 Canning Highway
P: (08) 9333 5333 Fax: (08) 9333 5300

MIDLAND
Goldy Holden
161 Great Eastern Highway
P: (08) 9274 8000 Fax: (08) 9274 6042

MORLEY
Metro Motors Holden
212 Walter Road West
P: (08) 9449 3522 Fax: (08) 9449 3596

AUSTRALIAN HOLDEN RETAILERS cont.

OSBORNE PARK
North City Holden
Cnr Scarborough Beach Rd & Harborne St
P: (08) 9273 2222 Fax: (08) 9273 2220

PERTH
City Motors
505 Newcastle Street
P: (08) 9422 7777 Fax: (08) 9422 7630

ROCKINGHAM
Rockingham Holden
20 Smeaton Way
P: (08) 9550 9550 Fax: (08) 9550 9599

VICTORIA PARK
Youngs Holden
529 Albany Highway
P: (08) 9449 9449 Fax: (08) 9449 9494

WANNEROO
Phoenix Holden
5 Berriman Drive
P: (08) 9409 9200 Fax: (08) 9309 2140

W.A. Country

ALBANY
Mark Loveridge Holden
92~98 Earl Street
P: (08) 9842 8000 Fax: (08) 9841 8623

BRIDGETOWN
Kordics Bridgetown
183 Hampton Street
P: (08) 9761 1377 Fax: (08) 9761 2151

BROOKTON
Coote Motors
1 Robinson Road
P: (08) 9642 1108 Fax: (08) 9642 1003

BROOME
Norwest Holden
7 McPherson Street
P: (08) 9192 1277 Fax: (08) 9192 2230

BUNBURY
Bunbury Holden
3 Sandridge Road
P: (08) 9791 3899 Fax: (08) 9791 2990

BUSSELTON
Fennessy's
4~8 Bussel Hwy
P: (08) 9752 1577 Fax: (08) 9752 4080

CARNAMAH
T & H Walton Stores Pty Ltd
Robertson Street
P: (08) 9951 1130 Fax: (08) 9951 1082

CARNARVON
North West Autos
229 Robinson Street
P: (08) 9941 1159 Fax: (08) 9941 1363

COLLIE
Station Motors
84 Throssell Street
P: (08) 9734 1855 Fax: (08) 9734 1913

ESPERANCE
Dempster Holden
Norseman Road
P: (08) 9071 1155 Fax: (08) 9071 3799

GERALDTON
Young Motors
34 Cathedral Avenue
P: (08) 9921 1088 Fax: (08) 9964 1157

GNOWANGERUP
Umtali Nominees Pty Ltd
10 Youngenup Road
P: (08) 9827 1207 Fax: (08) 9827 1444

HARVEY
Stockman Holden
111 Uduc Road
P: (08) 9729 3333 Fax: (08) 9729 3221

KALGOORLIE
Golden City Holden
114 Boulder Road
P: (08) 9021 1699 Fax: (08) 9021 5737

KARRATHA
Moxham Motors
Lot 4551 Balmoral Road
P: (08) 9144 1225 Fax: (08) 9144 1258

KATANNING
Edwards Holden
159 Clive Street
P: (08) 9821 2388 Fax: (08) 9821 2429

KELLERBERRIN
Dowding Motors
1 Mitchell Street
P: (08) 9045 4141 Fax: (08) 9045 4466

KUNUNURRA
Elgee Holden
231 Bloodwood Drive
P: (08) 9168 2236 Fax: (08) 9169 1124

MANDURAH
Mandurah Holden
53 Pinjarra Rd
P: (08) 9535 8777 Fax: (08) 9535 8822

MANJIMUP
Manjimup Automotive Services
Pritchard Street
P: (08) 9771 1388 Fax: (08) 9777 1214

MOORA
Frank Lewis Holden
92 Gardiner Street
P: (08) 9651 1408 Fax: (08) 9651 1724

AUSTRALIAN HOLDEN RETAILERS cont.

NAREMBEEN
Aquip Machinery
20 Churchill Avenue
P: (08) 9064 7214 Fax: (08) 9064 7065

NORTHAM
Withnell Motors
58 Fitzgerald Street
P: (08) 9622 1188 Fax: (08) 9622 3664

PORT HEDLAND
Moxham Motors
15 Anderson Street
P:(08) 9173 3660 Fax: (08) 9144 1258

NEW ZEALAND HOLDEN RETAILERS

Auckland Metropolitan

HENDERSON
West City Holden
435 Great North Road
P: (09) 836 0097 Fax: (09) 837 5291

MANUKAU
Davie Motors Limited
58 Cavendish Drive
P: (09) 262 1012 Fax: (09) 262 1011

NEWMARKET
Schofield & Co. Limited
50 Great South Road
P: (09) 520 6369 Fax: (09) 524 1500

PANMURE
Moyes Motor Group Limited
510 Ellerslie/Panmure Highway
P: (09) 527 1200 Fax: (09) 527 8314

TAKAPUNA
Giltrap Holden
Wairau Road
P: (09) 444 8114 Fax: (09) 444 8008

……………………………………………..

ALEXANDRA
Currie Motors
65 Centennial Avenue
P: (03) 448 6989 Fax: (03) 448 9384

AMBERLEY
Arthur Burke Limited
Markham Street
P: (03) 314 8121 Fax: (03) 314 8281

ASHBURTON
Smallbone Brothers Limited
Cnr. Burnett & Cass Streets
P: (03) 308 7159 Fax: (03) 308 5551

BLENHEIM
Wadsco Motors Limited
55-59 Scott Street
P: (03) 578 5199 Fax: (03) 578 2572

CHRISTCHURCH
Blackwell Motors Limited
Cnr. Cashell/Madras Streets
P: (03) 379 5500 Fax: (03) 366 4683

DUNEDIN
Cooke Howlison Limited
484 Andersons Bay Road
P: (03) 456 0570 Fax: (03) 455 5668

DARGAVILLE
Marcel Motors Limited
34 Victoria Street
P: (09) 439 7399 Fax: (09) 439 7399

GISBORNE
Enterprise Cars (1992) Limited
323 Gladstone Street
P: (06) 867 8368 Fax: (06) 867 1280

HAMILTON
Ebbett Waikato Limited
Anglesea Street
P: (07) 838 0949 Fax: (07) 838 3380

HASTINGS
Karamu Holden
Cnr. Karamu Road & Albert Street
P: (06) 876 6700 Fax: (06) 876 6664

HAWERA
Moller Johnson Motors (Hawera) Limited
39-49 Regent Street
P: (06) 278 7166 Fax: (06) 278 5054

INVERCARGILL
GWD-Russells Limited
22 Yarrow Street
P: (03) 218 2149 Fax: (03) 218 3309

KAIKOHE
Bay Motors Limited
Wihongi Street
P: (09) 401 1860 Fax: (09) 401 0883

KAITAIA
Jim Crene Motors Limited
Melba Street
P: (09) 408 1310 Fax: (09) 408 1311

LEVIN
Horowhenua Motor Co. Limited
1-11 Exeter Street
P: (06) 368 7169 Fax: (06) 368 8536

LOWER HUTT
Brendan Foot Motors Limited
16-18 Railway Avenue
P: (04) 587 0005 Fax: (04) 566 2311

MASTERTON
Wagg & Harcombe Limited
87-93 Dixon Street
P: (06) 377 5169 Fax: (06) 378 8840

MATAMATA
Matamata Motor Group Limited
2 Arawa Street
P: (07) 888 7059 Fax: (07) 888 5709

MORRINSVILLE
Nicholson United Autos
Thames Street
P: (07) 889 7042 Fax: (07) 889 3529

NEW ZEALAND HOLDEN RETAILERS cont.

NAPIER
Karamu Holden
Cnr Wellesley Rd & Thakeray St
P: (06) 874 3033 Fax: (06) 834 1454

NELSON
Nelson Bays Holden
2 Selwyn Place
P: (03) 545 7222 Fax: (03) 545 6057

NEW PLYMOUTH
Auto City
86 Molesworth Street
P: (06) 758 0919 Fax: (06) 758 5330

OAMARU
North Otago Motor Group Limited
24-30 Severn Street
P: (03) 434 5099 Fax: (03) 434 9983

OTOROHANGA
Pat Prescott Limited
205 Maniapoto Street
P: (07) 873 7119 Fax: (07) 873 7156

PAEROA
Linn Motors Limited
10-12 Belmont Road
P: (07) 862 8715 Fax: (07) 862 8711

PAHIATUA
Jones Motors Limited
34 Main Street
P: (06) 376 7524 Fax: (06) 376 7192

PALMERSTON NORTH
Robertson Motors
200 Rangitikei Street
P: (06) 358 1062 Fax: (06) 359 0303

PARAPARAUMU
Guy Weaver's Auto Village
Main Road
P: (04) 298 8089 Fax: (04) 298 7186

PUKEKOHE
Counties Motorcourt Limited
Cnr. Edinburgh & Tobin Streets
P: (09) 238 3259 Fax: (09) 238 3298

ROTORUA
Shorland Slater Limited
Old Taupo Road
P: (07) 348 3179 Fax: (07) 347 1503

STRATFORD
Ansford Johnson Limited
369 Broadway
P: (06) 765 6119 Fax: (06) 765 7410

TAUPO
Taupo Holden
Ruapehu Street
P: (07) 378 4130 Fax: (07) 378 0357

TAUMARANUI
Turaki Motors Limited
Hakiaha Street
P: (07) 895 7009 Fax: (07) 895 8909

TAURANGA
Ebbett Tauranga
Cnr. Wharf Street & Cameron Road
P: (07) 578 2843 Fax: (07) 578 6044

TE AROHA
Summit Motor Co. Limited
Kenrick Street
P: (07) 884 8174 Fax: (07) 884 8133

TE AWAMUTU
Rosetown Motors Limited
Cnr. Churchill & Mahoe Streets
P: (07) 871 5143 Fax: (07) 871 5045

TE PUKE
Bob Batchelor Motors Limited
Jellicoe Street
P: (07) 573 9781 Fax: (07) 573 6057

THAMES
Linn Motors
429 Pollen Street
P: (07) 868 9591 Fax: (07) 868 9595

TIMARU
Hervey Motors Limited
6 Sefton Street
P: (03) 684 7179 Fax: (03) 684 7176

UPPER HUTT
Twin Lakes Motor Company
Fergusson Drive
P: (04) 528 5609 Fax: (04) 527 8390

WANGANUI
Bob Burgess Motors Limited
1 Purnell Street
P: (06) 345 5588 Fax: (06) 345 5584

WELLINGTON
Williams & Adams
72-82 Taranaki Street
P: (04) 801 6777 Fax: (04) 385 7437

WHAKATANE
Harts Limited
Commerce Street
P: (07) 308 6334 Fax: (07) 307 1536

WHANGAREI
Mark Cromie Holden
5-13 Hannah Street
P: (09) 438 3199 Fax: (09) 438 2646

CHAPTER 10

Towing

Page

10-2 Loading the car
10-3 Roof racks
10-3 Towing
10-4 Safe towing tips
10-4 Towing precautions

LOADING THE CAR

Overloading is a safety hazard and could also shorten the life of your vehicle or its parts.

Carrying capacity

The recommended carrying capacity including occupants and luggage is:

463 kg Barina 2 door model
451 kg Barina 4 door model
408 kg Barina SRi model
745 kg Combo model (provided the load is distributed towards the front axle).
If you load your vehicle other than to the above recommendations or have accessories fitted, then you should ensure that the MAXIMUM REAR AXLE LOAD and the GROSS VEHICLE MASS are not exceeded.

Curb weight

The curb weights shown below are for the weight of an unloaded vehicle with a full tank of fuel.

BARINA

1062 kg = curb weight for 2 door model, manual transmission
1147 kg = curb weight for 2 door SRi model, manual transmission
1082 kg = curb weight for 2 door model, automatic transmission
1099 kg = curb weight for 4 door model, manual transmission
1119 kg = curb weight for 4 door model, automatic transmission
Subtract 25 kg if the vehicle is not fitted with air conditioning.

COMBO

1200 kg = curb weight for 2 door model, manual transmission
1170 kg = vehicle not fitted with air conditioning.

Gross Vehicle Mass (weight)

The Gross Vehicle Mass (GVM) is the maximum that a vehicle is allowed to weigh when fully loaded. This must include any luggage, passengers, roof rack load and a full tank of fuel. The maximum, allowable weight for your vehicle is:

1525 kg = GVM for 2 door models with manual transmission
1550 kg = GVM for 4 door models with manual transmission
1545 kg = GVM for 2 door models with automatic transmission
1570 kg = GVM for 4 door models with automatic transmission
1555 kg = GVM for 2 door SRi model (manual transmission)
1945 kg = GVM for Combo model (manual transmission)
If not fitted with air conditioning, subtract 25 kg (Combo, subtract 30 kg).

Maximum rear axle load

The maximum allowable rear axle load for your vehicle is:

760 kg = Barina
1110 kg = Combo.

ROOF RACKS AND TOWING

Roof racks

For safety reasons and to avoid damaging the roof, only the roof rack approved by Holden for your car, should be used. The maximum allowable roof load is 100 kg (including the weight of the roof rack).

Roof rack loads alter the handling of a vehicle due to a change in the centre of gravity. When carrying loads on the roof rack, avoid abrupt swerving or sharp steering. The load should be evenly distributed and you should not drive faster than 120 km/h.

The weight on the roof rack must be included when working out the maximum vehicle load (GVM). The roof rack load should be treated as luggage.

Towing

BARINA

This vehicle is designed as a passenger car. It is not designed or intended to be used to tow a trailer or caravan. Towing may affect handling, durability and economy.

COMBO

Your vehicle is designed primarily as a passenger vehicle, so handling, durability and economy may be affected by towing a caravan or a trailer. Before attempting any towing, ensure that the correct equipment and any necessary modifications are fitted.

The towing capacity when trailer brakes are fitted is 1000 kg.

The towing capacity when trailer brakes are *not* fitted is 450 kg.

In higher elevations and / or mountainous terrain, you should reduce the maximum towing and loading limits.

Note: Holden towing equipment is recommended where it is available. Where it is not available, no recommendation is made as to the make of equipment which should be used. Holden does not accept liability for defects occurring in towing equipment that is not marketed by Holden or for defects arising from the use of such equipment.

Tow ball load

The tow ball load is the weight on the tow ball when the packed trailer / caravan is hitched. It must be within the following specifications:

- loaded trailer weighing up to 625 kg – at least 4% of the loaded trailer weight but not more than 10%
- loaded trailer weighing over 625 kg – at least 25 kg but not more than 10% of the loaded trailer weight.

The tow ball load can be adjusted by correctly packing the trailer / caravan load.

If the tow ball load is too light or too heavy, the steering and handling of the vehicle can be greatly impaired. However, it is desirable to aim for the maximum, rather than the minimum tow ball load.

When measuring the tow ball load, make sure that the drawbar of the loaded trailer / caravan is at the same height as it will be when it is mounted on the vehicle. This is particularly important for trailers / caravans with tandem axles.

TOWING cont.

Safe towing tips

Your vehicle will handle differently when towing. It’s a good idea to make a couple of short distance trips with the trailer / caravan before you set off on the big one.

Have your vehicle correctly maintained and serviced.

Have your trailer / caravan maintained and serviced, with particular attention given to condition of brakes, tyres, suspension, wheel bearings, towing coupling and lighting.

You should have an extended-arm mirror on both sides of your car.

Headlights may need re-aiming after the loaded caravan has been hitched, particularly if a load equalizing hitch is not used.

Use a lower gear, rather than your brakes when descending steep hills.

If your trailer / caravan moves off the road behind you, allow the left wheels of your vehicle to move off as well. When it is safe to do so, carefully steer back on to the road. A sudden attempt to steer back could make you swerve dangerously.

Towing precautions

- When towing, your tyres should be inflated to the maximum recommended pressure shown on the tyre placard.
- Loads should be secured so that they cannot slip and should be placed in the centre of the trailer / caravan if possible, i.e. above the axle.
- Trailer brakes are recommended on trailers / caravans weighing over 500 kg when loaded.
- The brakes on the trailer / caravan must be designed to cope with the braking requirements of that trailer / caravan under all towing conditions, without adversely affecting the brakes on the car.
- Make sure that you have enough room when cornering and avoid sudden manoeuvres.
- In the case of trailer / caravans with low directional stability, it is advisable to use a stabiliser to dampen any rolling motion.
- The cooling fan is driven electrically and so is not dependant on engine speed. At high engine speeds a lot of heat is produced and at low engine speeds correspondingly less heat is produced. For this reason, when driving uphill, do not shift down into a lower gear (which will increase engine speed) whenever the vehicle can still climb the hill in the higher gear.
- Whenever a towbar is removed, be certain to have any mounting holes in the underbody properly sealed to prevent the possible entry of exhaust fumes, dust and water.
- Ensure that the tow bar does not obscure the rear licence plate. If necessary, remove the towbar tongue when it is not required for towing.

CHAPTER 11

Cleaning

Page

INTERIOR CLEANING

11-2 Upholstery
11-2 Vinyl (PVC) fabrics
11-3 Cloth fabrics
11-3 Carpet
11-3 Seat belts
11-3 Interior glass

EXTERIOR CLEANING

11-4 Paint inspection
11-4 Washing
11-5 Grease, oil and tar spots
11-6 Polishing
11-6 Wheels
11-7 Exterior glass
11-8 Cleaning products

INTERIOR CLEANING

WARNING:

Many cleaners may be toxic, flammable or may damage the interior. When cleaning the interior, avoid volatile cleaners such as: acetone, lacquer thinners, enamel reducers, nail polish removers, or cleaners such as laundry soaps, bleaches or reducing agents. Never use carbon tetrachloride, gasoline or naphtha for any cleaning purpose. Be sure the vehicle is well ventilated while using any cleaners and always follow the cleaning manufacturer's recommendations.

Care and cleaning of upholstery

Dust and dirt which accumulate on upholstery should be removed every few weeks – more often with constant driving. This can be done readily with a vacuum cleaner. Before attempting to remove spots and stains, it is necessary to determine as accurately as possible:

- The type of fabric.
- The nature and age of the stain.
- The effect of the stain removal agent upon the colour, structure and general appearance of the upholstery.

It is essential that stains be removed as soon as possible after they have been made. If they are allowed to remain on the fabric for any length of time they very often become oxidised or set, and removal becomes difficult, if not impossible.

Cleaning PVC coated fabrics

Vinyl (PVC) coated fabrics are used for seating, head linings and auxiliary trimming. The grades used vary according to their function. PVC fabrics are generally made by coating fabric with synthetic resins. Care of PVC fabrics is a relatively simple but important matter. The surface should be wiped over with a dry cloth during the regular cleaning of the car.

Should dirt accumulate and become embedded in the material pattern, the following procedure is recommended.

1. Using lukewarm water and soap, or Holden Velour Fabric and Vinyl Cleaner, work up thick suds on a piece of cheesecloth, and apply to the surface. A soft bristle brush can be used to remove stubborn stains or dirt embedded in the grain of the material.
2. Repeat using only a damp cloth and no soap.
3. Wipe dry with a soft cloth. The above cleaning instructions also apply to the rubber floor mats.

INTERIOR CLEANING cont.

Cleaning cloth trim

Where the seats in your vehicle are upholstered with cloth, the following instructions should be observed.

- Most loose dirt and dust can be removed by a vacuum cleaner or soft brush.
- DO NOT use a whisk broom or a coarse hair brush.
- If normal soiling should take place it is recommended that the fabric be sponged lightly with warm water containing a detergent and a small amount of ammonia. The fabric should then be rubbed lightly, and if necessary, sponged again to remove anything stubborn. Soak up excess fluid with a dry cloth. Holden Velour Fabric and Vinyl Cleaner may be used sparingly.

Vehicles with air bags

Use only a dry cloth or mild cleaner to clean the steering wheel and instrument panel. Do not use any aggressive cleaning agents.

Cleaning carpet

Thoroughly brush or vacuum the carpet. In many instances the carpet may require no further cleaning. If the carpet is extremely soiled, thoroughly vacuum it to remove loose dirt then, using Holden Velour Fabric and Vinyl Cleaner, clean approximately 1 square foot at a time. After each area is cleaned, remove as much of the cleaner as possible with a vacuum cleaner.

Cleaning seat belts

Cleaning of seat belts can be carried out by using a mild non-abrasive soap and lukewarm water. After washing be sure to thoroughly sponge the washing solution out of the belts.

WARNING:

Do not bleach or dye seat belts since this may severely weaken them.

Cleaning interior glass

The interior glass area of the vehicle should be cleaned using Holden Glass Cleaner with a clean soft cloth. Care must be taken when cleaning inside the rear window so as not to damage the demister.

Never use abrasive cleaners on any vehicle glass, as they may cause scratches.

CARING FOR PAINT

To help preserve that shiny new vehicle finish, special attention should be given to correctly treating those conditions that can damage the paint.

Road bloom: If, over a long period of time, oils, dirt, exhaust and other pollutants are allowed to build up, they may combine to affect the paint finish.

Etching: Tree sap, bird droppings, salt water and other natural deposits can, if allowed to stay on the paint, leave an etching or scarring.

Pitting: Tar spots and some industrial fallout can react chemically and may cause pitting to the surface of the paint.

Paint inspection

Regular inspection of the vehicle should be made for scratch marks, cracks or damaged areas, all of which could develop rust. Any deep scratches, cracks or breakdown in the finish should be repaired without delay. Care should be taken to ensure that any rusting is counteracted immediately, otherwise rust “creep” will extend beyond the damaged area, particularly in tropical or coastal areas, where the moist, or salt-laden air accelerates rusting. The paint finish of the vehicle gives a very high degree of protection against the weather, but it should be realised that wear and deterioration occur when the vehicle is exposed to elements for prolonged periods. The vehicle therefore should be garaged whenever possible.

To prevent damage of the paint surface, foreign matter should always be removed as soon as possible. **Due to the acidity, it is recommended that foreign matter such as bird droppings be removed within 24 hours.**

The way the paint keeps its condition over time can be assisted by you. The easiest way to keep that paint looking bright and shiny is to keep it clean. A wash once a week will do wonders. However, it must be done correctly.

Washing your car

1. Never use an automatic wash that has anything that touches the paint other than water.
2. Wash your vehicle once a week to remove any build up of road grime that may have been deposited on your paint.
3. Find a cool, shady spot to wash it. Do not ever wash it in direct sunlight.
4. Hose the vehicle down from top to bottom with lots of cold water. This removes any grit or other loose particles and substances. Do not use a sponge or cloth yet.
5. Fill a bucket with lukewarm water and add no more than two capfuls of gentle detergent. Do not use hot water, strong soap or chemical detergents.
6. To remove bird droppings, soak with a wet sponge for several minutes before washing off. If still persistent, use a solution of 1 litre of water and 110 grams of dissolved baking soda (Bicarbonate of Soda). Flush the washed parts with clean water.
7. Starting with the roof, use a clean sponge to clean a small section at a time. Do not allow liquid to dry before rinsing off that section with clean water. When you have completed each section, rinse the whole vehicle again with cold water.
8. Dry the clean vehicle thoroughly with a good quality chamois.

CARING FOR PAINT cont.

WARNING:

Care should be taken when moving the vehicle after washing, in case water has affected the brakes. Applying the brakes lightly will indicate whether they have been affected. To dry them quickly, lightly apply the brakes while maintaining a slow forward speed with a clear area ahead, until brake performance returns to normal.

Removing stains such as grease, oil and tar spots

Just washing you vehicle regularly means that most of the harmful substances deposited on the paint will be removed before they can cause permanent damage. However, some substances are not easy to remove. So if you notice stains on the paint, make sure that you remove them at the earliest possible opportunity.

Grease and oil, and even tar if it's fresh, can be removed from the paint with a little kerosene or turpentine. As a precaution against staining, wash and polish the area as soon as possible after the stain has been removed.

A rubbing or cutting compound can be used after a normal wash. But this should never be done on a regular basis because it removes paint.

Warnings:

- Some chemical cleaners used for removing road oils and tars from painted surfaces have been found to be detrimental to automotive paint.
- If petrol is spilt on the paint when refilling, flush off immediately with clean water, as petrol has a tendency to stain or soften new paint finish during the weathering out period, particularly when the vehicle is exposed to high temperatures.
- Petrol MUST NOT be used to clean any painted or plastic surfaces.

Ventilation system intake

The intake area between the bonnet and windscreen may collect leaves, which will impair air flow into the car.

It is recommended that this area be cleared of debris whenever you wash your car.

Under vehicle washing

Your vehicle has a factory-applied PVC undercoating in the wheel arches (including longitudinal members) which provides permanent protection and needs no special maintenance. The surfaces of the vehicle underside not covered by PVC are provided with a durable protective wax coating. Once a year, preferably before the start of the cold season the wax coating and PVC coating should be checked and if necessary, restored to perfect condition. Commercial bitumen and rubber materials can damage PVC coating. Have all work on the under-body performed by a Holden Retailer, as it requires knowledge of the specified materials and experience concerning their application.

The under-body should be washed following the end of the cold weather season to remove any dirt adhering to the under-body, since this may also contain salt.

PAINT POLISHING, WHEELS AND TYRES

Polishing

Under normal circumstances the paint does not need polishing to retain its shine. A weekly wash is sufficient. However, the use of a Polymer Glaze about every 3 months will reduce the effects of road bloom by removing natural contaminants which can build up on the paint.

DO NOT ATTEMPT TO APPLY A POLISH WITHOUT FIRST WASHING TO REMOVE LOOSE GRIT, SURFACE DIRT, DUST OR GREASE ETC.

Tyres

Sponging with cold water is all that is necessary for normal cleaning. Oil and grease should be removed with soap and water or detergent. For tar or other substances, a mild abrasive, such as mechanic’s hand soap or kitchen cleaning powder, may be used if necessary. Thoroughly wash the tyres with water to finish. Petrol must not be used for cleaning tyres.

New tyre look can be restored using Holden Tyre and Bumper Shine.

Alloy wheels (if fitted)

To preserve the original appearance of alloy wheels, keep them clean and free from build up of road dirt. Holden Wheel Cleaner can be used for cleaning alloy wheels. Do not use abrasive cleaners on alloy wheels.

EXTERIOR GLASS CLEANING

Glass cleaning – general

Special care should be taken to avoid scratching the glass. If it is cleaned at the same time as the rest of the car, there is a possibility that particles of grit will cause fine scratches. Flush off any mud on the glass when washing the body, but leave the final cleaning and polishing until afterwards. Use Holden Glass Cleaner and wash each section of glass in turn, making sure that the water, its container and the sponge are quite clean and free from grit. Clean old linen cloth is better than new material for polishing glass.

Windscreen

It is important that the windscreen be kept clean so that the wiper blades may be as effective as possible. Old wiper blades can cause windscreen scratching and so should be regularly inspected and replaced.

Abrasive cleaners should never be used to clean glass as they can cause scratches, impairing night vision. After the windscreen has been cleaned with a wet sponge it should be wiped over with a soft, lint free cloth or chamois.

It is recommended that Holden Optikleen be added to the windscreen washer reservoir.

Wiper blades

Oil and road scum thrown up on the windscreen will cause smearing when the wipers are switched on, when the dirt is transferred onto the wiper blades. Many owners, whilst they methodically clean the windscreen glass, omit to clean the wiper blades and consequently smearing of the glass reappears immediately the wiper blades are used. The blades can be cleaned by lifting them off the windscreen and cleaning with Holden Optikleen and a clean cloth.

DO NOT OPERATE THE WIPER BLADES BY HAND AS THIS MAY DAMAGE THE WIPER DRIVE MECHANISM.

If the wiper blades are used to clean dust and dirt from the windscreen in dry conditions always use the washer system first to wet the windscreen. Ensure that the windscreen washer reservoir is not empty.

Should the wiper blades be frozen to the windscreen, they must be lifted off and freed by hand before switching on the wipers.

CLEANING PRODUCTS

PART NUMBER	SIZE	DESCRIPTION	USAGE
92145132	237 ml	Quick and Easy Speed Finish	Seals in a deep, lustrous glazed finish. Long life protection from oxidation, salt and weather damage.
92145418	437 ml	Quick and Easy Speed Finish	Seals in a deep, lustrous glazed finish. Long life protection from oxidation, salt and weather damage.
92145130	237 ml	All Purpose Cleaner	Cleans and deodorises velour, most vinyl upholstery, hood linings, mats and carpets, etc.
92145416	437 ml	All Purpose Cleaner	Cleans and deodorises velour, most vinyl upholstery, hood linings, mats and carpets, etc.
92145133	237 ml	Glass Cleaner	Cleans all glass surfaces.
92145419	437 ml	Glass Cleaner	Cleans all glass surfaces.
92140005	500 ml	Optikleen	Windscreen washer solvent.
92140004	5 ml	Optikleen Sachet	Windscreen washer solvent; 1 sachett per washer bottle refill.
92145129	237 ml	Hi Suds Car Wash	Cleans vehicle exterior.
92145415	437 ml	Hi Suds Car Wash	Cleans vehicle exterior.
92145131	237 ml	Vinyl and Trim Dressing	Seals and protects vinyl upholstery and plastic trim.
92145417	437 ml	Vinyl and Trim Dressing	Seals and protects vinyl upholstery and plastic trim.
92145140	120 ml	Leather Revitaliser	Revitalises the leather upholstery.
92145141	120 ml	Leather Cleaner	Cleans the leather upholstery.
92145142	120 ml	Leather Protector	Protector the leather upholstery.
92145143	1 Kit	Leather Care Kit	Contains leather revitaliser, cleaner and protector.
92145135		Chamois	Cloth for wiping off excess water from the vehicle's exterior after washing and rinsing.
92145134		Handle Grip Sponge	Sponge for washing the vehicle.
92145136		Microfibre Glass Cleaning Cloth	Cloth for cleaning all glass surfaces.
92145137		Microfibre General Purpose Cleaning / Polishing Cloth	Cloth for general purpose cleaning / polishing.

Notes

CHAPTER 12

Servicing

Page

12-2 Service intervals
12-3 Service light
12-4 Extreme operating conditions
12-6 Maintenance schedule
12-8 Service times
12-9 Service coupons

SERVICE INTERVALS

When it comes to service, remember that your Holden Retailer has the trained personnel and specialised equipment to correctly service your vehicle. Your Retailer invites you to return for all your service needs both during and after the warranty period.

The safety, economy, emission control, performance and reliability of your vehicle cannot be assured unless regular maintenance is performed, preferably by factory-trained technicians at Holden Retailers.

Therefore, it is in the owner's interest that the following services are performed at the specified Distance or Months (whichever occurs first).

1,500 km - 1 month inspection
15,000 km - 1 year
30,000 km - 2 years
45,000 km - 3 years
60,000 km - 4 years
75,000 km - 5 years
90,000 km - 6 years
105,000 km - 7 years
120,000 km - 8 years
135,000 km - 9 years
150,000 km - 10 years
165,000 km - 11 years
180,000 km - 12 years

The one month (1,500 kilometres) inspection will be performed without cost for labour by the Selling Retailer.

This service may be carried out by another Holden Retailer provided you have a letter of Introduction from the Selling Retailer.

Your Retailer will supply the necessary letter of Introduction upon request.

The services shown in this schedule between 15,000 km and 180,000 km are to be performed after 180,000 km at the same intervals.

Note: All maintenance services as listed in this Handbook and replacement of service items are the responsibility of the owner and as such are NOT considered, under the provisions of the New Vehicle Warranty to be rectification of defective material and workmanship. Items such as wheel alignment, necessary adjustments to drive belts, transmission, clutch, park brake, etc. or any other items which may require servicing due to fair wear and tear will be carried out at the owner's cost.

Damage caused by failure to have proper maintenance services carried out by an authorised Holden Retailer or authorised Service Outlet, or in accordance with Holden specifications, may void your New Vehicle Warranty. It is strongly recommended that you read the "New Vehicle Warranty" in Chapter 9 so that you are aware of your Warranty exclusions.

Service coupons are provided further on in this chapter. When each service is performed the coupon is removed so that the following service coupon is readily visible to remind you when the next service is due.

After the service is completed, the owner should check that the service has been validated, by the Retailer stamping and signing the coupon stub. This is important as it will not only assist in the determination of Warranty Claims, but will enhance the value of the vehicle when selling.

SERVICE LIGHT

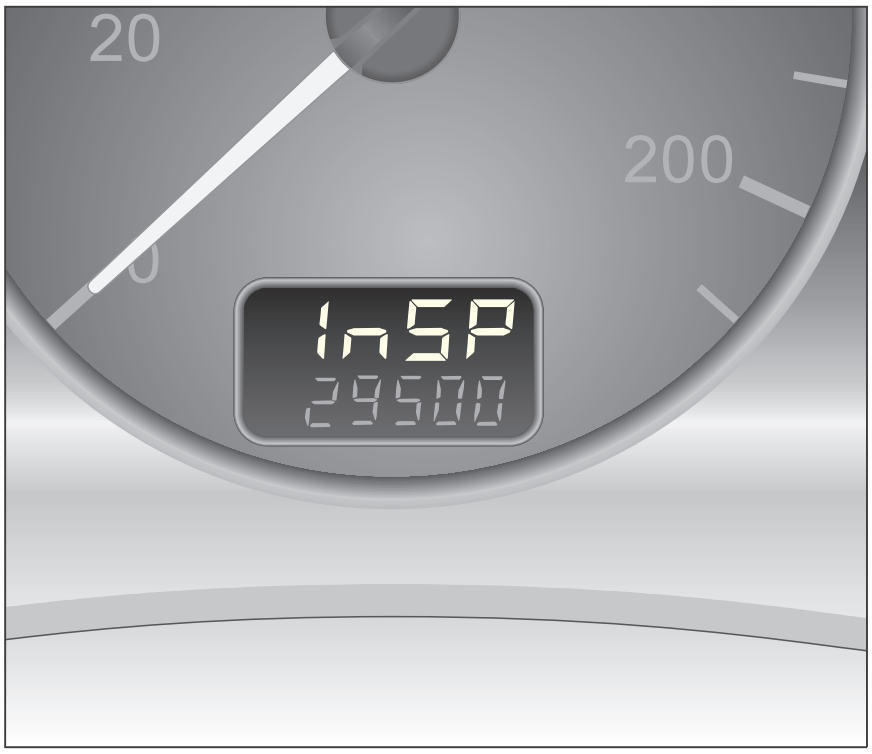

A small window in the speedometer is used for the odometer, tripmeter and the service reminder.

The service reminder displays 'InSP' (inspection required) for a few seconds when the ignition is turned to ON if the vehicle is within 500 km or one week of the next service.

Note: The service reminder light is not designed to show for the first 1,500 km / 1 month service. It is designed to display after every 15,000 km or 1 year.

When the vehicle is taken in for service, your Retailer will reset the reminder.

The service reminder can be reset by the driver as follows:

- Turn the ignition to OFF.
- Depress and hold the reset button while turning on the ignition.
- Keep the reset button held down until the flashing 'InSP' display changes to ' - - - - ' (approximately 2 more seconds).
- Release the reset button.
- The odometer and tripmeter reappear.

EXTREME OPERATING CONDITIONS

If your vehicle operates under any of the extreme conditions listed in the following table it is recommended that some items be serviced more frequently than the intervals specified in the Maintenance Plan.

Note: The extra services listed below need only be used if your vehicle operates continuously under the conditions specified.

If you operate under any of these conditions on a one off basis e.g. holiday trip, then an extra service should be for that period only.

As a guide, if you operate continually for a period of one month or 1,000 km under any of the extreme conditions, then Holden recommends additional services.

If at any time it is considered that the following items or other items should be more frequently serviced due to the type of operation or before a long trip, discuss the situation with the service manager of your Holden Retailer.

Change automatic transmission fluid @ 60,000 km or 4 years (whichever comes first)	A	B	C
Replace engine oil and filter @ 5,000 km or 3 months (whichever comes first)	A		
Air cleaner element - replace @ 30,000 km or 2 years (whichever comes first)			C
Pollen filter - replace @ 15,000 km or 1 year (whichever comes first)			C
Fuel filter - replace @ 30,000 km or 2 years (whichever comes first)			C

A = Stop-start driving, excessive idling or low speed operation as experienced in inner city driving e.g. taxi, police, door to door delivery.

B = Caravan or trailer towing.

C = Extended heavy load high speed operation in temperatures above 35ºC.

EXTREME OPERATING CONDITIONS

SPECIAL SERVICE FOR EXTREME
OPERATING CONDITIONS
Date .... km ....
Items performed: ....
....
....
....
Servicing
Retailer ....

SPECIAL SERVICE FOR EXTREME
OPERATING CONDITIONS
Date .... km ....
Items performed: ....
....
....
....
Servicing
Retailer ....

SPECIAL SERVICE FOR EXTREME
OPERATING CONDITIONS
Date .... km ....
Items performed: ....
....
....
....
Servicing
Retailer ....

SPECIAL SERVICE FOR EXTREME
OPERATING CONDITIONS
Date .... km ....
Items performed: ....
....
....
....
Servicing
Retailer ....

SPECIAL SERVICE FOR EXTREME
OPERATING CONDITIONS
Date .... km ....
Items performed: ....
....
....
....
Servicing
Retailer ....

SPECIAL SERVICE FOR EXTREME
OPERATING CONDITIONS
Date .... km ....
Items performed: ....
....
....
....
Servicing
Retailer ....

MAINTENANCE SCHEDULE

Use odometer reading or years, whichever occurs first														
	x 1,000 km	1.5	15	30	45	60	75	90	105	120	135	150	165	180
	or years	1/12	1	2	3	4	5	6	7	8	9	10	11	12
SERVICE ITEMS														
COOLANT - check level, check coolant %		1/12	1	2	3	4		6	7	8	9		11	12
COOLANT - replace							5					10		
DRIVE BELTS - check			1	2	3	4	5	6	7	8	9	10	11	12
BARINA: ENGINE TOOTHED BELT and TENSIONER ASSEMBLY- replace						4				8				12
COMBO: ENGINE TOOTHED BELT and TENSIONER ASSEMBLY- replace										8				
BARINA: IDLER PULLEYS - inspect						4								12
IDLER PULLEYS - replace										8				
AIR CLEANER paper element - replace						4				8				12
SPARK PLUGS - replace						4				8				12
FUEL FILTER - replace				2		4		6		8		10		12
ENGINE OIL AND FILTER - replace			1	2	3	4	5	6	7	8	9	10	11	12
AUTO TRANS - check fluid level				2		4		6		8		10		12
AUTO TRANS - fluid change				Fluid not changed for life of car, unless operating in extreme conditions.										
LEAKAGE - visual check of engine and transmission		1/12	1	2	3	4	5	6	7	8	9	10	11	12
LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check		1/12	1	2	3	4	5	6	7	8	9	10	11	12
WINDSCREEN WIPE/WASH system check fluid level and blade condition		1/12	1	2	3	4	5	6	7	8	9	10	11	12
DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate			1	2	3	4	5	6	7	8	9	10	11	12

MAINTENANCE SCHEDULE cont.

Use odometer reading or years, whichever occurs first	x 1,000 km	1.5	15	30	45	60	75	90	105	120	135	150	165	180
	or years	1/12	1	2	3	4	5	6	7	8	9	10	11	12

SERVICE ITEMS

HEADLIGHT ADJUSTMENT - check		1	2	3	4	5	6	7	8	9	10	11	12
BODY/UNDERBODY - check corrosion protection	1/12	1	2	3	4	5	6	7	8	9	10	11	12
BRAKES - check pad thickness		1	2	3	4	5	6	7	8	9	10	11	12
BRAKES, PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check	1/12	1	2	3	4	5	6	7	8	9	10	11	12
RUBBER BOOTS - check	1/12	1	2	3	4	5	6	7	8	9	10	11	12
WHEELS - check wheel nut torque, tyre condition and tyre pressure	1/12	1	2	3	4	5	6	7	8	9	10	11	12
BRAKE AND CLUTCH FLUID - change			Change every 2 years (regardless of km)										
BRAKE FLUID LEVEL - check		1	2	3	4	5	6	7	8	9	10	11	12
POLLEN FILTER (if fitted) - replace			2		4		6		8		10		12
REMOTE CONTROL BATTERY - replace			2		4		6		8		10		12
ROAD TEST and reset service due light	1/12	1	2	3	4	5	6	7	8	9	10	11	12

SERVICE LABOUR TIMES

BARINA	-	1.1	1.6	1.5	3.2	1.8	1.6	1.5	3.2	1.5	1.9	1.5	3.2
COMBO	-	1.1	1.6	1.5	1.6	1.8	1.6	1.5	3.2	1.5	1.9	1.5	1.6

SERVICE TIMES

The owner will be charged for all lubricants and materials used plus labour at the times recommended on the coupon.

The repair or replacement of any part found faulty during a service check and not covered by Holden Warranty will be added to the charges.

Where any deficiencies are noted, such items should be reported to the owner / operator so that the extra work required can be authorised.

The use of break-in oil, tune up compounds, friction reducing compounds and other supplemental additives are not recommended; their use will not only increase operating costs, but may indeed be harmful to your vehicle.

1,500km or 1 month INSPECTION

Holden invites the new owner of this car to return to the selling Dealer for a free service inspection at 1,500 km.

Owner's Name
Mr.
Mrs. ....
Miss.
Other............

Address ....
Town ....
State .... Postcode ....
Reg. no. .... Engine no ....
I.S.O.V.I.N. .... Model ....
Odometer reading .... Date of Acquisition ....
Selling Dealer's Stamp & Signature ....

This car has been thoroughly checked in accordance with the items on the reverse side of this voucher.

This inspection is provided free of charge.

Servicing Dealer's Stamp & Signature

Servicing Dealer ....
Town .... State ....

Owner's signature ....

1,500 km or 1 month Inspection Validation

This car has been thoroughly checked in accordance with the 1,500 km/one month inspection.

Retailer..
Service Manager's signature..
Date.............................. Odometer reading..

☐ COOLANT - check fluid level, check coolant %

☐ ENGINE OIL - check level

☐ WASHER - check fluid level

☐ BRAKE AND CLUTCH FLUID - check fluid level

☐ LEAKAGE - visual check of engine and trans

☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check

☐ BODY/UNDERBODY - check corrosion protection

☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check

☐ RUBBER BOOTS - check

☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure

☐ ROAD TEST

15,000 km or 1 year Service Validation

Servicing Retailer ....
Brake fluid changed: YES/NO
Date of Service ....
Odometer.................................
Signed ....

Additional services performed: ....
....
....
....
....

15,000 km or 1 year

SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 1.1 hours

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....
....
....

Signature ....

Date ....

☐ COOLANT - replace coolant

☐ DRIVE BELTS - check

☐ ENGINE OIL AND FILTER - replace

☐ LEAKAGE - visual check of engine and trans.

☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check

☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition

☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate

☐ HEADLIGHT ADJUSTMENT - check

☐ BODY/UNDERBODY - check corrosion protection

☐ BRAKES - check pad thickness

☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check

☐ RUBBER BOOTS - check

☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure

☐ BRAKE FLUID LEVEL - check

☐ ROAD TEST AND RESET SERVICE DUE LIGHT

30,000 km or 2 year Service Validation

Servicing Retailer ....

Brake fluid changed: YES/NO

Date of Service ....

Odometer ....

Signed ....

Additional services performed: ....

....

....

....

....

30,000 km or 2 years

SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 1.6 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....

....

....

Signature ....

Date ....

☐ COOLANT - check level, check coolant %

☐ POLLEN FILTER (if fitted) - replace

☐ DRIVE BELTS - check

☐ FUEL FILTER - replace

☐ ENGINE OIL AND FILTER - replace

☐ AUTO TRANS - check fluid level.

☐ LEAKAGE - visual check of engine and trans

☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check

☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition

☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate

☐ HEADLIGHT ADJUSTMENT - check

☐ BODY/UNDERBODY - check corrosion protection

☐ BRAKES - check pad thickness

☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check

☐ RUBBER BOOTS - check

☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure

☐ BRAKE FLUID LEVEL - check

☐ REMOTE CONTROL BATTERY - replace

☐ ROAD TEST AND RESET SERVICE DUE LIGHT

☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

45,000 km or 3 years Service Validation

Servicing Retailer ....
Brake fluid changed: YES/NO
Date of Service ....
Odometer ....
Signed ....

Additional services performed: ....
....
....
....
....

45,000 km or 3 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 1.5 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....
....
....

Signature ....

Date ....

☐ COOLANT - check level, check coolant %

☐ DRIVE BELTS - check

☐ ENGINE OIL AND FILTER - replace

☐ LEAKAGE - visual check of engine and trans

☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check

☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition

☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate

☐ HEADLIGHT ADJUSTMENT - check

☐ BODY/UNDERBODY - check corrosion protection

☐ BRAKES - check pad thickness

☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check

☐ RUBBER BOOTS - check

☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure

☐ BRAKE FLUID LEVEL - check

☐ ROAD TEST AND RESET SERVICE DUE LIGHT

☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

60,000 km or 4 years Service Validation

Servicing Retailer ....
Brake fluid changed: YES/NO
Date of Service ....
Odometer ....
Signed ....

Additional services performed: ....
....
....
....
....

60,000 km or 4 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- BARINA: 3.2 hours labour
- COMBO: 1.6 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....
....
....

Signature ....

Date ....

- ☐ COOLANT - check level, check coolant %
- ☐ POLLEN FILTER (if fitted) - replace
- ☐ DRIVE BELTS - check
- ☐ BARINA: ENGINE TOOTHED BELT and TENSIONER ASSEMBLY - replace; IDLER PULLEYS inspect
- ☐ AIR CLEANER paper element - replace
- ☐ SPARK PLUGS - replace
- ☐ FUEL FILTER - replace
- ☐ ENGINE OIL AND FILTER - replace
- ☐ AUTO TRANS - check fluid level.
- ☐ LEAKAGE - visual check of engine and trans
- ☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check
- ☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition
- ☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate
- ☐ HEADLIGHT ADJUSTMENT - check
- ☐ BODY/UNDERBODY - check corrosion protection
- ☐ BRAKES - check pad thickness
- ☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check
- ☐ RUBBER BOOTS - check
- ☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure
- ☐ REMOTE CONTROL BATTERY - replace
- ☐ BRAKE FLUID LEVEL - check
- ☐ ROAD TEST AND RESET SERVICE DUE LIGHT

- ☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

75,000 km or
5 years
Service
Validation

Servicing Retailer ....
Brake fluid changed: YES/NO
Date of Service ....
Odometer ....
Signed ....

Additional services performed: ....
....
....
....
....

75,000 km or 5 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 1.8 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....
....
....

Signature ....

Date ....

- ☐ COOLANT - replace
- ☐ DRIVE BELTS - check
- ☐ ENGINE OIL AND FILTER - replace
- ☐ LEAKAGE - visual check of engine and trans
- ☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check
- ☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition
- ☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate
- ☐ HEADLIGHT ADJUSTMENT - check
- ☐ BODY/UNDERBODY - check corrosion protection
- ☐ BRAKES - check pad thickness
- ☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check
- ☐ RUBBER BOOTS - check
- ☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure
- ☐ BRAKE FLUID LEVEL - check
- ☐ ROAD TEST AND RESET SERVICE DUE LIGHT

- ☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

90,000 km or
6 years
Service
Validation

Servicing Retailer ....
Brake fluid changed: YES/NO
Date of Service ....
Odometer...............................
Signed ....

Additional services performed: ....
....
....
....
....

90,000 km or 6 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 1.6 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....
....
....

Signature ....

Date ....

- ☐ COOLANT - check level, check coolant %
- ☐ POLLEN FILTER (if fitted) - replace
- ☐ DRIVE BELTS - check
- ☐ FUEL FILTER - replace
- ☐ ENGINE OIL AND FILTER - replace
- ☐ AUTO TRANS - check fluid level.
- ☐ LEAKAGE - visual check of engine and trans
- ☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check
- ☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition
- ☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate
- ☐ HEADLIGHT ADJUSTMENT - check
- ☐ BODY/UNDERBODY - check corrosion protection
- ☐ BRAKES - check pad thickness
- ☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check
- ☐ RUBBER BOOTS - check
- ☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure
- ☐ BRAKE FLUID LEVEL - check
- ☐ REMOTE CONTROL BATTERY - replace
- ☐ ROAD TEST AND RESET SERVICE DUE LIGHT

- ☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

105,000 km or 7 years Service Validation

Servicing Retailer ....

Brake fluid changed: YES/NO

Date of Service ....

Odometer...............................

Signed ....

Additional services performed: ....

....

....

....

....

105,000 km or 7 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 1.5 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....

....

....

Signature ....

Date ....

- ☐ COOLANT - check level, check coolant %
- ☐ DRIVE BELTS - check
- ☐ ENGINE OIL AND FILTER - replace
- ☐ LEAKAGE - visual check of engine and trans
- ☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check
- ☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition
- ☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate
- ☐ HEADLIGHT ADJUSTMENT - check
- ☐ BODY/UNDERBODY - check corrosion protection
- ☐ BRAKES - check pad thickness
- ☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check
- ☐ RUBBER BOOTS - check
- ☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure
- ☐ BRAKE FLUID LEVEL - check
- ☐ ROAD TEST AND RESET SERVICE DUE LIGHT

- ☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

120,000 km or
8 years
Service
Validation

Servicing Retailer ....
Brake fluid changed: YES/NO
Date of Service ....
Odometer.....................................
Signed ....

Additional services performed: ....
....
....
....
....

120,000 km or 8 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 3.2 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....
....
....

Signature ....

Date ....

☐ COOLANT - check level, check coolant %

☐ POLLEN FILTER (if fitted) - replace

☐ DRIVE BELTS - check

☐ ENGINE TOOTHED BELT, TENSIONER ASSEMBLY AND IDLER PULLEYS- replace

☐ AIR CLEANER paper element - replace

☐ SPARK PLUGS - replace

☐ FUEL FILTER - replace

☐ ENGINE OIL AND FILTER - replace

☐ AUTO TRANS - check fluid level.

☐ LEAKAGE - visual check of engine and trans

☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check

☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition

☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate

☐ HEADLIGHT ADJUSTMENT - check

☐ BODY/UNDERBODY - check corrosion protection

☐ BRAKES - check pad thickness

☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check

☐ RUBBER BOOTS - check

☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure

☐ BRAKE FLUID LEVEL - check

☐ REMOTE CONTROL BATTERY - replace

☐ ROAD TEST AND RESET SERVICE DUE LIGHT

☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

135,000 km or 9 years Service Validation

Servicing Retailer ....
Brake fluid changed: YES/NO
Date of Service ....
Odometer ....
Signed ....

Additional services performed: ....
....
....
....
....

135,000 km or 9 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 1.5 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....
....
....

Signature ....

Date ....

☐ COOLANT - check level, check coolant %

☐ DRIVE BELTS - check

☐ ENGINE OIL AND FILTER - replace

☐ LEAKAGE - visual check of engine and trans

☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check

☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition

☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate

☐ HEADLIGHT ADJUSTMENT - check

☐ BODY/UNDERBODY - check corrosion protection

☐ BRAKES - check pad thickness

☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check

☐ RUBBER BOOTS - check

☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure

☐ BRAKE FLUID LEVEL - check

☐ ROAD TEST AND RESET SERVICE DUE LIGHT

☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

150,000 km or 10 years Service Validation

Servicing Retailer ....
Brake fluid changed: YES/NO
Date of Service ....
Odometer..................................
Signed ....

Additional services performed: ....
....
....
....
....

150,000 km or 10 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 1.9 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....
....
....

Signature ....

Date ....

- ☐ COOLANT - replace
- ☐ POLLEN FILTER (if fitted) - replace
- ☐ DRIVE BELTS - check
- ☐ FUEL FILTER - replace
- ☐ ENGINE OIL AND FILTER - replace
- ☐ AUTO TRANS - check fluid level.
- ☐ LEAKAGE - visual check of engine and trans
- ☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check
- ☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition
- ☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate
- ☐ HEADLIGHT ADJUSTMENT - check
- ☐ BODY/UNDERBODY - check corrosion protection
- ☐ BRAKES - check pad thickness
- ☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check
- ☐ RUBBER BOOTS - check
- ☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure
- ☐ BRAKE FLUID LEVEL - check
- ☐ REMOTE CONTROL BATTERY - replace
- ☐ ROAD TEST AND RESET SERVICE DUE LIGHT

- ☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

165,000 km or 11 years Service Validation

Servicing Retailer ....
Brake fluid changed: YES/NO
Date of Service ....
Odometer...............................
Signed ....

Additional services performed: ....
....
....
....
....

165,000 km or 11 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- 1.5 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....
....
....

Signature ....

Date ....

- ☐ COOLANT - check level, check coolant %
- ☐ DRIVE BELTS - check
- ☐ ENGINE OIL AND FILTER - replace
- ☐ LEAKAGE - visual check of engine and trans
- ☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check
- ☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition
- ☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate
- ☐ HEADLIGHT ADJUSTMENT - check
- ☐ BODY/UNDERBODY - check corrosion protection
- ☐ BRAKES - check pad thickness
- ☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check
- ☐ RUBBER BOOTS - check
- ☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure
- ☐ BRAKE FLUID LEVEL - check
- ☐ ROAD TEST AND RESET SERVICE DUE LIGHT

- ☐ BRAKE AND CLUTCH FLUID - Change every 2 years (regardless of km)

180,000 km or 12 years Service Validation

Servicing Retailer ....

Brake fluid changed: YES/NO

Date of Service ....

Odometer.................................

Signed ....

Additional services performed: ....

....

....

....

....

180,000 km or 12 years SERVICE COUPON

I authorise performance of the services specified on the rear of this coupon.

I understand I will be charged for the following hours of labour:

- BARINA: 3.2 hours labour
- COMBO: 1.6 hours labour
- add 0.2 hours if brake/clutch fluid changed

Also, that there will be a charge for all lubricants, filters and parts used as a result of checks and additional services performed as requested.

There will also be a charge for additional services as requested:

....

....

....

Signature ....

Date ....

☐ COOLANT - check level, check coolant %

☐ POLLEN FILTER (if fitted) - replace

☐ DRIVE BELTS - check

☐ BARINA: ENGINE TOOTHED BELT and TENSIONER ASSEMBLY - replace; IDLER PULLEYS - inspect

☐ AIR CLEANER paper element - replace

☐ SPARK PLUGS - replace

☐ FUEL FILTER - replace

☐ ENGINE OIL AND FILTER - replace

☐ AUTO TRANS - check fluid level.

☐ LEAKAGE - visual check of engine and trans

☐ LIGHTS, MONITORING, SIGNAL EQUIPMENT AND PARK BRAKE ADJUSTMENT - check

☐ WINDSCREEN WIPE/WASH system - check fluid level and blade condition

☐ DOOR HINGES, DOOR STOP, BONNET LOCK, TAILGATE HINGES - lubricate

☐ HEADLIGHT ADJUSTMENT - check

☐ BODY/UNDERBODY - check corrosion protection

☐ BRAKES - check pad thickness

☐ BRAKE PIPES, BRAKE PRESSURE HOSES, FUEL LINES, EXHAUST AND SUSPENSION - visual check

☐ RUBBER BOOTS - check

☐ WHEELS - check wheel nut torque, tyre condition and tyre pressure

☐ BRAKE FLUID LEVEL - check

☐ REMOTE CONTROL BATTERY - replace

☐ ROAD TEST AND RESET SERVICE DUE LIGHT

☐ BRAKE AND CLUTCH FLUID - change every 2 years (regardless of km)

INDEX

ABS brakes 4-9
Accidents 6-2
Air bags 6-16
Air conditioning 1-16
Air pressures (tyres) 7-7
Alternator (battery) warning light . 1-6
Anchorage points 3-13
Antifreeze fluid 7-4
Appearance care 11-1
Ashtray 1-18
Audible warnings 1-21
Audio system 1-12
Automatic re-locking 2-5
Automatic transmission
  Fault mode 4-8
  Fluid level 7-5
  Fluid capacity / type 8-6
  Operation 4-6
  Sports / economy drive 4-6
  Starting-off aid 4-7

Battery
  Fluid level 7-6
  When flat 6-12
  Specifications 8-6
Bonnet release 1-20
Boiling 6-10
Brakes
  ABS 4-9
  Fluid level 7-5
  Park brake 3-14
  Precautions 4-9
  Warning light 1-6
Bulbs (replacement) 6-16

Capacities (fluid) 8-3
Carbon monoxide caution 5-2
Carpet cleaning 11-3
CD player 1-12
Central locking 2-2
Certificate 9-2
Change of name / address .... page 3
Check engine light 1-6
Child safety door locks 2-2
Child restraints 3-12
Cigarette lighter 1-18
Cleaning of vehicle 11-1
Clock 1-19
Cloth fabric cleaning 11-3
Coin holder 3-17
Cooling system
  Fluid level 7-4
  Overheating 6-10
  Temperature gauge 1-5
Courtesy light 1-9
Cruise control 1-22
Curb weight 10-2
Customer assistance 9-10

Dashboard layout 1-2
Date 1-19
Deadlocking 2-4
Dealers (Authorised Holden) 9-12
Demister 1-17
Detergents (cleaning) 11-8
Dimensions 8-2
Dimmer (instrument lighting) 1-5
Dipping (headlights) 1-9
Dipstick 7-3
Dome light
  Bulb replacement 6-25
  Operation 3-14
Door locks 2-2
Driving precautions 4-9

INDEX cont.

Electric door locks 2-4
  Emergency procedure 2-10
Electronic ignition caution 7-2
Emergencies 6-2
Emission control system 5-5
Engine
  Coolant level 7-4
  Cooling system 7-4
  Identification number 8-7
  Oil capacity / type 8-3
  Oil level 7-3
  Overheating 6-10
  Specifications 8-3
  Starting 4-2
  Temperature gauge 1-5
  Warning light 1-6
Engine oil
  Capacity 8-3
  Checking levels 7-3
  Pressure light 1-7
Exhaust gas warning 5-2
Exterior cleaning 11-4
Exterior lights 1-9
Extreme operating conditions ... 12-4

First aid 6-3
Flashers
  Hazard warning 1-11
  Turn signal 1-11
Flat battery 6-12
Flat tyre 6-4
Floor tray 3-17
Fluid capacities 8-3
Fluid levels
  Automatic transmission 7-5
  Battery 7-6
  Brake 7-5
  Coolant 7-4
  Oil 7-3
  Windscreen washer 7-6
Folding seats 3-5
Fog lights 1-10
Front seat adjustment 3-2
Fuel
  Gauge 1-5
  Economy 5-6
  Refuelling 5-3
  Warning light (low fuel) 1-6
Fumes caution 5-2
Fuses 6-26

Gauges 1-4
Gearbox 4-4
General safety 4-3
Generator (battery) warning light 1-6
Glasses holder 3-16
Globe replacement 6-16
Glovebox 3-16
Grease spots (cleaning) 11-5

Hand brake 3-14
Hazard warning flashers 1-11
Head restraint 3-3
Heater controls 1-13
Heated rear window 1-17
Headlamps
  Bulb replacement 6-17
  Switch 1-9
Height adjust seat belts 3-10
High beam indicator light 1-7
Holden Dealers 9-12
Holden Customer Assistance 9-10
Holden Retailers 9-12
Hood 1-20
Horn 1-3

INDEX cont.

Identification numbers 8-7
Ignition switch 1-21
Indicators (turn signals) 1-11
Indicator / warning lights 1-6
Infant and child restraints 3-12
Inflation (tyres) 7-7
Information display 1-19
Instrument panel 1-4
Interior cleaning 11-2
Interior (courtesy) light 3-14

Jack 6-7
Jump starting 6-12

Kerb weight 10-2
Keys 2-2

Labels 8-7
Lights
  Bulb replacement 6-16
  Front reading lights 3-14
  Instrument panel 1-5
  Headlight switch 1-9
  Interior light 3-14
  Luggage compartment light ... 3-20
  Rear reading light 3-15
Loading information 10-2
Locks
  Bonnet 1-20
  Door 2-2
  Fuel filler 5-3
  Ignition switch 1-21
  Tailgate lock 2-8
Low fuel light 1-6
Lubricants 8-3
Luggage compartment
  enlargement 3-6
  light 3-15

Maintenance schedule 12-6
Manual transmission
  Fluid capacity 8-6
  Operation 4-4
Medical assistance 6-3
Mirrors 3-20
Model identifications 8-2

New vehicle running-in 4-2
New vehicle warranty 9-2
New Zealand Customer Assist 9-11
New Zealand Retailers 9-26

Octane rating (petrol) 5-4
Odometer 1-4
Oil
  Capacity 8-3
  Level 7-3
  Low pressure warning 1-7
Outlets, air 1-13
Outside temperature 1-19
Overheating
  Procedure 6-10
  Temperature warning 1-5
Owner responsibility
  Emission controls 5-5
  Weekly checks 7-1
  Maintenance service 12-1

Paintwork cleaning 11-4
Park brake lever 3-14
Parking 4-3
Parts and accessories warranty 9-4
Petrol filling 5-3
Pen holder 3-16
Plates 8-8
Polishing 11-6
Power locking 2-4
Power steering precaution 4-10
Push starting caution 6-12

INDEX cont.

Radiator – see Cooling system
Radio 1-12
Reading lights
  Front 3-14
  Rear 3-15
Rear axle load 10-2
Rear door lock 2-9
Rear seat adjustment 3-5
Rear window demister 1-17
Rear window wipe / wash 1-8
Rear vision mirrors 3-20
Reducing fuel consumption 5-6
Refuelling 5-3
Reminder lights 1-6
Remote audio controls 1-12
Remote control 2-6
Remote power door locks 2-4
Restraints
  Child 3-12
  Head 3-3
Retailers (Authorised Holden) . 9-12
Roadside assistance 9-8
Roof racks 10-3
Running-in 4-2

Safe towing 10-4
Safer driving 4-9
Safety belts 3-9
Safety 4-3
Seat adjustment
  Front 3-2
  Rear 3-5
Seat belts
  cleaning 11-3
  general information 3-9
  height adjustment 3-10
Seat folding
  Front 3-5
  Rear 3-5
Serial number 8-8
Service 12-1
Service coupons 12-9
Service light 12-3
Service times 12-8
Servicing intervals 12-2
Snow chains 4-11
Spare wheel 6-4
Specifications 8-1
Speedometer 1-4
Sports / economy drive 4-6
Starting
  Flat battery 6-12
  Normal engine 4-2
Starting-off aid 4-7
Steering, tilt 1-3
Stereo, radio / CD player 1-12
Stop / tail light replacement 6-20
Storage, jack and spare wheel .. 6-4
Sun-glasses holder 3-16

Tachometer 1-4
Tailgate 2-8
Tank capacity 5-4
Temperature gauge 1-5
Temperature (outside) 1-19
Tilt steering 1-3
Time 1-19
Towing 10-3
Towing precautions 10-4
Towing your car 6-8
Traction control 4-10
Transmission
  Automatic 4-6
  Manual 4-4
  Specifications 8-6
Transporting objects 3-8
Tray, floor 3-17
Tripmeter 1-4

INDEX cont.

Turn signal
  Bulb replacement 6-19
  Operation 1-11
Tyres
  Flat tyre 6-4
  Inflation pressure 7-7
  Placard location 8-9
  Rotation 7-8
  Snow chains 4-11

Upholstery cleaning 11-2

Vehicle Identification Number 8-7
Vehicle loading 10-2
Vehicle weights 10-2
Ventilation system 1-13

Warning lights 1-6
Warranty certificate 9-2
Warranty questions and answers 9-5
Washer fluid 7-6
Washing 11-4
Weekly checks 7-1
Wheel
  changing 6-5
  cleaning 11-6
  replacement 7-8
Windows 3-18
Windscreen
  Wiper / washer control lever 1-8
  Fluid level 7-6
Wiper blades 11-7